

MyPBX

Enterprise User Manual

Version 10.16.0.85

Yeastar Technology Co., Ltd.

Contents

1. Introduction.....	5
1.1 Features	5
1.2 Hardware Specifications.....	6
1.2.1 Exterior Appearance	6
2. System set up.....	7
2.1 Connection Drawing	7
2.2 Connecting Ethernet Line	7
2.3 Supplying Power	7
3. Managing MyPBX.....	9
3.1 Administrator Login.....	9
3.2 Status Monitor.....	10
3.2.1 Line Status.....	10
3.3 Basic	11
3.3.1 Extension.....	11
3.3.2 Trunk.....	20
3.3.3 Outbound Routes	36
3.3.4 Phone Provisioning	39
3.4 Inbound Call Control	47
3.4.1 IVR	47
3.4.2 Queues	50
3.4.3 Custom Prompts	53
3.4.4 Ring Groups	54
3.4.5 Inbound Routes	56
3.4.6 Blacklist	61
3.5 Internal Settings.....	63
3.5.1 Options.....	63
3.5.2 Business Hours.....	65
3.5.3 Feature Codes	66
3.5.4 SIP Settings	69
3.5.5 IAX Settings	74
3.5.6 Voicemail Settings.....	76
3.5.7 SMS Settings.....	78
3.5.8 DISA	81
3.5.9 Conferencing	82
3.5.10 Paging Groups	83
3.5.11 DNIS Settings	85
3.5.12 PIN User Settings	85
3.5.13 Callback Settings.....	86
3.5.14 Speed Dial Settings	88
3.5.15 Music on Hold Prompts.....	89

s3.6 Network Settings.....	89
3.6.1 LAN Settings.....	89
3.6.2 WAN Settings	91
3.6.3 Static Route	92
3.6.4 Firewall.....	93
3.6.5 DHCP Server	97
3.6.6 VLAN Settings.....	97
3.6.7 VPN Settings	99
3.6.8 DDNS Settings.....	100
3.7 System Settings	101
3.7.1 External Storage.....	101
3.7.2 Password Settings	101
3.7.3 System Prompts.....	102
3.7.4 Date and Time.....	103
3.7.5 Backup and Restore.....	104
3.7.6 Reset and Reboot	104
3.7.7 Firmware Update.....	105
3.7.8 Hot Standby	106
3.7.9 Storage Management.....	108
3.8 Reports	109
3.8.1 Call Logs.....	109
3.8.2 System Logs.....	110
3.8.3 System Info	110
4. Access MRI	112
5. Use MyPBX	116
5.1 Make outbound call	116
5.1.1 Sample Routing via PSTN Trunk	117
5.1.2 Sample Routing via VoIP Trunk	118
5.2 Incoming call.....	119
5.2.1 Sample Routing to an IVR	119
APPENDIX A FAQ.....	122
APPENDIX B How to Configure Autobackup.....	124
APPENDIX C How to Configure NAT setting	126
APPENDIX D How to Use Auto Provision	128
APPENDIX E How Do I Configure Distinctive Ring Tones.....	131
APPENDIX F How to Use Email to SMS	133
APPENDIX G How to Use DID.....	135
APPENDIX H How to Use BLF Key to Choose the PSTN line.....	139
APPENDIX I How to Configure Hot Standby.....	140

APPENDIX J How to Enable Auto Recording.....	141
J.1 Login	142
J.2 Recording Settings	142
J.3 Recording Logs	143
J.4 Share setting	144
J.5 Password Setting.....	146
APPENDIX K How To Install Hard Disk	147

1. Introduction

MyPBX Enterprise—IP-PBX for Medium Businesses

MyPBX Enterprise is a standalone embedded hybrid PBX for medium businesses and remote branch offices of larger organizations (1-300 users per site). MyPBX also offers a hybrid solution (a combination of VoIP applications using legacy telecom equipment) alternative for enterprises who are not yet ready to migrate to a complete VoIP solution.

Applications

1.1 Features

• Auto-provision	• Firewalls
• Blind Transfer	• Follow me
• BLF Support	• Interactive Voice Response (IVR)
• Blacklist	• Intercom / Zone Intercom
• Call Detail Records(CDR)	• Music On Hold
• Call Forward	• Music On Transfer
• Call Parking	• Paging / Zone Paging
• Call Recording	• PIN Users
• Call Pickup	• Queue
• Call Routing	• QOS
• Call Transfer	• Ring Group
• Call Waiting	• Route by Caller ID
• Caller ID	• Skype Integration (Skype Connect)
• Call Back	• Three-way Calling
• Conference	• Mobility Extension
• SMS to Mail	• External Storage
• Mail to SMS	• DDNS
• Speed Dial	• OpenVPN
• Define Office Time	• T.38
• Direct Inward System Access(DISA)	• Voicemail
• DIDs	• VLAN
• Distinctive Ringtone	• WAN
• Do Not Disturb(DND)	• PPPoE
• Auto Recording	• Multi-Language
• Optional Hard disk	

1.2 Hardware Specifications

1.2.1 Exterior Appearance

Front Side

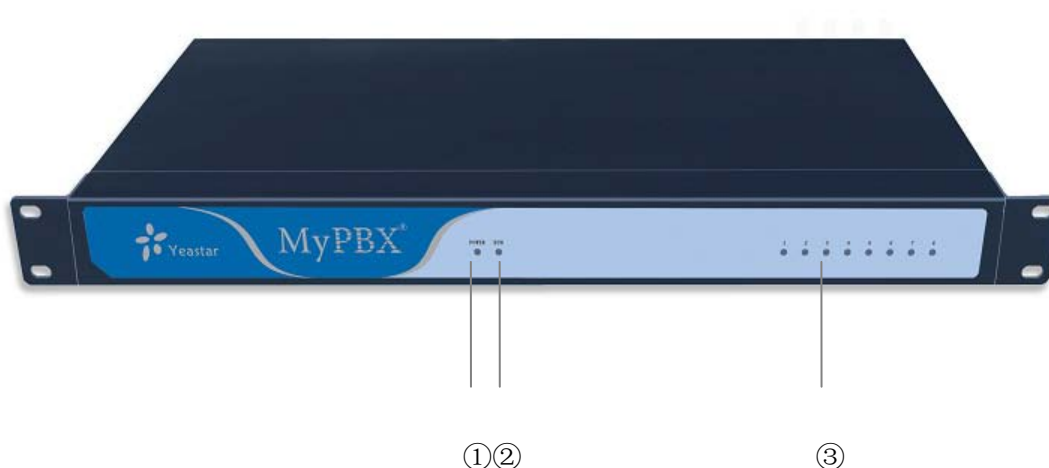


Figure 1-2 MyPBX Pro Front Panel Picture

No.	Identifying
①	Green LED: Indicates correct power is being supplied to the unit
②	Green LED: Indicates the MyPBX Enterprise is fully functional.
③	<p>Red LED: Indicates presence of an FXO/GSM port.</p> <p>Orange LED: Indicates presence of a BRI port.</p> <p>Green LED: Indicates presence of an FXS port.</p> <p>LED Blinking- Red blinking: No connection between FXO port and PSTN or no SIM card inside the GSM/UMTS modules</p> <p>LED Alternating - Red and Green (slow blink): FXO port is receiving an incoming call.</p> <p>LED Alternating - Red and Green (fast blink): FXO port, GSM/UMTS channel is in use</p> <p>LED Dual - Green and Red (slow blink): FXS port is ringing</p> <p>LED Dual - Green and Red (fast blink): FXS port is in use or GSM/UMTS port is in use</p>

2. System set up

2.1 Connection Drawing

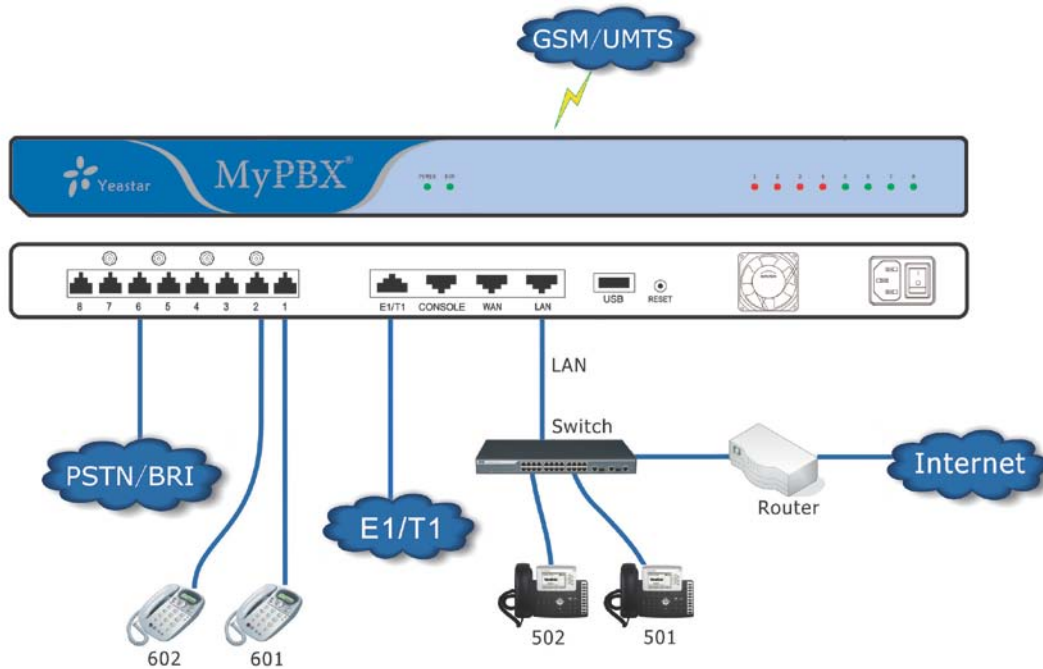


Figure 2-1

2.2 Connecting Ethernet Line

MyPBX Enterprise provides a 1000M LAN port and a 100M WAN port with RJ45 interfaces and LED indicator. Plug Ethernet line into MyPBX's Ethernet port, and then connect the other end of the Ethernet line with a hub, switch, router, LAN or WAN. Once connected, check the status of the LED indicator. A yellow LED indicates the port is in the connection process, and a green LED indicates the port is properly connected.

2.3 Supplying Power

Please follow the steps below to connect the MyPBX unit to a power outlet:

1. Connect the small end of the power cable to the power input port on the MyPBX back panel, and plug the other end of the cable into a 100V~240V AC power outlet.

2. Check the Power LED on the front panel. A solid green LED indicates that power is being supplied correctly.

Note:

1. Power off MyPBX before exchanging modules and SIM cards
2. Never connect two FXS ports on MyPBX with telephone line.
3. Never connect PSTN line to the FXS ports on MyPBX.
4. Never connect FXS ports of MyPBX to any FXS ports of other device.
5. Never touch any chips on the mainboard of MyPBX.
6. Please use the original AC adapter.
7. Never insert or detach the serial line when the power is on.

3. Managing MyPBX

3.1 Administrator Login

From your web browser, input the IP address of the MyPBX server.
If this is the first time you are configuring MyPBX, please use the default settings below:

IP Address: <http://192.168.5.150>

Username: **admin**

Password: **password**

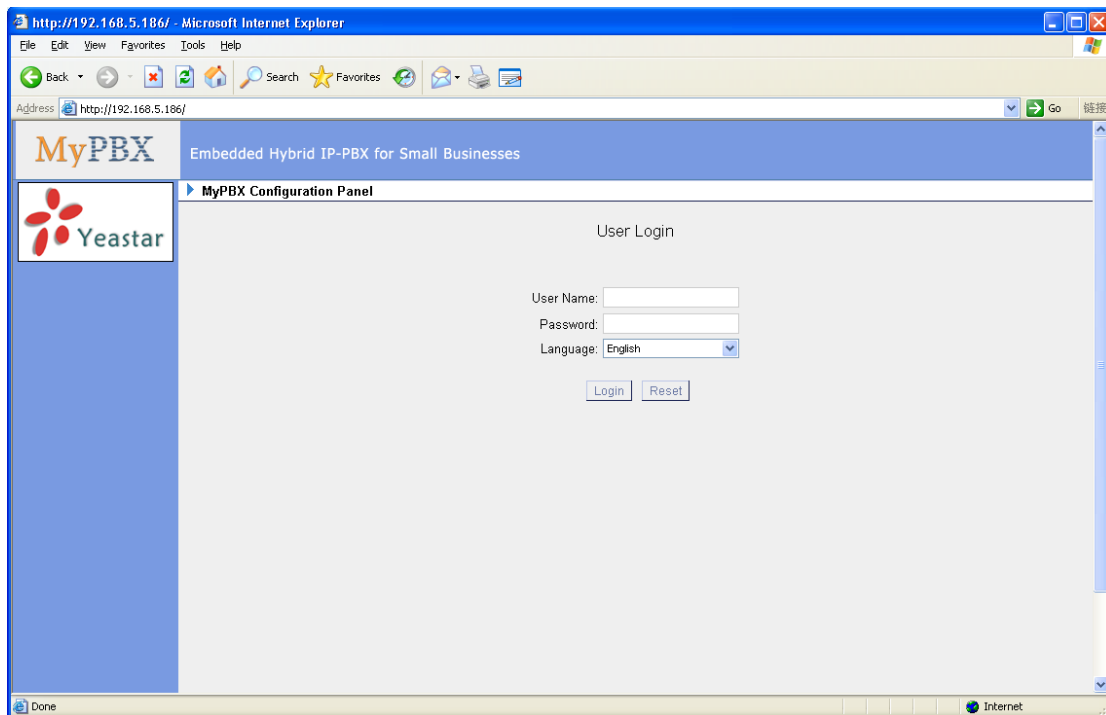


Figure 3-1

3.2 Status Monitor

3.2.1 Line Status

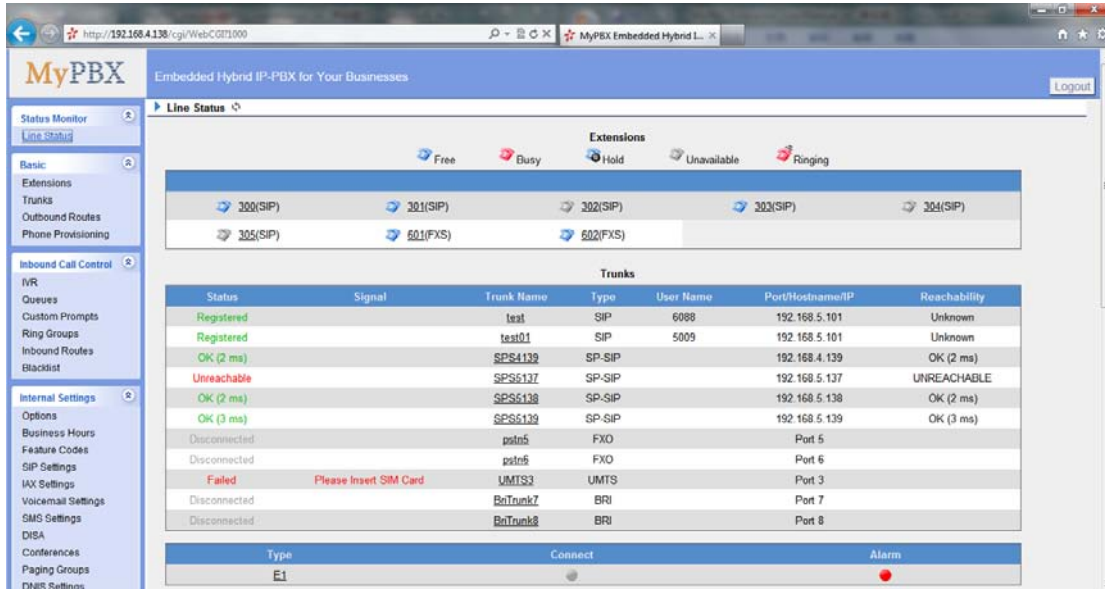







Figure 3.2.1

MyPBX Status Description:

Extensions:

- 1)  : Extension is unregistered
- 2)  : Extension is idle
- 3)  : Extension is ringing
- 4)  : Extension is busy in a call
- 5)  : Extension is on hold

Trunks:

VOIP Trunk:

Status

Unregistered: Trunk registration failed.

Registered: Succeed registration, trunk is ready for use.

Request Send: Registering.

Waiting: Waiting for authentication.

FXO Trunk:

Status

Idle: The port is idle.

Busy: The port is in use.

Disconnected: The port hasn't connected the PSTN line.

More detail message, please refer to the LED identifying of front panel.

GSM Trunk:

Status

Idle: The port is idle.

Busy: The port is in use.

Signal

 : No signal.

 : Poor.

 : Average.

 : Good.

 : Excellent.

BRI Trunk:

Status

Ok: The ports connect correctly.

Disconnected: The port hasn't connected the PSTN line.







Service Provider:

Status

Registered: Succeed registration, trunk is ready for use.

Failed: Trunk registration failed.

E1 Trunk:

Connect	Alarm	Comment
		The port hasn't connected the E1 line.
		E1 line has connected, PRI is in corresponding or can't communicate.
		Succeed.

3.3 Basic

3.3.1 Extension

Extension has two types: Analog extensions (FXS) and VOIP extensions (SIP extension or IAX extension).

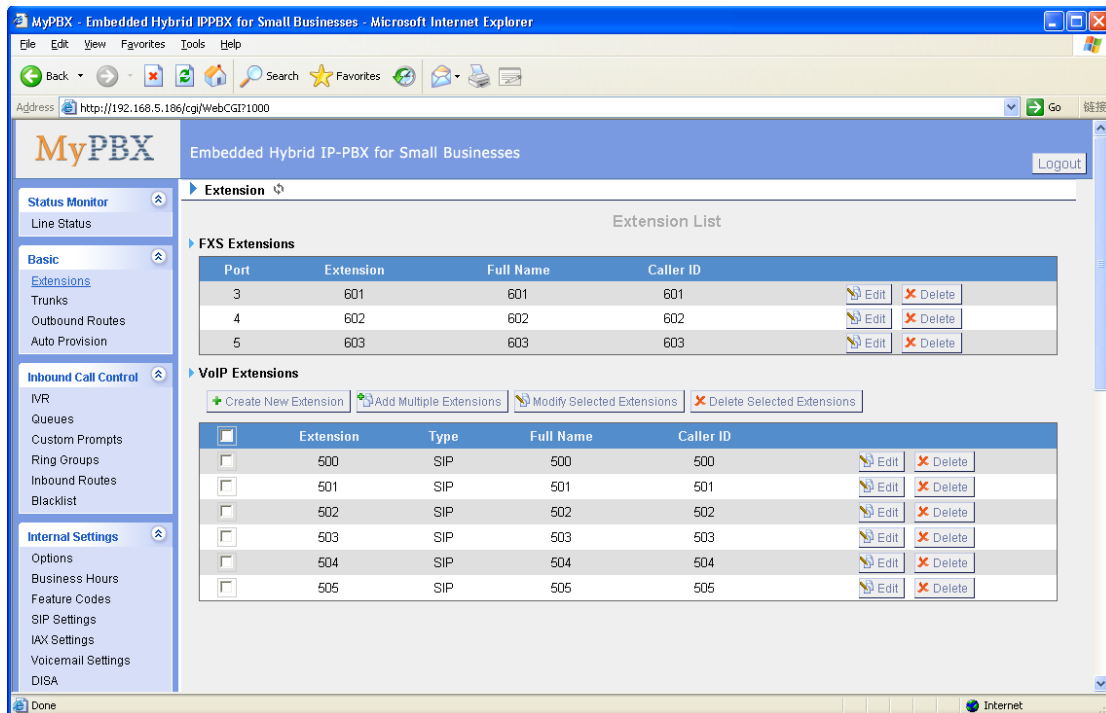


Figure 3.3.1

3.3.1.1 Analog Extensions (FXS)

Edit Analog Extensions

On the administration page of FXS extensions, click 'Edit' on the extension that you want to edit, and modify the following information on the popup window

1) General

•Extension

The numbered extension, i.e. 6001, that will be associated with this particular User / Phone.

•Port

The extension correspond port.

•Name

A character-based name for this user, i.e. 'Bob Jones' .

•Caller ID

The Caller ID (CID) string will be used when this user calls another internal user.

2) Voicemail

•Enable Voicemail

Check this box if the user should have a voicemail account.

•Voicemail Access PIN #

Voicemail Password for this extension, i.e. '1234' .

3) Mail Setting

•Enable Send Voicemail

Once enabled, the voicemail will be sending to below email address as an attachment.

•Send Voicemail to Email Address

This option defines whether or not voicemails/Fax is sent to the Email address as an attachment.

Note: Please ensure that all voicemail settings are properly configured on the System Settings -> Voicemail Settings page before using this feature.

4) Flash

•Hook Flash Detection

Sets the amount of time, in milliseconds, that must pass since the last hook-flash event received by MyPBX before it will recognize a second event. If a second event occurs in less time than defined by Hook Flash Detection, then MyPBX will ignore the event. The default value of Flash is 1000 ms, and it can be configured in 1ms increments.

5) Group

•Pickup Group

If this extension belongs to a pickup group, any calls that ring this extension can be picked up by other extensions in the same pickup group by dialing the Call Pickup feature code (default *4).

Note: *4 is the default setting, it can be changed under Feature Codes -> General -> Call Pickup.

6) Follow me (Call Forwarding)

This function sets inbound call forwarding on an extension. An administrator can configure Follow Me for this extension.

7) Other Options

•Call Waiting

Check this option if the extension should have Call Waiting capability. If this option is checked, the 'When busy' follow me options will not be available.

•User Web Interface

Check this option to allow the user to login to the MyPBX User Web interface, which can be used to access voicemail and extension recordings. Users may login to the MyPBX User Web interface by using their extension number and

voicemail PIN # as the login and password respectively.

• **DND**

Don't Disturb.

• **Ring Out**

Check this option if you want to custom the ring time. Tone will stop over the time defined.

8) Volume Settings

Rxgain: The Volume sent to FXS extension.

Txgain: The Volume sent out by the FXS extension.

9) Mobility Extension

MyPBX allows you to use your mobile phone as extension. If you set your mobile phone as mobility extension and then you call MyPBX with this mobility phone, you will hear a dial tone. MyPBX will recognize your call as a call from an extension. You can dial the number of other extensions (Your caller ID will be the number of your extension) and use all outbound route that your extension can use of MyPBX.

• **Mobility Extension Number**

Don't forget to add the dial patterns of the outbound route at the beginning of your mobile phone number when you fill in the mobility extension number filed. E.g. if you want to set "15960XXXXXX" as mobile extension, and the dial pattern of the outbound route is "9"; you should set "915960XXXXXX" here.

Note: If callback is enabled in the inbound route, the mobility extension function of this inbound route will be disabled.

10) Spy Settings

MyPBX allows extension to monitor/barge in other conversation. Once this feature is enabled, the extension has the ability to monitor/barge in other calls using the feature codes for each spy mode, refer to 'Feature Codes' page for more information.

• **spy modes**

There are 3 spy modes available for choice:


Normal spy: you can only hear the call, but can't talk

Whisper spy: you can hear the call, and can talk with the monitored extension

Barge spy: you can hear the call and talk with them both

Note: for example, if 500 want to monitor extension 501, we need to enable the 'allow being spied ' for 501, and choose the spy mode for extension 500.

Then pick up 500 and dial “feature codes + 501” to start monitoring when 501 is in a call.

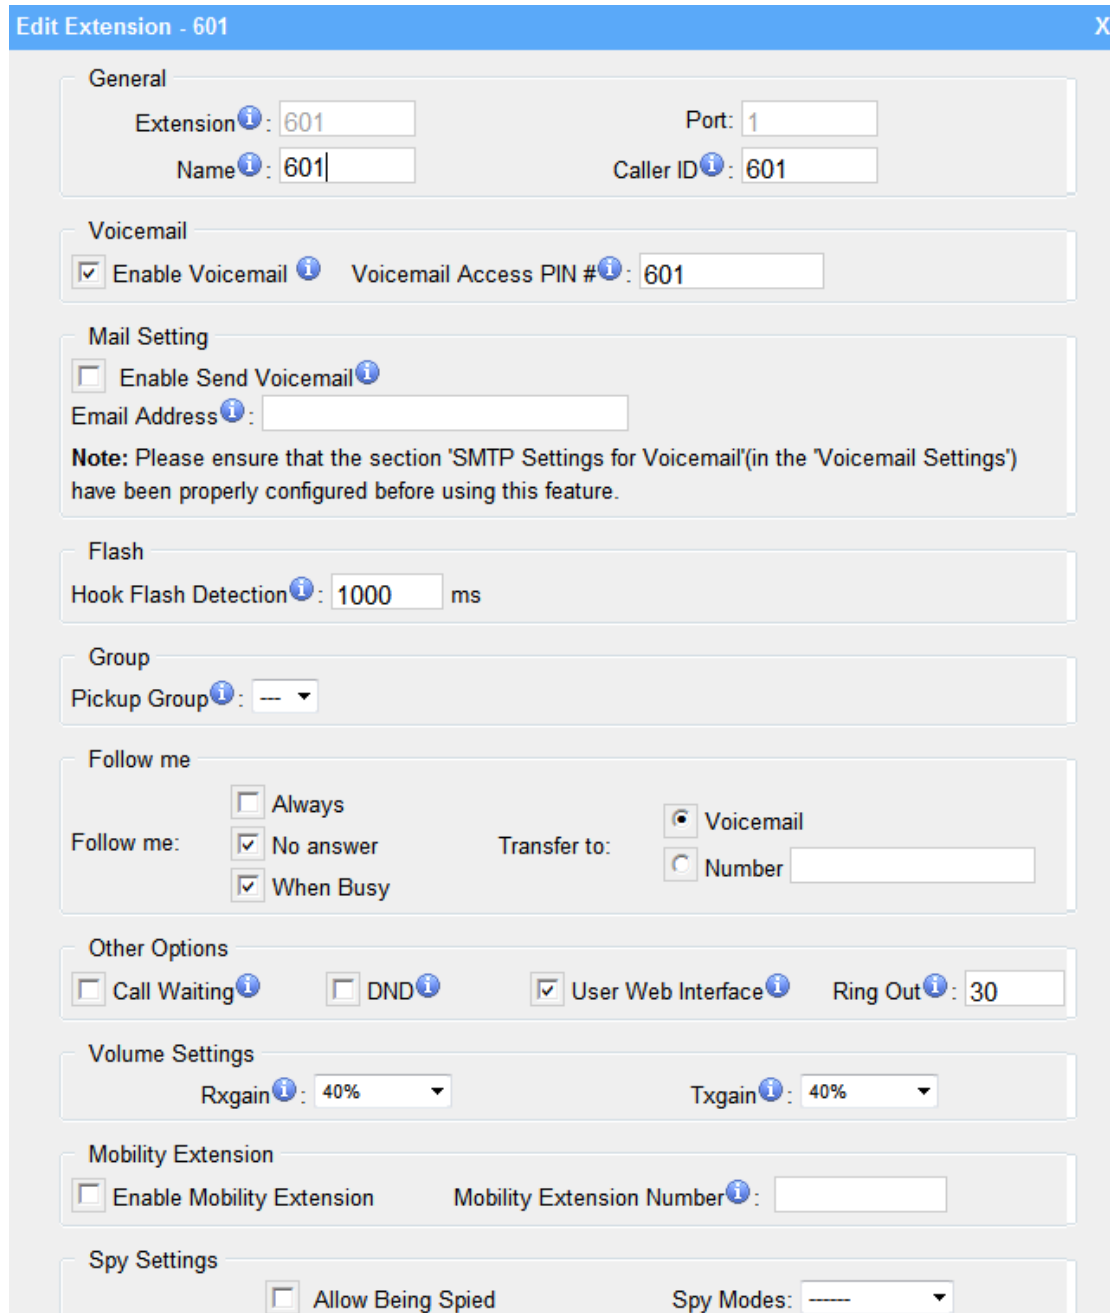

Edit Extension - 601

General
 Extension: 601 Port: 1
 Name: 601 Caller ID: 601

Voicemail
 Enable Voicemail Voicemail Access PIN #: 601

Mail Setting
 Enable Send Voicemail
 Email Address:
 Note: Please ensure that the section 'SMTP Settings for Voicemail'(in the 'Voicemail Settings') have been properly configured before using this feature.

Flash
 Hook Flash Detection: 1000 ms

Group
 Pickup Group: ---

Follow me
 Follow me: Always No answer When Busy
 Transfer to: Voicemail Number

Other Options
 Call Waiting DND User Web Interface Ring Out: 30

Volume Settings
 Rxgain: 40% Txgain: 40%

Mobility Extension
 Enable Mobility Extension Mobility Extension Number:

Spy Settings
 Allow Being Spied Spy Modes: -----

Figure 3.3.1.1

3.3.1.2 VOIP Extension

A VOIP extension is a SIP/IAX Account that allows an IP Phone or an IP Soft-Phone client to register on MyPBX.

1. Add VOIP Extension

Go to Extensions → VOIP Extensions → Create New Extension

1) General

•Type

Extension type: SIP,IAX or SIP/IAX.

SIP – The extension sends and receives calls using the VoIP protocol SIP.

IAX -The extension sends and receives calls using the VoIP protocol IAX.

•Extension

The numbered extension, i.e. 1234, that will be associated with this particular User / Phone.

•Password

The password for this extension, Ex: '12t3f6'

•Name

A character-based name for this user, EX: 'Bob Jones'

•Caller ID

The Caller ID will be used when this user calls another internal extension.

2) Voicemail

•Enable Voicemail

Check this box if the user should have a voicemail account.

•Voicemail Access PIN

The voicemail Password for this extension, i.e. '1234' .

3) Mail Setting

This option defines whether or not voicemails or faxes are sent to an Email Address as attachment.

•Enable Send Voicemail

Once enabled, the voicemail will be sent to email as an attachment.

•Email Address

Email address used to receive the voicemail or Fax.

Note: Please ensure that the section 'SMTP Settings For Voicemail'(in the 'Voicemail Settings') have been properly configured before using this feature.

4) Group

•Pickup Group

If this extension belongs to a pickup group, any calls that ring this extension can be picked up by other extensions in the same pickup group by dialing the Call Pickup feature code (default is *4).

Note: *4 is the default setting, it can be changed under Feature Codes -> General -> Call Pickup.

5) Follow me (Call Forwarding)

Call forwarding for an extension can be configured here. The administrator can configure Follow Me option for this extension. If you want to transfer the call to an outbound number, please follow the dial pattern of outbound route filled in the outbound number.

For example: transferring to your mobile phone number 123456789, the dial pattern of outbound route is '9.', you should fill in 9123456789 here.

6) Other Options

.Call Waiting

Check this option if the extension should have Call Waiting capability. If this option is checked, the 'When busy' follow me options will not be available. The call waiting function of IP phone has higher priority than MyPBX's call waiting function.

.DND

Don't Disturb. When DND is enabled for an extension, the extension will be not available.

.User Web Interface

Check this option to allow the user to login to the MyPBX User Web interface, which can be used to check voicemail and extension recordings. Users may login to MyPBX User Web interface by using their extension number and voicemail PIN # as the login and password respectively.

.Ring Out

Check this option if you want to customize the ring time. Ring tone will stop over the time defined.

7) VoIP Settings

·NAT

This setting should be used when the system is using a public IP address to communicate with devices hidden behind a NAT device (such as a broadband router). If you have one-way audio problems, you usually have problems with your NAT configuration or your firewall's support of SIP and/or RTP ports.

·Enable SRTP

Enable extension for SRTP (RTP Encryption).

·Qualify

Send check alive packets to IP phones

·SIP Transport

This will be the transport method used by the extension. The options are UDP (default) or TCP or TLS.

·**DTMF Mode** – RFC2833, Info, Inband, Auto.

8) IP Restriction

·Enable IP Restriction

Check this option to enhance the VoIP security for MyPBX. If this option is enabled, only the permitted IP/Subnet mask will be able to register this extension number. In this way, the VoIP security will be enhanced.

·Permitted 'IP address/Subnet mask'

The input format should be 'IP address'+'/'+'Subnet mask'.

e.g."192.168.5.100/255.255.255.255" means only the device whose IP address is 192.168.5.100 is allowed to register this extension number.

e.g."192.168.5.0/255.255.255.0" means only the device whose IP address is 192.168.5.XXX is allowed to register this extension number.

9) Mobility Extension

MyPBX allows you to use your mobile phone as extension. If you set your mobile phone as mobility extension and then you call MyPBX with this mobility phone, you will hear a dial tone. MyPBX will recognize your call as a call from an extension. You can dial other extension numbers (Your caller ID will be the number of your extension) and dial out using all outbound route that your extension can use on MyPBX.

·Mobility Extension Number

Don't forget to add the dial patterns of the outbound route at the beginning of your mobile phone number when you fill in the mobility extension number field. E.g. if you want to set "15960XXXXXX" as mobile extension, and the dial pattern of the outbound route is "9"; you should set "915960XXXXXX" here.

Note: If callback is enabled on the inbound route, the mobility extension function of this inbound route will be disabled.

Edit Extension - 500
X

General

Type: SIP Extension: 500 Password: pincode500
 Name: 500 Caller ID: 500

Voicemail

Enable Voicemail Voicemail Access PIN #: 500

Mail Setting

Enable Send Voicemail
 Email Address:

Note: Please ensure that the section 'SMTP Settings for Voicemail'(in the 'Voicemail Settings') have been properly configured before using this feature.

Group

Pickup Group: ---

Follow me

Follow me: Always No answer When Busy
 Transfer to: Voicemail Number

Other Options

Call Waiting DND User Web Interface Ring Out: 30

Spy Settings

Allow Being Spied Spy Modes: -----

Optional Settings ^

VoIP Settings

NAT: Enable SRTP: Qualify:
 Transport: UDP DTMF Mode: RFC2833

IP Restriction

Enable IP Restriction:

Permitted 'IP address/Subnet mask' 1:
 Permitted 'IP address/Subnet mask' 2:
 Permitted 'IP address/Subnet mask' 3:
 Permitted 'IP address/Subnet mask' 4:

Mobility Extension


Enable Mobility Extension Mobility Extension Number:

Figure 3.3.1.2

2. Add Multiple Extensions

Go to Extensions → VOIP Extensions → Add Multiple Extensions.

- 1) Choose the number of extensions that you would like to create.
- 2) Choose the type of extension that you would like to create.
- 3) Fill in the starting extension number.

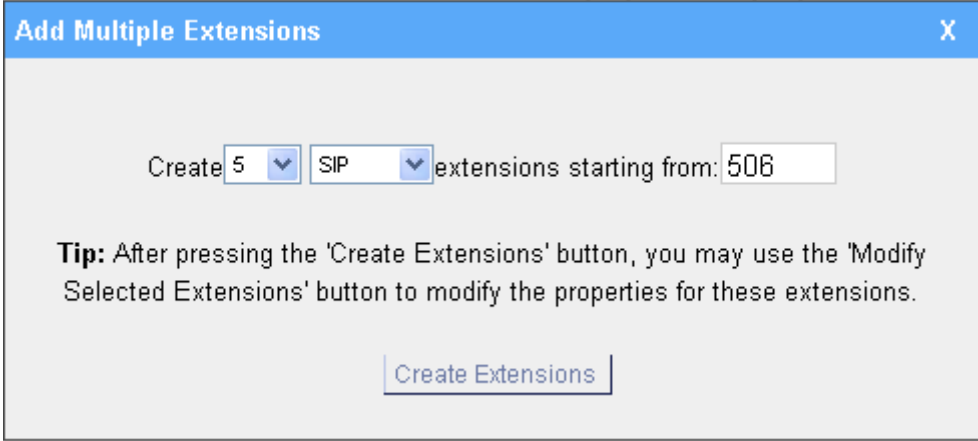

Add Multiple Extensions X

Create extensions starting from:

Tip: After pressing the 'Create Extensions' button, you may use the 'Modify Selected Extensions' button to modify the properties for these extensions.


Figure 3.3.1.3

3. Edit VOIP Extension

Click 'Edit' on VOIP Extension administration page or click 'Modify Selected Extensions' to edit extension.

3.3.2 Trunk

There are six types of trunks: E1/T1 trunks, Analog trunks (FXO), GSM Trunk, BRI Trunk, VoIP Trunk and Service Provider trunks.

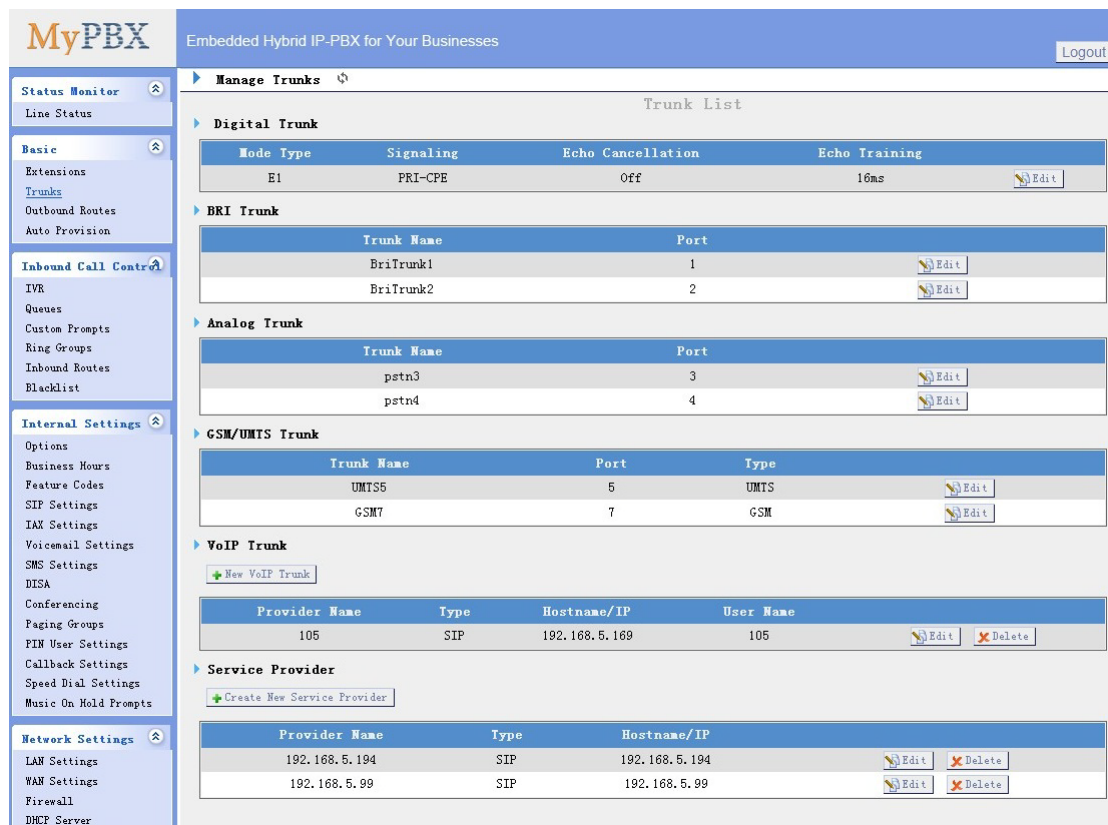

The screenshot shows the MyPBX Enterprise web interface. The top navigation bar includes the MyPBX logo and the text 'Embedded Hybrid IP-PBX for Your Businesses' with a 'Logout' button. A sidebar on the left contains various configuration menus. The main content area is titled 'Manage Trunks' and displays a 'Trunk List' with several sections:

- Digital Trunk:** A table with columns 'Mode Type', 'Signaling', 'Echo Cancellation', and 'Echo Training'. It shows one entry with Mode Type 'E1', Signaling 'PRI-CPE', Echo Cancellation 'Off', and Echo Training '16ms'.
- BRI Trunk:** A table with columns 'Trunk Name' and 'Port'. It shows two entries: 'BriTrunk1' on port 1 and 'BriTrunk2' on port 2.
- Analog Trunk:** A table with columns 'Trunk Name' and 'Port'. It shows two entries: 'pstn3' on port 3 and 'pstn4' on port 4.
- GSM/UMTS Trunk:** A table with columns 'Trunk Name', 'Port', and 'Type'. It shows two entries: 'UMTS6' on port 5 (Type UMTS) and 'GSM7' on port 7 (Type GSM).
- VoIP Trunk:** A table with columns 'Provider Name', 'Type', 'Hostname/IP', and 'User Name'. It shows one entry with Provider Name '105', Type 'SIP', Hostname/IP '192.168.5.169', and User Name '105'.
- Service Provider:** A table with columns 'Provider Name', 'Type', and 'Hostname/IP'. It shows two entries: '192.168.5.194' (Type SIP, Hostname/IP 192.168.5.194) and '192.168.5.99' (Type SIP, Hostname/IP 192.168.5.99).

Figure 3.3.2

3.3.2.1 Digital Trunk

1. Edit Digital Trunk

On the Digital Trunk administration page, click 'Edit' on the selected trunk and modify its properties in the popup window:

1) General

• Signaling

PRI-NET, PRI-CPE, MFC/R2, SS7

• Mode Type

E1 / T1 / J1

• Switch Type

national: National ISDN type2 (common in the US)

ni1: National ISDN type 1

dms100: Nortel DMS100

4ess: AT&T 4ESS

5ess: Lucent 5ESS

euroisdn: EuroISDN

qsig: Minimalistic protocol to build a "network" with two or more PBX of different vendors!

•PRI Dial Plan

Sets an option required for some (rare) switches that require a dial plan parameter to be passed. This option is ignored by most PRI switches. It may be necessary on a few pieces of hardware. This option can almost always be left unchanged from the default.

•Reset interval

The interval(seconds) of restart of unused channels. Some PBXs don't like channel restarts. so set the interval to a very long interval e.g. 100000000 or 'never' to disable *entirely*. If you are in Israel, the following is important: As Bezeq in Israel doesn't like the B-Channel resets happening on the lines, it is best to set the reset interval to 'never' when installing a box in Israel. Our past experience also shows that this parameter may also cause issues on local switches in the UK and China.

•PRI Local Dial Plan

Sets an option required for some (rare) switches that require a dial plan parameter to be passed. This option is ignored by most BRI switches. It may be necessary on a few pieces of hardware. This option can almost always be left unchanged from the default.

•Over Lap Dial

Whether MyPBX can dial this switch using overlap digits. If you need Direct Dial-in (DDI; in German "Durchwahl") you should change this to yes, then MyPBX will wait after the last digit it receives.

•PRI Indication

Tells how Device should indicate Busy() and Congestion() to the switch/user. Accepted values are:

inband: Device plays indication tones without answering; not available on all PRI/BRI subscription lines .

outofband: Device disconnects with busy/congestion information code so the switch will play the indication tones to the caller. Busy() will now do same as setting PRI_CAUSE=17 and Hangup().

•Facility Enable

To enable transmission of facility-based ISDN supplementary services (such as caller name from CPE over facility).

•NSF

Used with AT&T PRIs. If outbound calls are being rejected due to "Mandatory information element missing" and the missing IE is 0x20, then you need this setting.

·Echo Cancellation

Echo cancel Obviously this disables or enables echo cancellation, it is recommended to not turn this off.

·Echo Training

Echo training A common echo symptom is that at the beginning of a conversation there is a good deal of echo and then it fades away as it trains itself.

·CRC

CRC Verification.

·Codec

Default ,A-Law,U-Law.

2) CallerID Prefix

·International Prefix

When there are international calls coming in via this BRI trunk, the International Prefix you have set here will be added before the CID. So you can know this is an international call before you answer it.

·National Prefix

When there are national calls coming in via this BRI trunk, the National Prefix you have set here will be added before the CID. So you can know this is a national call before you answer it.

·Local Prefix

When there are Local calls coming in via this BRI trunk, the Local Prefix you have set here will be added before the CID. So you can know this is a local call before you answer it.

·Private Prefix

When there are Private calls coming in via this BRI trunk, the Private Prefix you have set here will be added before the CID. So you can know this is a Private call before you answer it.

·Unknown Prefix

When there are calls with unknown number coming via this BRI trunk, the Unknown Prefix you set here will be shown as the caller ID.

3) DOD Setting

·Global DOD

Global direct outward dialing number.

• **DOD**

Direct Outward Dialing Number.

• **Associated Extension**

The extension make call out via BRI Trunk will display the associated DOD.

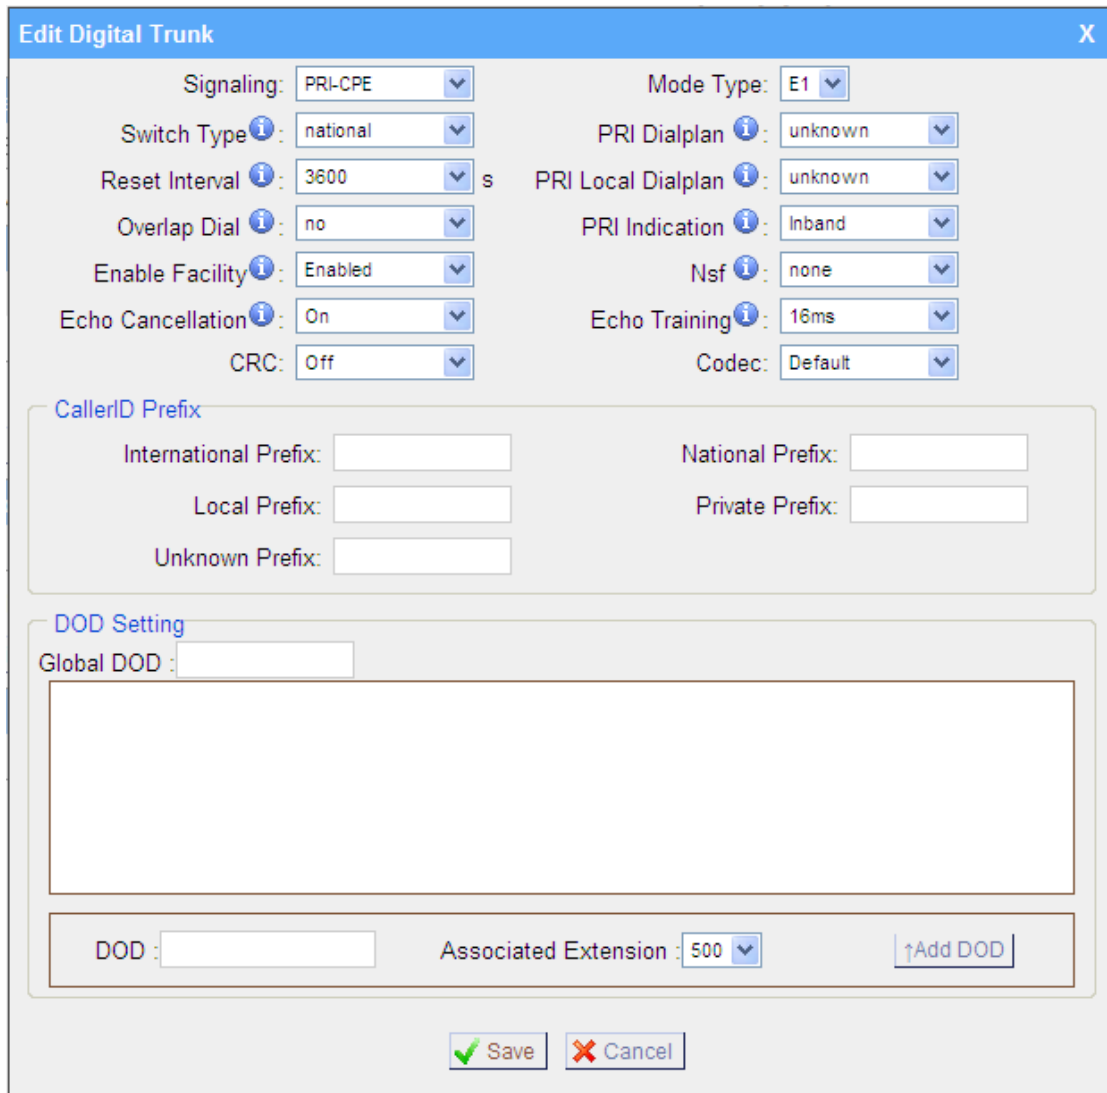


Figure 3.3.2.1

3.3.2.2 BRI Trunk

1. Edit BRI Trunk

1) General

• **Trunk Name**

A unique label used to identify this trunk when listed in outbound rules,

incoming rules, etc. Ex: 'BriTrunk1'

• **Signaling**

Signaling method.

BRI-CPE: ISDN BRI in TE mode and Point to Point.

BRI-CPE-PTMP: ISDN BRI in TE mode and Point to multi Point.

BRI-NET: ISDN BRI in NET mode and Point to Point.

BRI-NET-PTMP: ISDN BRI in NET mode and Point to multi Point.

• **Switch Type**

National: National ISDN type2 (common in the US)

ni1: National ISDN type 1

dms100: Nortel DMS100

4ess: AT&T 4ESS

5ess: Lucent 5ESS

euroisdn: EuroISDN

qsig: D-channel signaling protocol at Q reference point for PBX networking.

• **PRI Dial Plan**

Sets an option required for some (rare) switches that require a dial plan parameter to be passed. This option is ignored by most BRI switches. It may be necessary on a few pieces of hardware. This option can almost always be left unchanged from the default.

• **Reset interval**

Sets the time in seconds between restart of unused channels . Some PBXs don't like channel restarts. so set the interval to a very long interval e.g. 100000000 or 'never' to disable *entirely*. If you are in Israel, the following is important: As Bezeq in Israel doesn't like the B-Channel resets happening on the lines, it is best to set the reset interval to 'never' when installing a box in Israel. Our past experience also shows that this parameter may also cause issues on local switches in the UK and China.

• **PRI Local Dial Plan**

Sets an option required for some (rare) switches that require a dial plan parameter to be passed. This option is ignored by most BRI switches. It may be necessary on a few pieces of hardware. This option can almost always be left unchanged from the default.

• **Over Lap Dial**

Whether MyPBX can dial this switch using overlap digits . If you need Direct Dial-in (DDI; in German "Durchwahl") you should change this to yes, then MyPBX will wait after the last digit it receives.

·PRI Indication

Tells how Device should indicate Busy() and Congestion() to the switch/user. Accepted values are:

inband: Device plays indication tones without answering; not available on all PRI/BRI subscription lines .

outofband: Device disconnects with busy/congestion information code so the switch will play the indication tones to the caller. Busy() will now do same as setting PRI_CAUSE=17 and Hangup().

·Enable Facility

To enable transmission of facility-based ISDN supplementary services (such as caller name from CPE over facility) .

·NSF

Used with AT&T PRIs. If outbound calls are being rejected due to "Mandatory information element missing" and the missing IE is 0x20, then you need this setting.

·Echo Cancellation

Echocancel Obviously this disables or enables echo cancellation, it is recommended to not turn this off.

·Hide CallerID

If you want others to see your CID, please disable this option.

·Codec

You can choose alaw or ulaw codes.

2) CallerID Prefix

·International Prefix

When there are international calls coming in via this BRI trunk, the International Prefix you have set here will be added before the CID. So you can know this is an international call before you answer it.

·National Prefix

When there are national calls coming in via this BRI trunk, the National Prefix you have set here will be added before the CID. So you can know this is a national call before you answer it.

·Local Prefix

When there are Local calls coming in via this BRI trunk, the Local Prefix you have set here will be added before the CID. So you can know this is a local call before you answer it.

•Private Prefix

When there are Private calls coming in via this BRI trunk, the Private Prefix you have set here will be added before the CID. So you can know this is a Private call before you answer it.

•Unknown Prefix

When there are calls with unknown number coming via this BRI trunk, the Unknown Prefix you set here will be shown as the caller ID.

4) DOD Setting

•Global DOD

Global direct outward dialing number.

•DOD

Direct Outward Dialing Number.

•Associated Extension

The extension make call out via BRI Trunk will display the associated DOD.

Edit BRI Trunk - BriTrunk7
X

Trunk Name i : <input type="text" value="BriTrunk7"/>	Switch Type i : <input type="text" value="euroisdn"/>
Signaling: <input type="text" value="BRI-CPE"/>	Reset Interval i : <input type="text" value="never"/> s
PRI Dialplan i : <input type="text" value="unknown"/>	Overlap Dial i : <input type="text" value="no"/>
PRI Local Dialplan i : <input type="text" value="unknown"/>	Enable Facility i : <input type="text" value="Enabled"/>
PRI Indication i : <input type="text" value="Inband"/>	Echo Cancellation i : <input type="text" value="Off"/>
Nsf i : <input type="text" value="none"/>	Codec: <input type="text" value="alaw"/>
Hide Caller ID i : <input type="text" value="No"/>	

Caller ID Prefix

International Prefix: <input type="text"/>	National Prefix: <input type="text"/>
Local Prefix: <input type="text"/>	Private Prefix: <input type="text"/>
Unknown Prefix: <input type="text"/>	

DOD Settings

Global DOD:

DOD: <input type="text"/>	Associated Extension: <input type="text" value="601"/>	↑Add DOD
---------------------------	--	--------------------------

Figure 3.3.2.2

3.3.2.3 Analog Trunk (FXO)

1. Edit Analog Trunk (FXO)

On the Trunk administration page, click 'Edit' on the selected trunk and modify its properties in the popup window:

1) General

•Trunk Name

A unique label used to identify this trunk when listed in outbound rules, incoming rules, etc. Ex: 'pstn5'

•Volume Setting

Used to modify the volume level of this trunk . Normally, this setting does not need to be changed.

2) Busy Detection

•Busy Detection

Busy Detection is used to detect far end hang-up or for detecting a busy signal. Select "Yes" to turn this feature on.

•Busy Count

If Busy Detection is enabled, it is also possible to specify how many busy tones to wait for before disconnecting the call. The default is 4, but better results can be achieved if set to 6 or even 8. Remember, the higher the number, the more time will be required to release a channel. A higher setting lowers the probability that you will encounter random hang-ups.

•Busy Interval

The busy detection interval

•Busy Pattern

If Busy Detection is enabled, it is also possible to specify the cadence of your busy signal. In many Countries, it is 500 msec on, 500 msec off. Without Busy Pattern specified, MyPBX will accept any regular sound-silence pattern that repeats <Busy Count> times as a busy signal. If you specify Busy Pattern, then MyPBX will further check the length of the tone and silence, which will further reduce the chance of a false positive disconnect.

•Frequency Detection

Used for Frequency Detection (Enable detecting the busy signal frequency or not).

•Busy Frequency

If the Frequency Detection is enabled, you must specify the local frequency.

•Polarity Detection

Configure if the call needs to be hung up when a polarity signal arrived

3) Advanced Options

•Caller ID Start

This option allows you to define the start of a Caller ID signal:

Ring: Start when a ring is received (Caller ID Signaling: Bell_USA, DTMF).

Polarity: Start when a polarity reversal is started (Caller ID Signaling: V23_UK, V23_JP, DTMF).

Before Ring: Start before a ring is received (Caller ID Signaling: DTMF).

•Caller ID Signaling

This option defines the type of Caller ID signaling to use. It can be set to one of

the following:

Bell: bell202 as used in the United States

v23_UK: suitable in the UK

v23_Japan: suitable in Japan

v23-Japan pure: suitable in Japan

DTMF: suitable in Denmark, Sweden, and Holland

.Caller ID Detection

For fxo trunks, this option forces MyPBX to clarify Caller ID incoming calls.

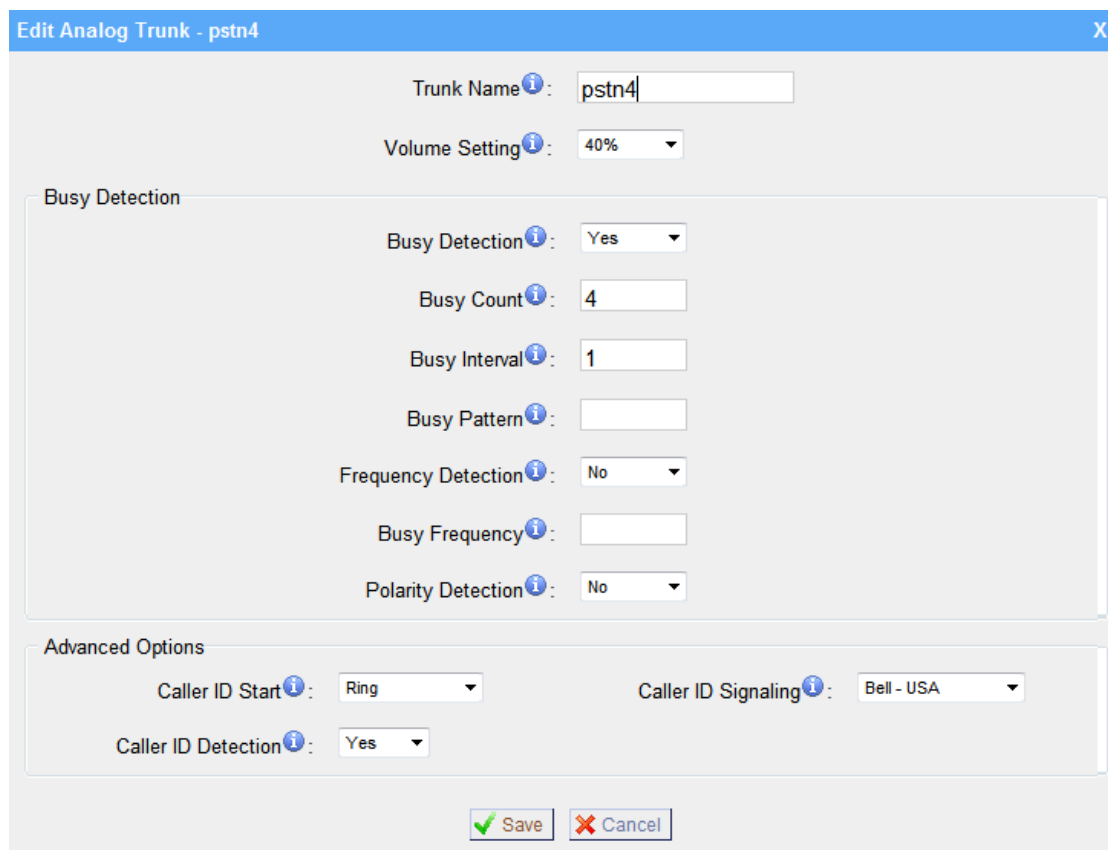


Figure 3.3.2.3

3.3.2.4 GSM/UMTS Trunk

1. Edit GSM Trunk

1) General

•Trunk Name

A unique label used to identify this trunk when listed in outbound rules, incoming rules, etc. Ex: 'GSM9'

•Volume Setting

Used to modify the volume level of this trunk. Normally, this setting does not need to be changed.

•Pin Code

Please enter your SIM card pin code here if your card has a pin code.

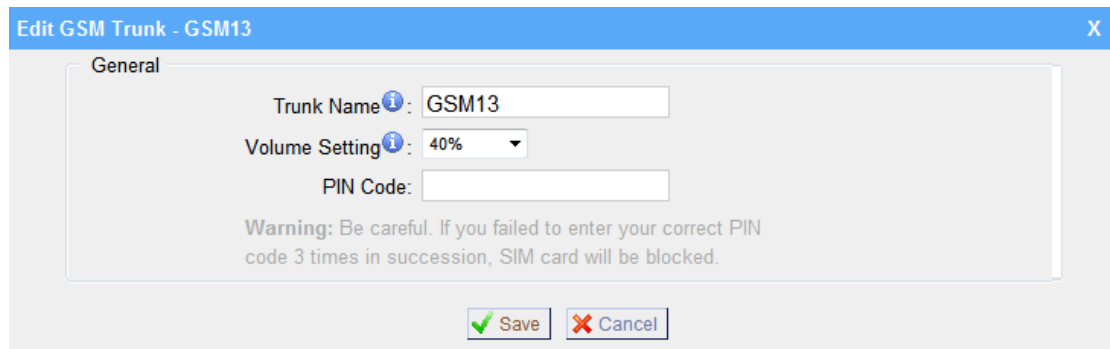


Figure 3.3.2.4

3.3.2.5 VOIP Trunk

1. Add SIP Trunk

Input correct SIP information (provide by VOIP provider). Inaccurate information will prevent the trunk from registering.

1) General setting

•Type

SIP – Identifies whether the trunk sends and receives calls using the VoIP protocol SIP

•Provider Name

A unique label to help you identify this trunk when listed in outbound rules, incoming rules etc. Ex: 'yeastar'.

•Hostname/IP

Service provider's hostname or IP address.5060 is the standard port number used by SIP protocol. Don't change this part if it is not required.

.Domain

VoIP provider's server domain name .

•Username

Username of SIP account . Used for SIP trunk registration.

.Authorization name

Used for SIP authentication. Leave this blank if not required.

•Password

Password of SIP account .

.From User

All outgoing calls from this SIP Trunk will use the From User (In this case the account name for SIP Registration) in From Header of the SIP Invite.

.Online number

Define the online number that expected by 'Skype Connect' and some other SIP service providers. Leave this field blank if it's no required.

.Maximum Channels

Controls the maximum number of outbound channels (simultaneous calls) that can be used on this trunk . Inbound calls are not counted against the maximum. Set as 0 to specify no maximum.

.Caller ID

Specify the caller ID to use when making outbound calls over this trunk. The caller ID set in the 'extension' screen will override the caller ID set in the 'VOIP trunk' screen. Please note that not all the service providers support this feature. Contact your service provider for more information.

.Outbound Proxy Server

A proxy that receives requests from a client , even though it may not be the server resolved by the Request-URI.

.Codecs

Define the codec for this sip trunk and its priority

Note: codec can only display when it is edited after creating the trunk.

.Transport

This will be the transport method used by the SIP Trunk. This method is given by the SIP trunk provider. The options are UDP (default) or TCP or TLS.

.Enable SRTP

Define if SRTP is enabled for this trunk

.Qualify

Send check alive packets to the sip provider.

.DTMF mode

Set default mode for sending DTMF of this trunk. Default setting: rfc2833

2) DOD Setting

.DOD

Direct Outward Dialing Number.

•Associated Extension

The extension make call out via SIP Trunk will display the associated DOD.

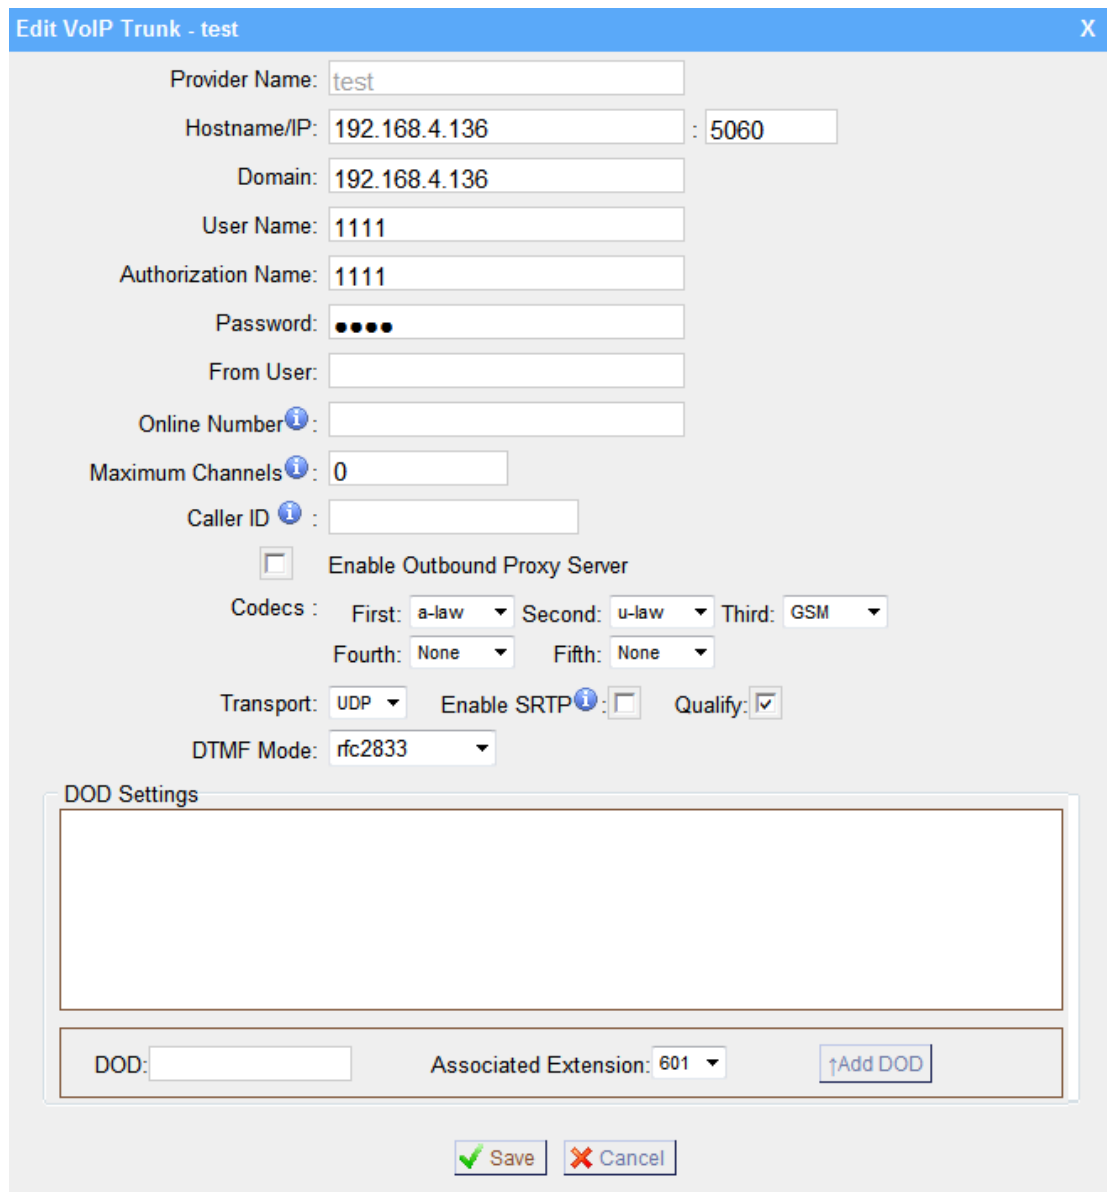


Figure 3.3.2.5.1

2. Add IAX Trunk

Input correct IAX information (provided by VOIP provider). Inaccurate information will prevent the trunk from registering.

•Type

IAX – Identifies whether the trunk sends and receives calls by using the VoIP protocol IAX.

•Provider Name

A unique label to help you identify this trunk when listed in outbound rules, incoming rules etc. Ex: 'yeostar2'.

• **Hostname/IP**

Service provider's hostname or IP address. 4569 is the standard port number used by IAX protocol. Don't change this part if it is not required.

• **Username**

Username of IAX account . Used for IAX trunk registration.

• **Password**

Password of IAX account .

• **Online number**

Define the online number that expected by 'Skype Connect' and some other SIP service providers. Leave this field blank if it's no required.

• **Maximum Channels**

Controls the maximum number of outbound channels (simultaneous calls) that can be used on this trunk . Inbound calls are not counted against the maximum. Leave blank to specify no maximum.

• **Caller ID**

Specify the caller ID to use when making outbound calls over this trunk. The caller ID set in the 'extension' screen will override the caller ID setting in the 'VOIP trunk' screen. Please note that not all the service providers support this feature. Contact your service provider for more information.

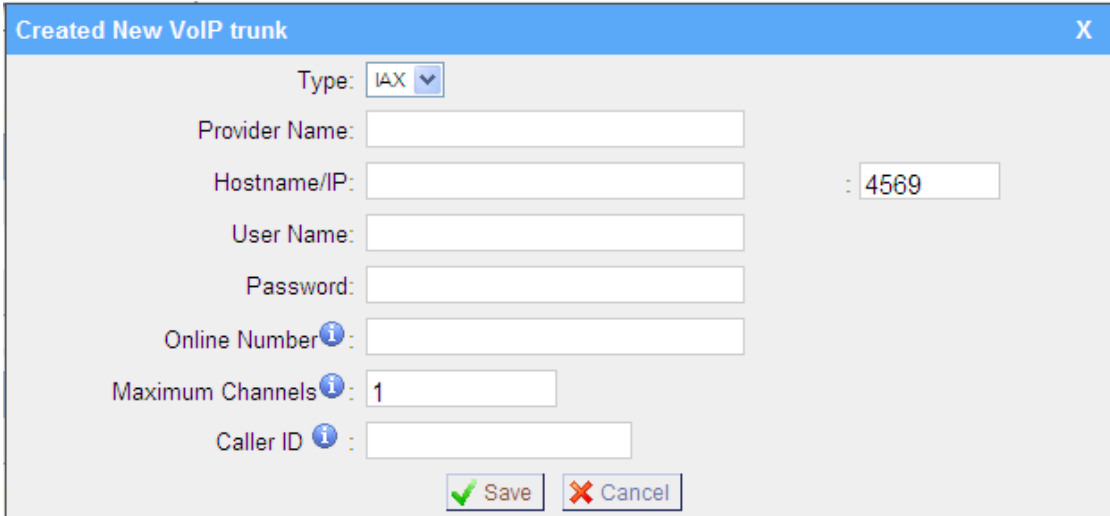


Figure 3.3.2.5.2

3.3.2.6 Service Provider

1. Add Service Provider

To Create the Service provider definition you need to complete the following VoIP fields.

1) General

•Type

SIP or IAX

SIP – Identifies whether the trunk sends and receives calls by using the VoIP protocol SIP.

IAX - Identifies whether the trunk sends and receives calls by using the VoIP protocol IAX.

•Provider Name

A unique label would help to you identify this trunk. Ex: 'Provider2'.

•Hostname/IP

Service provider's hostname or IP address.

Note: 5060 is the standard port number used by SIP protocol, 4569 is the standard port number used by IAX protocol. Don't change this part if it is not required.

•Maximum Channels

Controls the maximum number of outbound channels (simultaneous calls) that can be used on this trunk . Inbound calls are not counted against the maximum. Leave blank to specify no maximum.

•Codecs

Define the codec for this sip trunk and its priority

Note: codec can only display when edit it after creating the trunk.

•Transport

This will be the transport method used by the SIP Trunk. This method is given by the SIP trunk provider. The options are UDP (default) or TCP or TLS.

•Qualify

Send check alive packets to the sip provider.

•DTMF mode

Set default mode for sending DTMF of this trunk. Default setting: rfc2833


2) DOD Setting

•DOD

Direct Outward Dialing Number.

Associated Extension

The extension make call out via BRI Trunk will display the associated DOD.

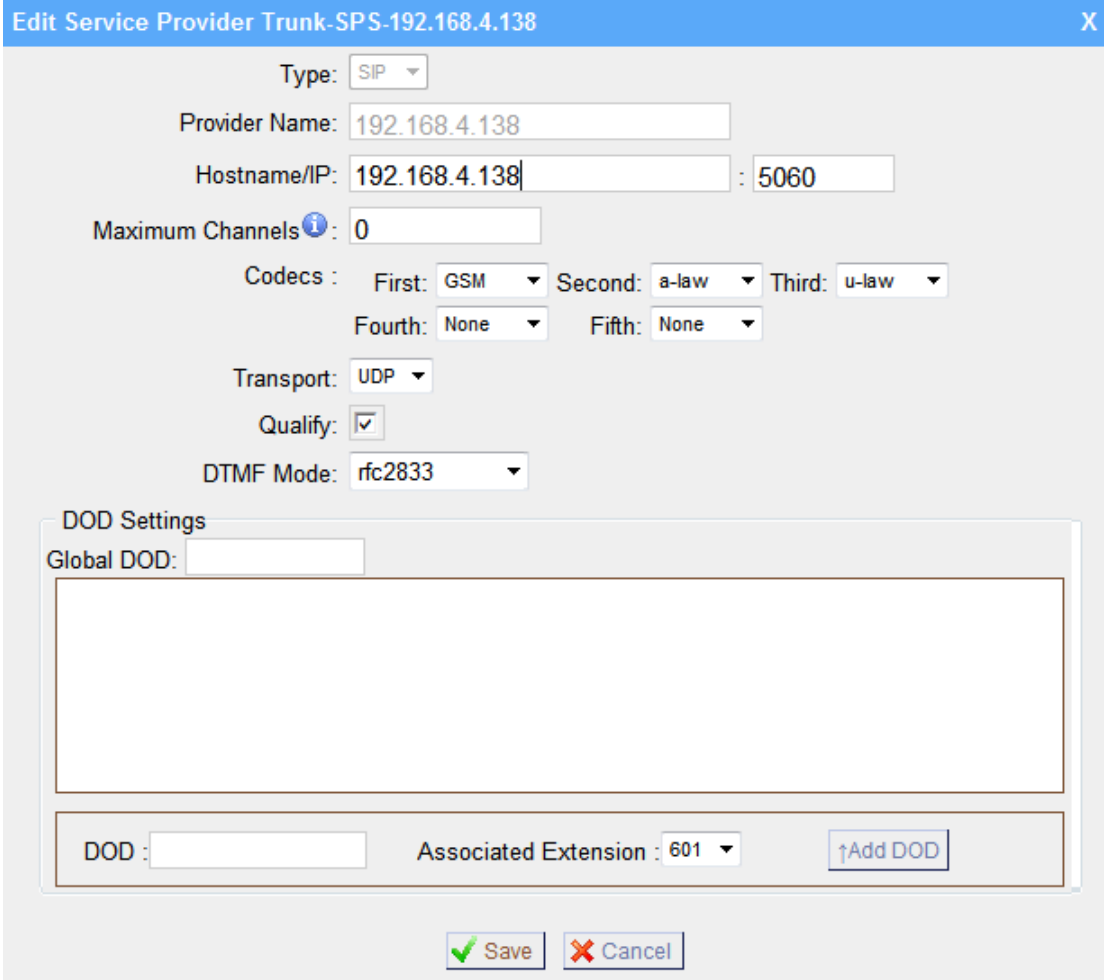

Edit Service Provider Trunk-SPS-192.168.4.138 X

Type: SIP

Provider Name: 192.168.4.138

Hostname/IP: 192.168.4.138 : 5060

Maximum Channels ⓘ: 0

Codecs : First: GSM Second: a-law Third: u-law
Fourth: None Fifth: None

Transport: UDP

Qualify:

DTMF Mode: rfc2833

DOD Settings

Global DOD:

DOD	Associated Extension	
<input type="text"/>	601	<input type="button" value="Add DOD"/>

Figure 3.3.2.6

3.3.3 Outbound Routes

Outbound routing defines how outgoing calls are processed through the trunks.

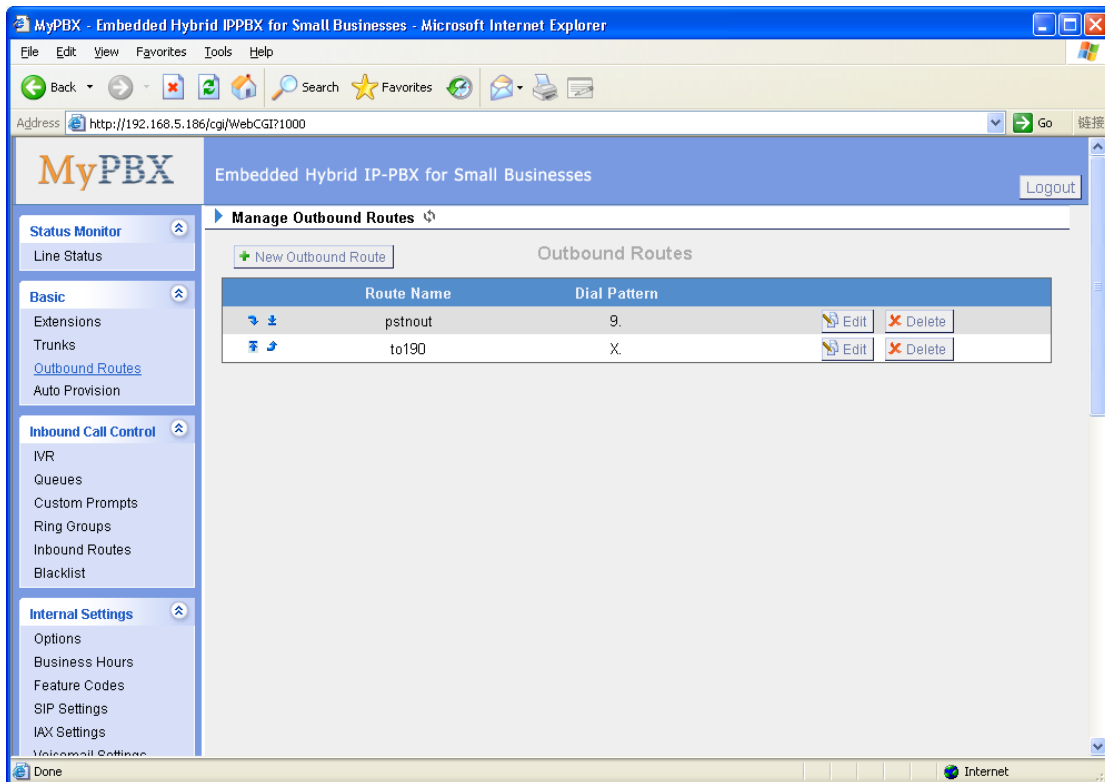


Figure 3.3.3

3.3.3.1 New Outbound Route

Click 'New Outbound Route' and fill in the corresponding information in the popup window.

1) General

•Route Name

Name of this Outbound Route . Ex: 'Local' or 'Long Distance' etc.

•Dial Pattern

Outbound calls that match this dial pattern will use this outbound route. There are a number of dial pattern characters that have special meanings:

X : Any Digit from 0-9

Z : Any Digit from 1-9

N : Any Digit from 2-9

[12345-9] : Any digit in the brackets (in this example, 1,2,3,4,5,6,7,8,9)

The '.' Character will match any remaining digits. For example, 9011. will match any phone number that starts with 9011, excluding 9011 itself.

The '!' will match none remaining digits, and causes the matching process to complete as soon as it can be determined that no other matches are possible.

Example 1: **NXXXXXX** will match any 7 digits phone number.

Example 2: **1NXXNXXXXXX** will match a phone number starting with a 1,

followed by a 3-digit area code, and then 6 digit number.

• **Strip digits from front**

Allows the user to specify the number of digits that will be stripped from the front of the phone number before the call is placed. For example, if users must press 0 before dialing a phone number, one digit should be stripped from the dial string before the call is placed.

• **Prepend these digits before dialing**

These digits will be prepended to the phone number before the call is placed. For example, if a trunk requires 10 digit dialing, but users are more comfortable with 7 digit dialing, this field could be used to prepend a 3 digit area code to all 7 digit phone numbers before calls are placed. When using analog trunks, a 'w' character may also be prepended to provide a slight delay before dialing.

• **Password**

The route password can be used to protect this route from being accessed without a password.

• **T.38 Support:**

Enable T38 fax in this outbound route (Only for SIP Trunk).

Memory Hunt

Round robin with memory, remembers which trunk was used last time, and then use the next available trunk to call out.

• **Member Extensions**

Defines the extensions that will be permitted to use this outbound route .

• **Member Trunks**

Defines the trunks that can be used for this outbound route .

New Outbound Route
X

Route Name i:

Dial Pattern i:

Strip i: digits from front

Prepend these digits i: before dialing

Password:

T.38 Support i:

Memory Hunt i:

Member Extensions i

Available Extensions		Selected
500(SIP) 501(SIP) 502(SIP) 503(SIP) 504(SIP) 505(SIP) 601(FXS) 602(FXS)	<input type="button" value="»»"/> <input type="button" value="→"/> <input type="button" value="←"/> <input type="button" value="««"/>	<div style="border: 1px solid #ccc; height: 100px;"></div>

Member Trunks i

Available Trunks		Selected
pstn7(FXO) pstn8(FXO) GSM3(GSM) BriTrunk11(BRI) BriTrunk12(BRI)	<input type="button" value="»»"/> <input type="button" value="→"/> <input type="button" value="←"/> <input type="button" value="««"/>	<div style="border: 1px solid #ccc; height: 100px;"></div>

Figure 3.3.3.1

3.3.4 Phone Provisioning

The Auto Provision sub menu provides users a method to Auto Provision IP Phone after the Express Setup process.

Note: Auto Provision functions fully test with these models:

Yealink (T12,T18,T20,T22,T26,T28,T32,T38,VP530,VP-2009)

Snom (300,320,360,370)

Polycom (IP 6000,IP 7000,IP 32X,IP33X,IP430,IP450,IP550,IP560,VVX1500)

Cisco (IP7940,IP7960)

Aastra(480i,480i CT,6757i,6757i CT, 6737i)

News:

When provisioning Yealink and Snom IP phone, MyPBX is not needed to be set as the only DHCP server any more.

Phone Provisioning ↻

Phone Provisioning

[General Settings for Yealink](#)

[Phone Book](#)

Configured Phone

ID	MAC Address	Manufacturer	Phone Type	Name	Extension	Enabled
1	001565113844	Yealink	--			
2	001565114094	Yealink	--			

Not Configured Phone

ID	MAC Address	Manufacturer	Phone Type
1	001565113844	Yealink	--
2	001565114094	Yealink	--

#	Name	Options
---	------	---------

Figure 3.3.4

3.3.4.1 General Settings for Yealink

In this page, you can configure it before provisioning Yealink IP phones, including the items like general preferences, codecs, remote phone book and firmware upgrade

Note: if firmware download server is enabled, IP phone will update the firmware automatically according the version and server you have configured during the provision process.

[Go Back to Phone Provisioning](#)

General Preferences

Language: English

Web server Type: HTTP&HTTPS

Admin Password: Fixed Prefix
admin

Time Zone: +8 China(Beijing)

Primary NTP Server: cn.pool.ntp.org

Secondary NTP Server: cn.pool.ntp.org

Daylight Saving Time: Disabled

Time Format: 12 Hour

Date Format: WWW MMM DD

Voicemail: Yes

PNP URL: Automatic Custom

Codecs

Audio Codec For T12,T18,T20,T22,T26,T28,T32,T38

Disable Codes		Enable Codes
G723_53 G723_63 G726-16 G726-24 G726-32 G726-40	<input type="button" value="»»"/> <input type="button" value="→"/> <input type="button" value="←"/> <input type="button" value="««"/>	PCMU PCMA G729 G722

Audio Codec For VP530 and VP-2009

Disable Codes		Enable Codes
G722 G723 GSM AACLC ILBC	<input type="button" value="»»"/> <input type="button" value="→"/> <input type="button" value="←"/> <input type="button" value="««"/>	PCMU PCMA G729

Video Codec For VP530 and VP-2009

Disable Codes		Enable Codes
	<input type="button" value="»»"/> <input type="button" value="→"/> <input type="button" value="←"/> <input type="button" value="««"/>	H264 H263 mp4v-es

Remote Phone Book

Phonebook URL	Phonebook Name
1: <input type="text"/>	<input type="text"/>
2: <input type="text"/>	<input type="text"/>
3: <input type="text"/>	<input type="text"/>
4: <input type="text"/>	<input type="text"/>
5: <input type="text"/>	<input type="text"/>

Firmware Download Server

Enabled: Disabled

T12 Firmware Name:

T18 Firmware Name:

T20 Firmware Name:

T22 Firmware Name:

T26 Firmware Name:

T28 Firmware Name:

T32 Firmware Name:

T38 Firmware Name:

VP530 Firmware Name:

VP-2009 Firmware Name:

Server Type: ftp http

HTTP URL:

Figure 3.3.4.1

3.3.4.2 Phone book

You can add your contacts here and provision them to your IP phone.

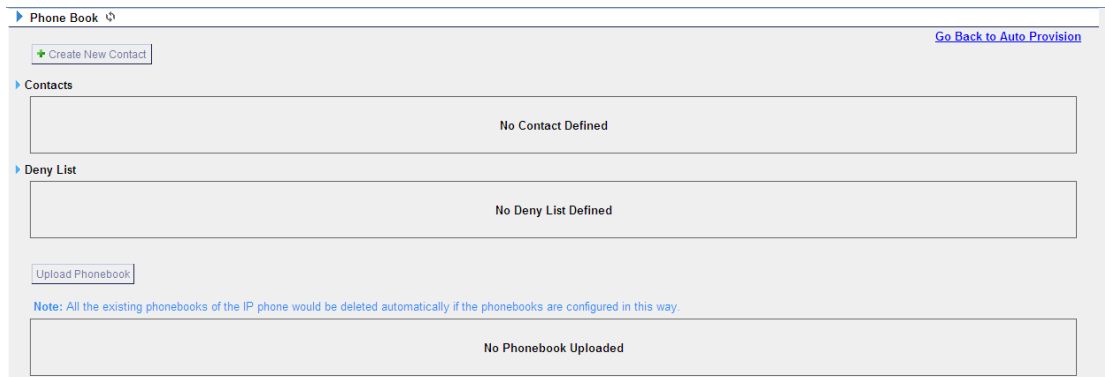


Figure 3.3.4.2

1) Add Contact

•Type

There are three types: None, VIP and Deny list (Blacklist).

•Group

There are 5 groups: None, Friends, Family, Work, Colleagues list.

•Nick Name

You can set a nick name for this number.

•Favorite

Only works with snom phone.

•Organization

Input the organization of this contact. Only works with snom phone.

•Title

Input the title of this contact. Only works with snom phone.

•Email

Input the email of this contact. Only works with snom phone.

•Birthday

Input the birthday of this contact. Only works with snom phone.

•First Name

Input the first name of this contact. Only works with snom phone.

•Family Name

Input the family of this contact. Only works with snom phone.

• **Office Number**

Input the office number here

• **Mobile Number**

Input the mobile number here

• **Home Number**


Input the home number here

• **Sub Number**

Add sub number of this contact. Only works with snom phone.

• **Note**

Take some note of this contact. Only works with snom phone.

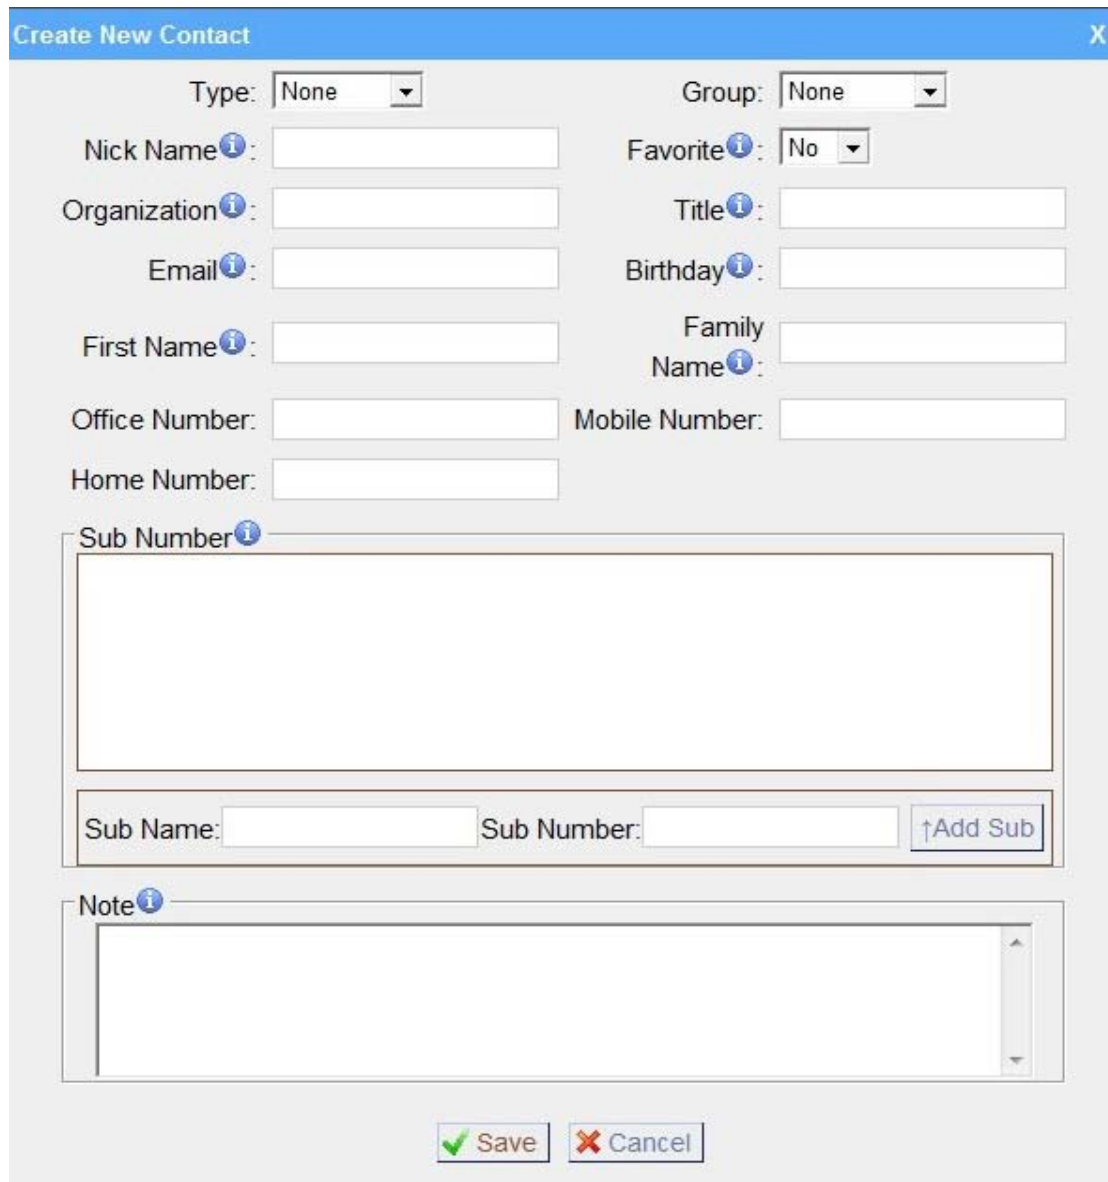

The screenshot shows a 'Create New Contact' dialog box with the following fields and controls:

- Type:
- Group:
- Nick Name:
- Organization:
- Email:
- First Name:
- Office Number:
- Home Number:
- Sub Number:
- Favorite:
- Title:
- Birthday:
- Family Name:
- Mobile Number:
- Note:

At the bottom, there are two buttons: and .

Figure 3.3.4.2.1

2) Upload Phonebook

You can upload a phonebook before auto provision, which will be provisioned to the IP phone when using auto provision feature to configure your IP phones. The format of phonebook should be *.xml.

Note: All the existing phonebooks of the IP phone will be replaced automatically if the phonebooks are configured in this way.

3.3.4.3 configure phone

Let's take provisioning yealink as an example

Create New Phone have two modes,

Create New phone in webpage and Upload the IP Phone's configure file.

1. Add new phone via webpage

Click 'Add Phone' and fill in the corresponding information in the popup window.

1) General

- **Enabled**

Choose yes or no to enable or disable this extension

- **MAC address**

Input the MAC address of IP phone

- **Name**

Put the name of this Phone here.

- **Manufacturer**

You can choose the Manufacturer of IP phone

- **Phone Type**

Choose the model of your phone. Only for snom phone

- **Call Waiting**

This call feature allows your phone to accept other incoming calls to an extension already in an active call.

- **Key as Send**

Configure the key as send, you choose # , * or disable it

- **Auto redial**

Enable the auto redial for IP Phone

•Auto answer

Configure if auto answer is allowed for IP phone

•Phone book

Enable the feature of phone book of IP phone

•Line

Extension: Selected the extension number for IP Phone.

Label: It is shown on the LCD for users to identify the account.

Line Active: You can choose on/off to enable/disable the account respectively.

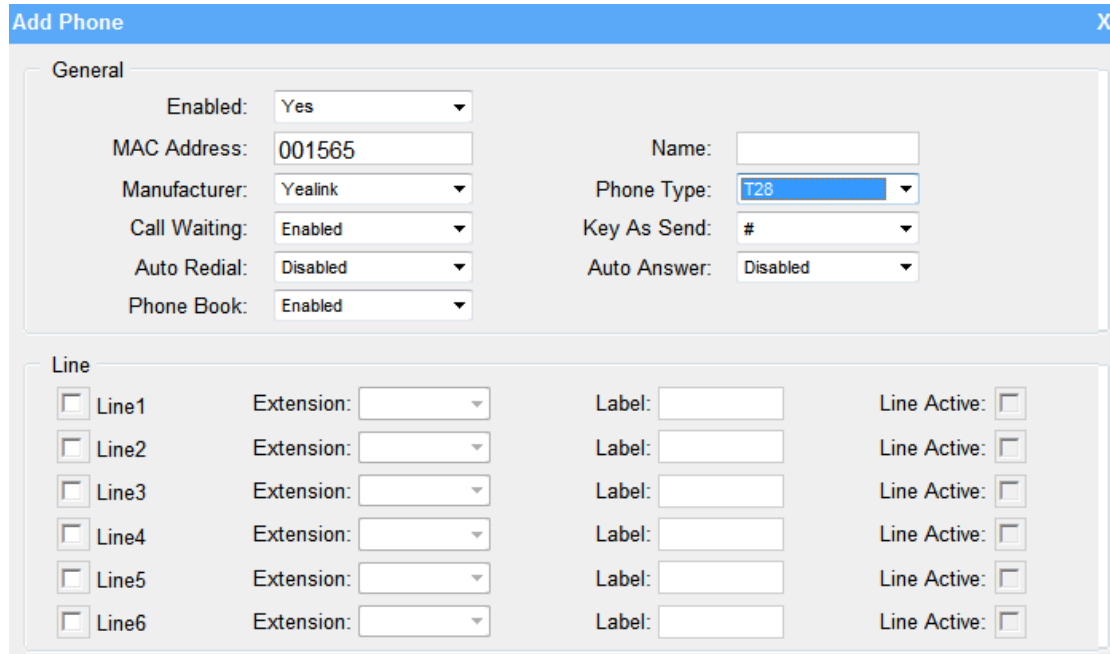


Figure 3.3.4.3

2) Audio codec

In this section, we can design the allowed codec for IP phone

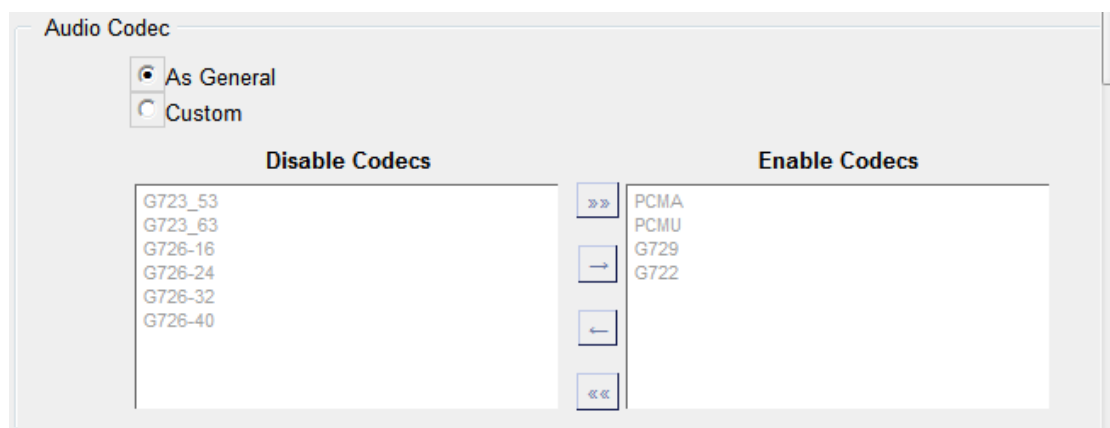


Figure 3.3.4.4

3) Line keys settings

Configure the DSS keys/Function Keys

Memory Key Settings ⌵

Memory Key	Type	Value	Line	Extension
<input type="checkbox"/> DSS Key1	N/A		line1	
<input type="checkbox"/> DSS Key2	N/A		line1	
<input type="checkbox"/> DSS Key3	N/A		line1	
<input type="checkbox"/> DSS Key4	N/A		line1	
<input type="checkbox"/> DSS Key5	N/A		line1	
<input type="checkbox"/> DSS Key6	N/A		line1	
<input type="checkbox"/> DSS Key7	N/A		line1	
<input type="checkbox"/> DSS Key8	N/A		line1	
<input type="checkbox"/> DSS Key9	N/A		line1	
<input type="checkbox"/> DSS Key10	N/A		line1	

Line Keys Settings ⌵

Line Keys Settings	Type	Value	Label	Line	Extension
<input type="checkbox"/> Line Key 1	N/A			Line1	
<input type="checkbox"/> Line Key 2	N/A			Line2	
<input type="checkbox"/> Line Key 3	N/A			Line3	
<input type="checkbox"/> Line Key 4	N/A			Line4	
<input type="checkbox"/> Line Key 5	N/A			Line5	
<input type="checkbox"/> Line Key 6	N/A			Line6	

Figure 3.3.4.5

3.3.4.3 Not configured phone

In this section, MyPBX will scan all the supported IP phones and display here, we can click the 'MAC address' of IP phone and input the corresponding information in the popup window, like the picture shows below

Add Phone
X

General

Enabled: <input type="text" value="Yes"/>	Name: <input type="text"/>
MAC Address: <input type="text" value="001565113844"/>	Phone Type: <input type="text" value="T12"/>
Manufacturer: <input type="text" value="Yealink"/>	Key As Send: <input type="text" value="#"/>
Call Waiting: <input type="text" value="Enabled"/>	Auto Answer: <input type="text" value="Disabled"/>
Auto Redial: <input type="text" value="Disabled"/>	
Phone Book: <input type="text" value="Enabled"/>	

Line

<input type="checkbox"/> Line1	Extension: <input type="text"/>	Label: <input type="text"/>	Line Active: <input type="checkbox"/>
--------------------------------	---------------------------------	-----------------------------	---------------------------------------

Audio Codec

As General
 Custom

Disable Codecs		Enable Codecs
G723_53 G723_63 G726-16 G726-24 G726-32 G726-40	<input type="button" value="»»"/> <input type="button" value="→"/> <input type="button" value="←"/> <input type="button" value="««"/>	PCMA PCMU G729 G722

Line Keys Settings ▼

Figure 3.3.4.6

3.3.4.4 Upload a file

Click 'Upload a file' and choose the configure file of IP phone in the popup window.

Note: the file format must be .cfg

Please edit the configuration files in advance before uploading.

3.4 Inbound Call Control

3.4.1 IVR

When there's an inbound call aims at Auto Attendant, MyPBX will play an IVR recording and route the caller to the requested destination (for example, 'Welcome to XX company, for sales press 1, for technical support press 2, for operator press 0, etc'). The system will transfer the call to corresponding extension according to DTMF digits inputted by the user.

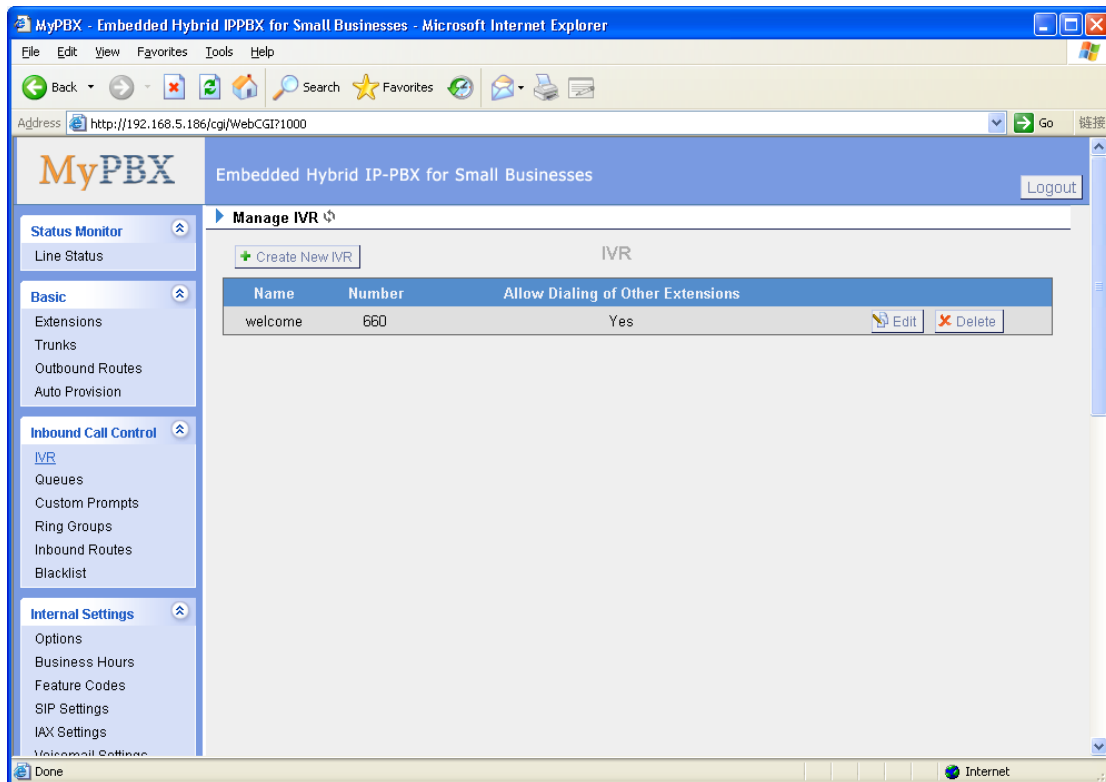


Figure 3.4.1

3.4.1.1 Create IVR

Click 'Create New IVR'.

1) General

•Number

MyPBX treats IVR as an extension; you can dial this extension number to reach the IVR.

•Name

A name for the IVR

•Prompt

The prompt recording that will be played when this IVR is reached.

•Repeat Count

The number of times that the selected IVR prompt will be played.

•Key Timeout

Wait for the user to enter a new extension for a specified number of seconds.

•Allow Dialing of Other Extensions

Allow the caller to dial other extensions other than the ones explicitly defined.

2) Key Press Events


A list of actions that can be performed depending on the digit dialed by the user .

•Time Out

Defines the timeout action . A timeout occurs after the IVR prompt has finished playing for the number of times specified by the 'Repeat Count' field.

•Invalid

Defines the invalid action . The invalid action is triggered if the user enters a DTMF digit that is not defined for this IVR.

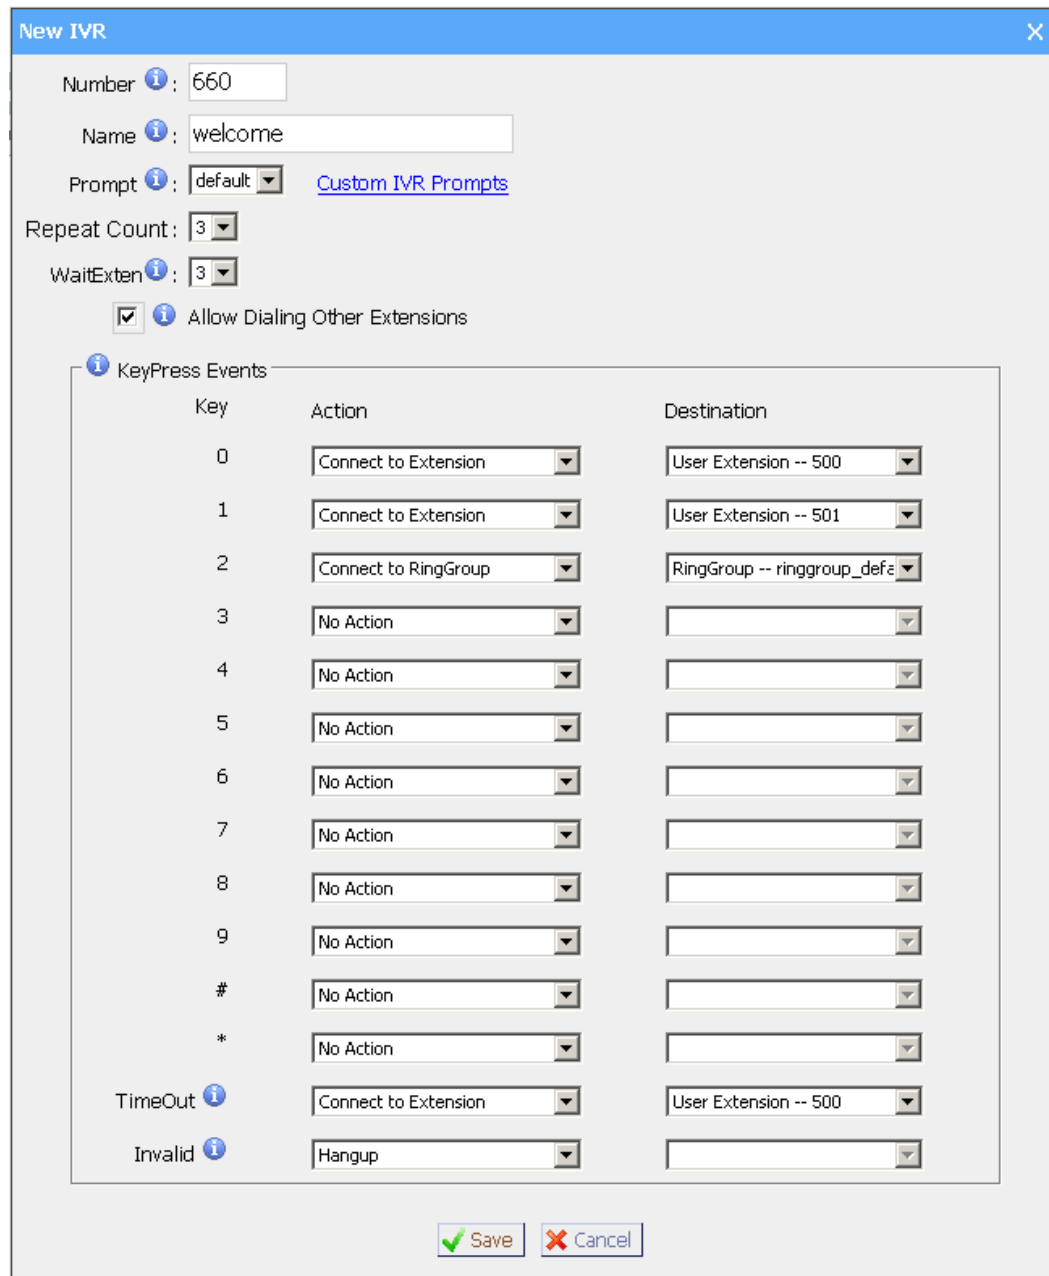

The screenshot shows the 'New IVR' configuration window with the following settings:

- Number: 660
- Name: welcome
- Prompt: default (with a link to 'Custom IVR Prompts')
- Repeat Count: 3
- WaitExten: 3
- Allow Dialing Other Extensions

The 'KeyPress Events' table is configured as follows:

Key	Action	Destination
0	Connect to Extension	User Extension -- 500
1	Connect to Extension	User Extension -- 501
2	Connect to RingGroup	RingGroup -- ringgroup_defa
3	No Action	
4	No Action	
5	No Action	
6	No Action	
7	No Action	
8	No Action	
9	No Action	
#	No Action	
*	No Action	
TimeOut	Connect to Extension	User Extension -- 500
Invalid	Hangup	

Buttons: Save (green checkmark), Cancel (red X)

Figure 3.4.1.1

3.4.2 Queues

Call Queues give users (i.e. call centers) an efficient means to have their calls answered in the order they were received to deliver top tier customer service.

Call queues allow calls to be sequenced to one or more agents.

Note: Dial 'Queue number + '*' to log in or 'Queue number + '**' to log out the queue. For example, if the queue number is '680', then agent can dial '680*' to log in or '680**' to log out.

1) General

•Queue Name

A name for the Queue.

•Queue Number

Use this number to dial into the queue, or transfer callers to this number to put them into the queue.

•Queue Password

You can require agents to enter a password before they can login to this queue.

•Queue Agent Timeout

The number of seconds an agent's phone can ring before we consider it a timeout.

•Queue Max Wait Time

The maximum number of seconds a caller can wait in a queue before being pulled out. (0 for unlimited).

•Queue Ring Strategy

This option sets the Ringing Strategy for this Queue. The options are

RingAll: Ring All available Agents simultaneously until one answers.

LeastRecent: Ring the Agent which was least recently called.

FewestCalls: Ring the Agent with the fewest completed calls.

Random: Ring a Random Agent.

RRmemory: Round Robin with Memory, Remembers where it left off in the last ring pass".

2) Agents

This selection shows all users. Selecting a user here makes them a agent of the current queue.

3) Caller Position Announcements

•Announce Position

Announce position of caller in the queue

• **Announce Hold Time**

Enabling this option causes MyPBX to announce the hold time to the caller periodically based on the frequency timer. Either yes or no; hold time will not be announced if <1 minute.

• **Frequency**

How often to announce queue position and estimated hold time.

Note: '0 seconds' means disable the announcement

4) Periodic Announcements

• **Prompt**

Select a prompt file to play periodically.

• **Frequency**

The frequency to announce a prompt to the caller.

5) Events

If a caller presses the key while waiting in the queue, this setting selects which action should process the key press.

6) Failover-Destination

Defines the failover action. A failover occurs after the user reach the Queue max wait time.

7) Others

• **Music On Hold**

Select the 'Music on Hold' Class for this Queue.

• **Leave When Empty**

This option controls whether callers already on hold are forced out of a queue that has no agents. There are two options.

Yes: Callers are forced out of a queue when no agents are logged in.

No: Callers will remain in a queue with no agents.

• **Join Empty**

This option controls whether callers can join a call queue that has no agents.

There are two options,

Yes: Callers can join a call queue with no agents or only unavailable agents

No: Callers cannot join a queue with no agents

The default option is No.

• **Agent Announcement**

Announcement played to the Agent prior to bridging in the caller.

• **Join Announcement**

Announcement played to callers once prior to joining the queue.

• **Retry**

The number of seconds we wait before trying all the phones again.

• **Wrap-up time**

How many seconds after the completion of a call an Agent will have before the Queue can ring them with a new call. The default is 30.

New Queues
✕

Queue Name i:

Queue Number i:

Queue Password i:

Queue Agent Timeout i:

Queue Max Wait Time i:

Queue Ring Strategy i:

Agents i

Available Agents		Selected
<div style="border: 1px solid #ccc; padding: 5px; min-height: 100px;"> 500(SIP) 501(SIP) 502(SIP) 503(SIP) 504(SIP) 505(SIP) 506(SIP) 507(SIP) </div>	<input type="button" value="»"/> <input type="button" value="→"/> <input type="button" value="←"/> <input type="button" value="«"/>	<div style="border: 1px solid #ccc; height: 100px;"></div>

Caller Position Announcements

Announce Position i:

Announce Hold Time i:

Frequency i:

Periodic Announcements

Prompt i:

Frequency i:

Events

Key:

Action:

Destination:

Failover-Destination

Action:

Destination:

Others

Music On Hold i:

Leave When Empty i:

Join Empty i:

Agent Announcement i:

Join Announcement i:

Retry i:

Wrap-up time i:

Figure 3.4.2

3.4.3 Custom Prompts

1. Record new Prompt

The administrator can use this screen to record custom prompts by doing the following:

- 1) Click 'Record New Custom Prompt' .
- 2) Input the desired file name on the popup window and choose an extension to call for recording (such as 500).
- 3) Click 'Record'. The selected extension will ring and you can pick up the phone to start recording.

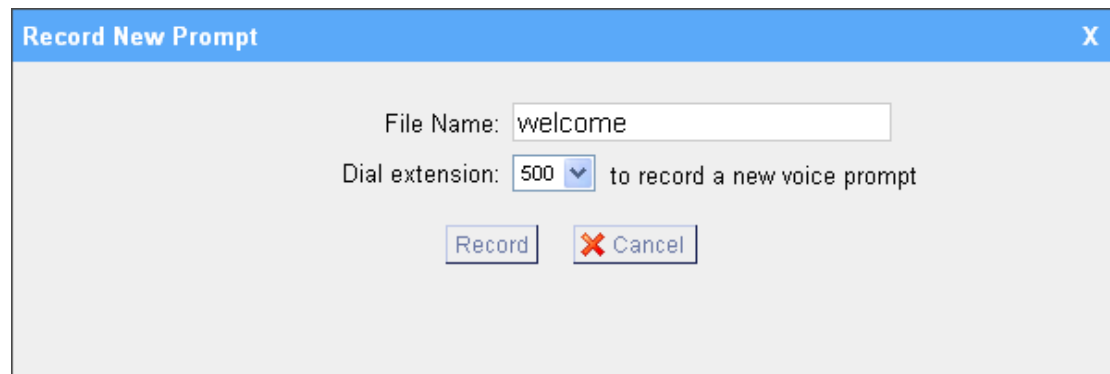


Figure 3.4.3.1

2. Upload Prompt

The administrator can also upload prompts by doing the following:

- 1) Click 'Upload Prompt'.
- 2) Click 'Browse' to choose the desired prompt.
- 3) Click 'Upload' to upload the selected prompt.

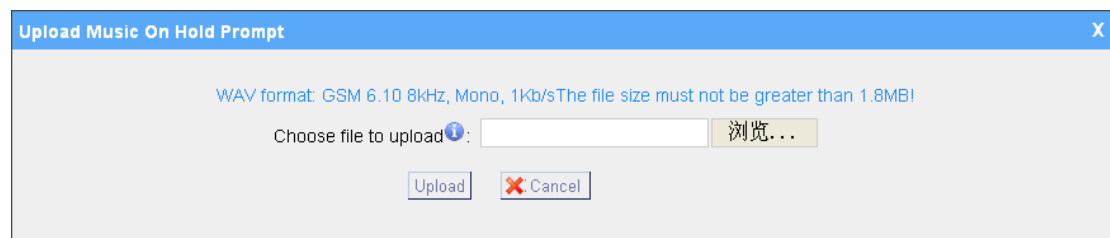


Figure 3.4.3.2

3.4.4 Ring Groups

Ring groups can be configured to balance the call traffic for multiple users and give callers a higher level of availability for incoming calls. Multiple ring methods and voicemail are supported.

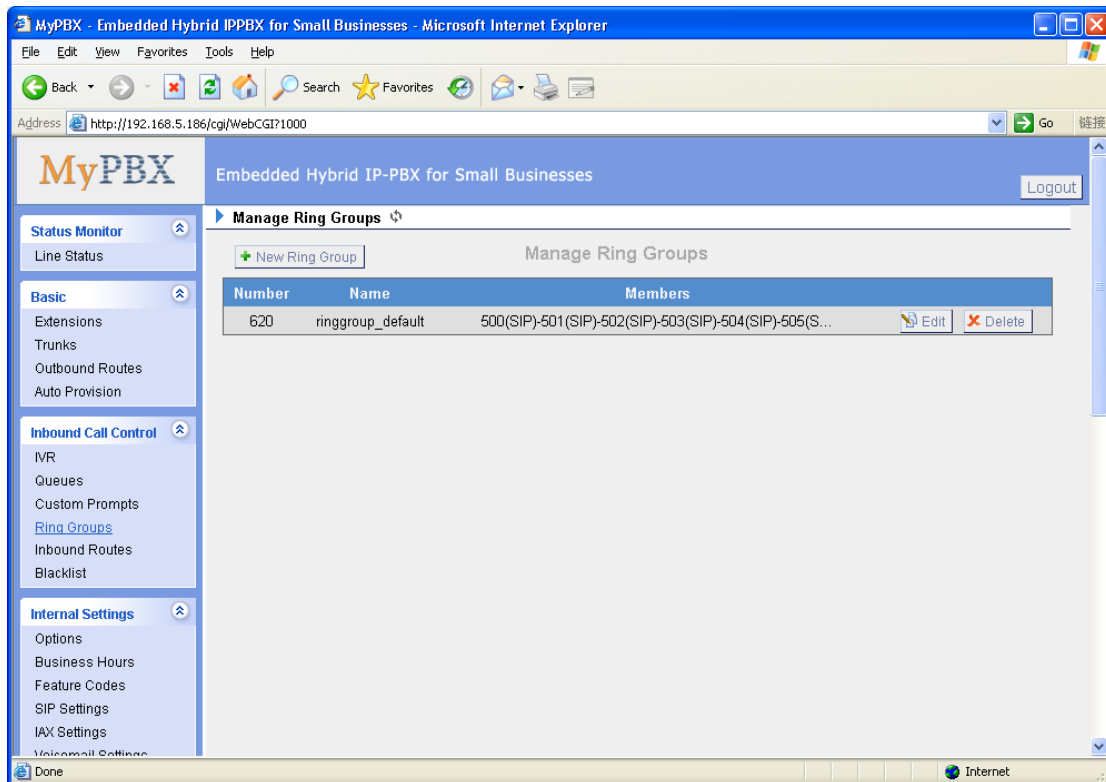


Figure 3.4.4

3.4.4.1 Create Ring Group

Click 'New Ring Group' to enter into the Manage Ring Groups page

1) General

•Ring Group Name

This option defines a name for this group, i.e. 'Sales'. 'Ring Group Name' is a label to help you identify this group in the group list.

•Ring Group Number

This option defines the numbered extension that can be dialed to reach this group.

•Strategy

This option sets the Ringing Strategy for this Group. The options are as follows:

1. Ring All Simultaneously: Ring all available Extensions simultaneously.
2. Ring Sequentially: Ring each extension in the group one at a time.

•Seconds to ring each member

1. If the strategy is 'Ring All Simultaneously', it means set the number of seconds to ring this group before routing the call according to the 'Destination if No Answer' settings.

2. If the strategy is 'Ring Sequentially', it means set the number of seconds to ring a single extension before moving onto the next one.

2) Ring Group Members

An extension can be made a member of this ring group by moving it into the 'Selected' box.

3) Destination If No Answer

When all members on this group fail to answer the call, system will handle the call according to the selected destination.



Figure 3.4.4.1

3.4.5 Inbound Routes

Inbound routing processes incoming call traffic to destination extensions during office hours or outside office hours.

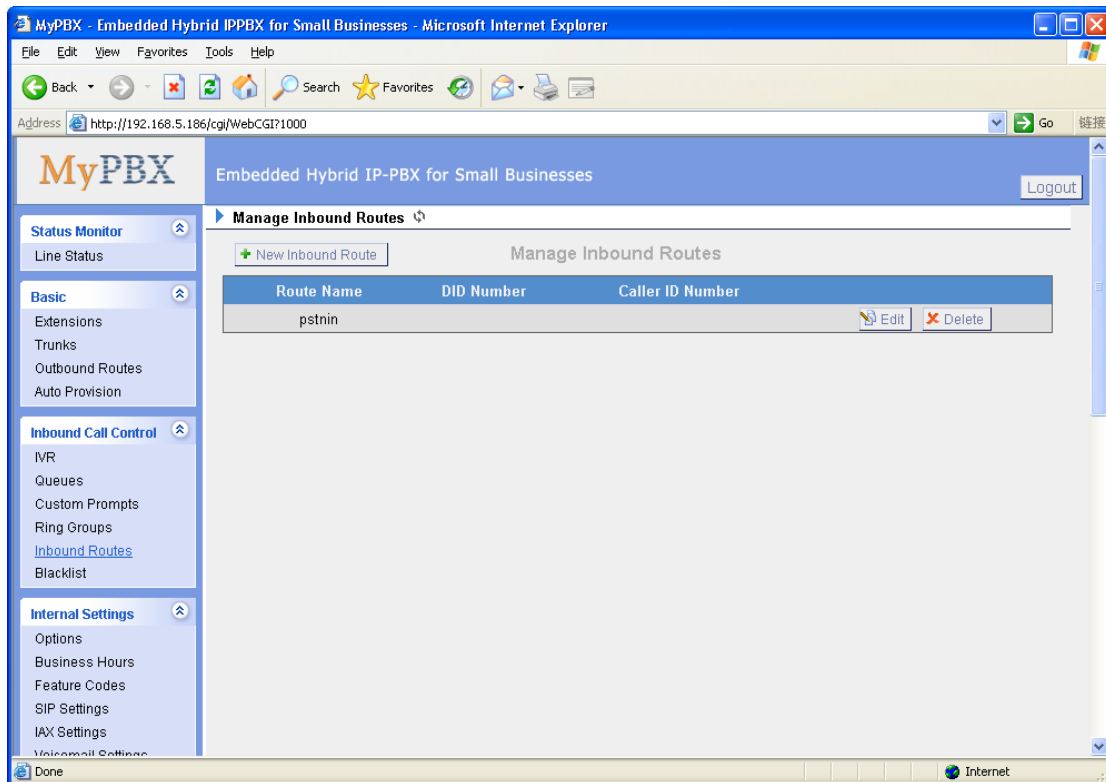


Figure 3.4.5

3.4.5.1 Create Inbound Route

Click 'New Inbound Route' to enter to the Manage Inbound Routes page. When an incoming call arrives, the system will first check 'fax detection', then 'Holidays', at last 'Business Days'.

1) General

•Route Name

A name for this inbound route. Ex: 'pstncallin' etc.

•DID Number

Define the expected DID Number if this trunk passes DID on incoming calls. Leave this field blank to match calls with any or no DID info. Only service provider, E1 trunks, BRI trunks or SIP trunks need to be configured with this setting.

You can also use pattern matching to match a range of numbers. The following patterns may be used:

X : Any Digit from 0-9

Z : Any Digit from 1-9

N : Any Digit from 2-9

[12345-9] : Any digit in the brackets (in this example, 1,2,3,4,5,6,7,8,9)

The '.' Character will match any remaining digits. For example, 9011. will match any phone number that starts with 9011, excluding 9011 itself.

The '!' will match none remaining digits, and causes the matching process to

complete as soon as it can be determined that no other matches are possible.

Example 1: **NXXXXXX** will match any 7 digits phone number.

Example 2: **1NXXNXXXXXX** will match a phone number starting with a 1, followed by a 3-digit area code, and then 6 digit number.

For more information, please refer to [Appendix G How to Use DID.](#)

•Extension

Define the extension for DID number. This field is only valid when you use BRI, SIP, SPS or SPX trunk for this inbound router. You can only input number and '-' in this field, and the format can be xxx or xxx-xxx. The count of the number must be only one or equal the count of the DID number.

•Caller ID Number

Define the Caller ID Number to be matched on incoming calls. Leave this field blank to match any or no DID info.

You can also use a pattern match (e.g. 2[345]X) to match a range of numbers.

The following patterns may be used:

X : Any Digit from 0-9

Z : Any Digit from 1-9

N : Any Digit from 2-9

[12345-9] : Any digit in the brackets (in this example, 1,2,3,4,5,6,7,8,9)

The '.' Character will match any remaining digits. For example, 9011. will match any phone number that starts with 9011, excluding 9011 itself.

The '!' will match none remaining digits, and causes the matching process to complete as soon as it can be determined that no other matches are possible.

Example 1: **NXXXXXX** will match any 7 digits phone number.

Example 2: **1NXXNXXXXXX** will match a phone number starting with a 1, followed by a 3-digit area code, and then 6 digit number.

•Distinctive Ringtone

MyPBX support mapping to custom ring tone files. For example, if you configure the distinctive ringing for custom ring tone to '**Family**', the ring tone will be played if the phone receives the incoming call.

•Enable Callback

You can enable the callback function of this inbound route. If you want to configure the callback function, please refer to [chapter 3.5.12](#)

How do I configure distinctive ring tones? Please refer to [APPENDIX E.](#)

Currently distinctive ringtone can be compatible with Yealink and Snom phone.

2) Member Trunks

This area allows you to select which trunks will be member trunks for this route. To make a trunk a member of this route, please move it to the 'Selected' box.

4) Business Days

Define where the calls will be routed during Business Days.

·Office Days

Select one defined business days office days.

·Office Hours Destination

Configure where to route the incoming calls during office hours.

·End Calls

Route the incoming calls to end calls, System will auto hang-up the call.

·Extension

Route the incoming calls to a specific extension.

·Voicemail

Route the incoming calls to extension's voicemail.

·IVR

Route the incoming calls to a specific IVR.

·Ring Group

Route the incoming calls to a specific Ring Group.

·Conference Room

Route the incoming calls to a specific Conference Room.

·DISA

Route the incoming calls to a specific DISA.

·Queues

Route the incoming calls to a specific Queue.

·Faxes

Route the incoming faxes to a specific extension's mail address.

Note: This function only supports T.38 faxes.

·Outbound Routes

Route the incoming calls to a specific outbound route.

This function is mainly used for the connection of two branches.

For example: Company A locates headquarters in the USA with a branch B in China. A and B both have MyPBX phone systems .

Now if staff of A would like to make a call to a telephone or mobile phone in China from the extension of A but via the FXS line of B, that can be done by this configuration.

·Non-office Hours Destination

Configure where to route the incoming calls during non-office hours.

5) During Holidays

Define where the calls will be routed during Holidays.

·Holiday

Select the which defined Holiday to use. When a time is defined in both Business Days and Holidays, it will be treated as Holidays.

·Destination

Configure where to route the incoming calls during holidays.

6) Fax Detection

Configure if detecting faxes in this inbound route.

·Destination

Configure where the faxes will be routed when faxes are detected.

·No detect

Do not detect faxes.

·Custom Email

Customize an E-mail address to receive the faxes. You should first configure the 'Voicemail Settings- >SMTP Settings for Voicemail' correctly before you use this option.

·Faxes

Send faxes to an extension. If choosing a FXS extension here, the fax will be sent to the FXS port selected, you should connect a fax machine to this FXS port. If Choosing a VoIP extension, the fax will be sent to the extension's voicemail as an attachment.

Note: If you receive faxes with custom Email address, the 'SMTP settings' of 'Voicemail Settings' should be configured successfully in advance. If you receive faxes with E-mail address configured in VOIP extension voicemail, you should first make sure the tested email to your email address works fine.

Create New Inbound Route
X

General

Route Name (i) :

DID Number (i) :

Extension (i) :

Caller ID Number (i) :

Distinctive Ringtone (i) :

Enable Callback : No Yes [Callback Settings](#)

Member Trunks (i)

Available Trunks		Selected
<div style="border: 1px solid #ccc; padding: 5px; min-height: 100px;"> 456(FXO) pstn5(FXO) pstn6(FXO) GSM9(GSM) BriTrunk7(BRI) BriTrunk8(BRI) </div>	<input type="button" value="»»"/> <input type="button" value="→"/> <input type="button" value="←"/> <input type="button" value="««"/>	<div style="border: 1px solid #ccc; padding: 5px; min-height: 100px;"> (Empty) </div>

Business Days

Office Days :

Destination :

Non-office Hours

Destination :

During Holidays

Holiday :

Destination :

Fax Detection

Destination :

Figure 3.4.5.1

3.4.6 Blacklist

Blacklist is used to block an incoming/outgoing call. If the number of incoming/outgoing call is registered in the number blacklist, the caller will hear the following prompt: "The number you have dialed is not in service. Please check the number and try again". The system will then disconnect the call.

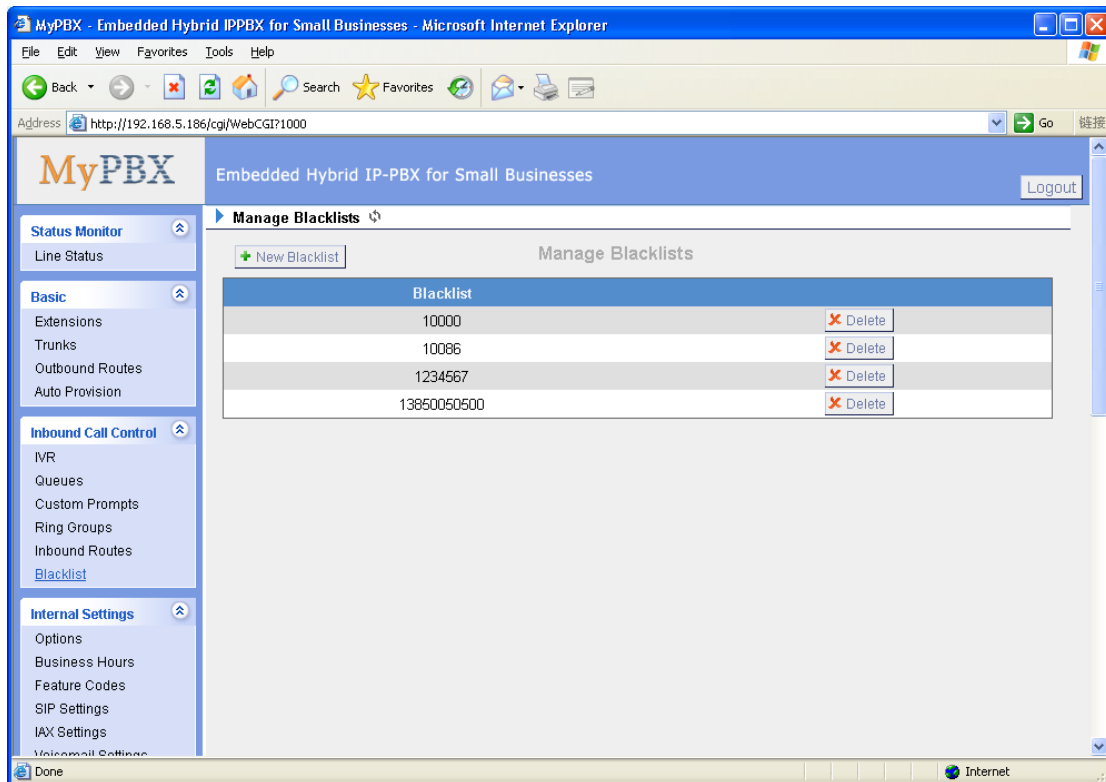


Figure 3.4.6

3.4.6.1 Create Blacklist

Click 'New Blacklist' to create a new number blacklist.

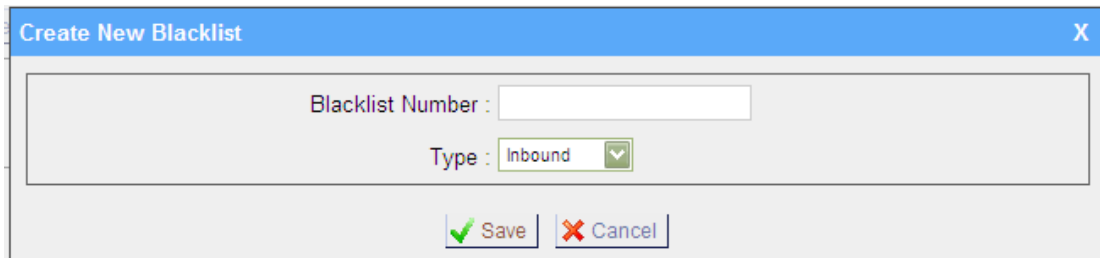


Figure 3.4.6.1

• **Blacklist number**

Enter the number you would like to block.

• **Type**

The number blocked for incoming or outgoing calls or both

3.5 Internal Settings

3.5.1 Options

1) General

•Ring Timeout

Number of seconds to ring a device before handling the call as per the extension's Follow Me settings . Default value is 30s.

•MAX call duration

The absolute maximum amount of time permitted for a call. A setting of 0 disables the timeout. Default value is 6000s.

•Maximum concurrent calls

Maximum concurrent calls limits. Default value 0 means no limit

•Music on hold

Used to set hold music for the system.

•Tone Region

Please select your country or nearest neighboring country to enable the default dial tone, busy tone, and ring tone for your region.

Note: please reboot the system to take it effect.

•HTTP bind port/Web Access Port

Port to use for HTTP sessions . Default: 80

Note: please reboot the system to take it effect.

•FXO Mode

FXO port's operation mode .

•Enable Follow Me Prompt

When set Follow me to Transfer to number on the extension page (e.g. when 500 is busy, transfer to 501), while 500 is busy, the call will be transferred to 501. If 'Enable Follow Me Prompt' choosing yes, there will be prompt before transferring the call. Otherwise, the call will be transferred directly without any prompt. Default: Yes.

•Virtual Ring Back Tone

It's only for GSM trunk. Once enabled, when the caller call out with GSM trunks, the caller will only hear the virtual ring back tone generated by the system before callee answers the call.

• Distinctive Caller ID

When incoming calls are routed from ring group/queue/IVR, the caller ID displays with the name of ring group / queue/IVR , for example 5503302(ringgroup_default)

Note: To display IVR's name, please press the key instead of the extension number directly.

•Follow Me Prompt

Configure whether to play a prompt 'please wait while trying to look at the person you are calling' when transfer a call by follow me settings.

•Invalid Phone Number Prompt

Configure the prompt when the dialed phone number is invalid.

•Busy Line Prompt

Configure the prompt when the dialed phone number is busy.

•Dial Failure Prompt

Configure the prompt when dial failed due to conjunction no-available channel.

2) Extension Preferences**•User Extensions**

The default value is 500 to 616

•Ring Group Extensions

The default value is 620 to 629

•Paging Group Extensions

The default value is 630 to 639

•Conference Extensions

The default value is 640 to 659

•IVR Extensions

The default value is 660 to 679

•Queue Extensions

The default value is 680 to 689

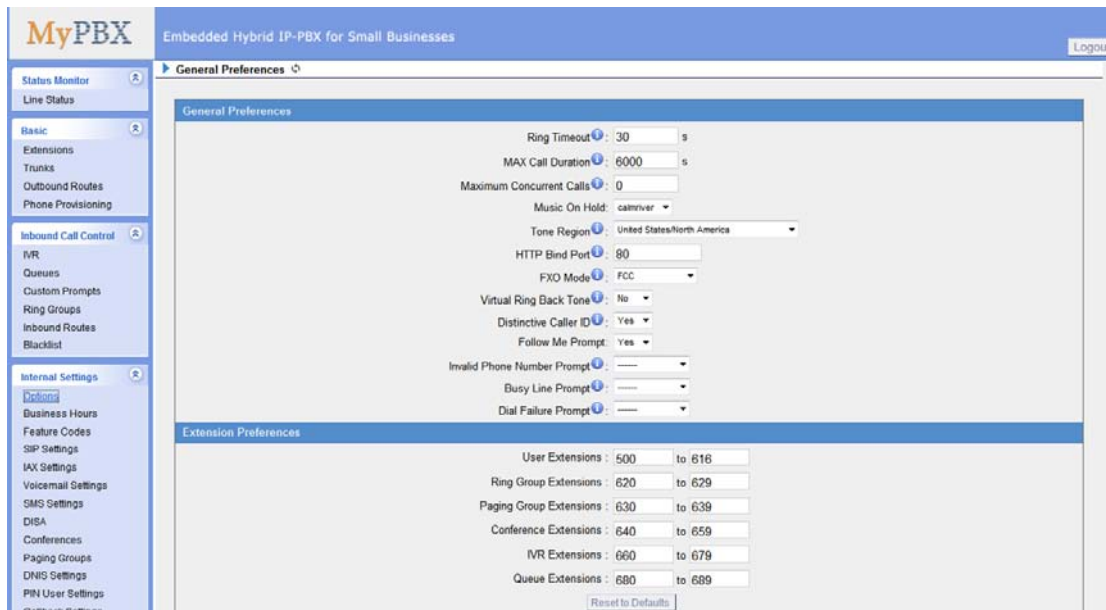


Figure 3.5.1

3.5.2 Business Hours

1) General

•Enable or Disable Business Hours

2) Others

•Enable Office Closed Timing

By dialing *81 (*81 is default) on an extension will force the office time closed for the device whatever the general setting is.

•Disable Office closed timing

By dialing *081 (*081 is default) on an extension will disable the Office Closed Timing.

3) Business Days

You can setup the business hours here.

4) Holidays

You can setup the holidays here.

If a time period is configured as both Holidays and office hours, it will be treated as Holidays.

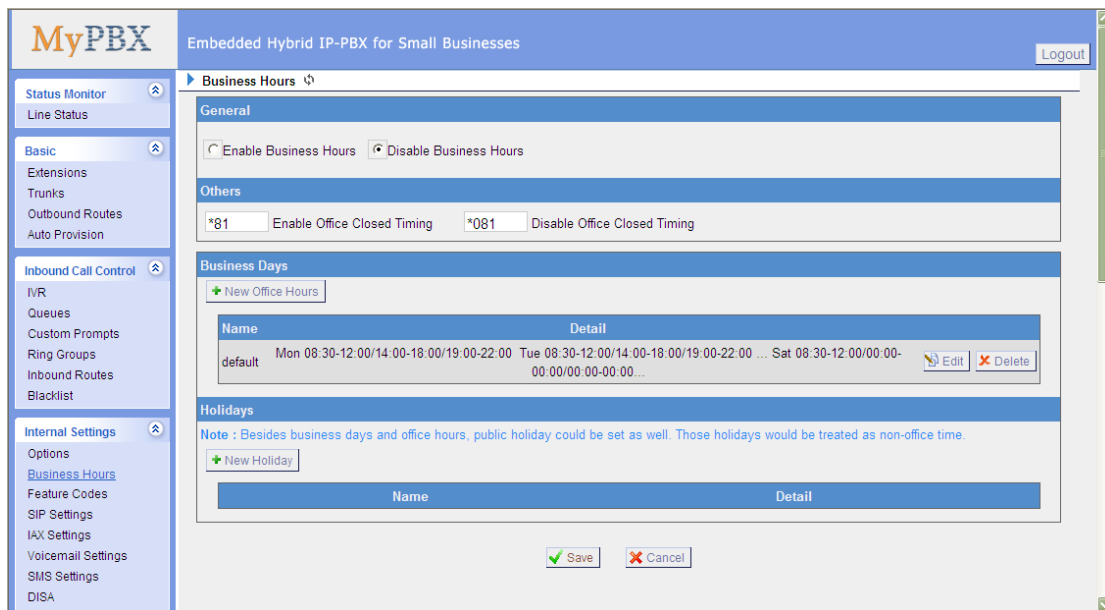


Figure 3.5.2

3.5.3 Feature Codes

1) General

•One Touch Record

A user may initiate or stop call recording by dialing *1 during a call. (*1 is default setting)

•Extension for Checking Voicemail

Users can check their Voicemail by dialing *2 on their phone (*2 is default setting).

•Voicemail main menu

Users can go to the main menu by dialing *02 (*02 is default setting).

•Attended Transfer

Users may transfer an incoming call by dialing *3 on their phone (*3 is default setting).

•Attended Transfer Timeout

The time out of transferring a call

•Blind Transfer

Users may blind transfer an incoming call by dialing *03 on their phone (*03 is default setting).

•Call Pickup

Users may pick up an incoming call by dialing *4 on their phone (*4 is default setting)

·Extension Pickup

Users may pick up a specific extension's incoming call by dialing *04+extension number on their phone (*04 is default setting)

·Intercom

Define the feature code that is used to dial an extension in intercom mode. For instance setting this value to *5 would allow you to initiate an intercom call with extension 501 by dialing *5501.

·Normal Spy

In this mode, you can only listen to the extension being spied, for example you can dial *90501 to monitor extension 501

·Whisper Spy

In this mode you can listen/whisper to the extension being spied, for example, dialing *91501 to listen to extension 501, you can also talk with 501 too.

·Barge Spy

In this mode, you can barge in both extensions involved the call, for example dialing *92501 to barge in and talk with all the extensions inside

2) Call Park Preferences

·Call Parking

User may park an incoming call on his own telephone by pressing '**6' (*6 is default setting)

·Extension range used to park calls

User may park an incoming call on a designated extension at first and then pick up the call again on any other extension.

·Number of seconds a call can be parked before it is recalled.

Defines the number of seconds that a call can be parked before it is recalled to the station that parked it .

3) Call Forwarding Preferences

·Reset to Defaults

Users may reset all call forward defaults by calling *70 on their phone (*70 is default setting).

Note: When reset to defaults. The call forwarding settings will be configured as follows:

Always forward: Disabled

Busy forward to Voicemail: Enabled

No answer forward to Voicemail: Enabled

Do not disturb: Disabled

·Enable Forward All Calls

Users may enable always forward by calling *71 on their phone (*71 is default setting)

·Disable Forward All Calls

Users may disable always forward by calling *071 on their phone (*071 is default setting)

·Enable Forward When Busy

Users may enable busy forward by dialing *72 on their phone (*72 is default setting)

·Disable Forward When Busy

Users may disable busy forward by calling *072 on their phone (*072 is default setting)

·Enable Forward No Answer

Users may enable no answer forward by calling *73 on their phone (*73 is default setting)

·Disable Forward No Answer

Users may disable no answer forward by calling *073 on their phone (*073 is default setting)

·Forward to number

Users may activate call forwarding by dialing this feature code, followed by the extension or phone number to forward all calls to.

Note: Users may activate Forward to number by dialing *74 + phone number. e.g.: by dialing *74501, all calls will be forwarded to extension 501.

·Forward to Voicemail

Users may forward the call to Voicemail by calling *074 on their phone (*074 is default setting)

·Enable Do Not Disturb

Users may enable do not disturb by calling *75 on their phone (*75 is default setting)

·Disable Do Not Disturb

Users may disable do not disturb by calling *075 on their phone (*075 is default setting)

setting)

▶ Feature Codes ↕

General			
<input checked="" type="checkbox"/>	One Touch Record ¹	*1	
<input checked="" type="checkbox"/>	Check Extension Voicemail	*2	
<input checked="" type="checkbox"/>	Voicemail Main Menu ¹	*02	
<input checked="" type="checkbox"/>	Attended Transfer	*3	
	Attended Transfer Timeout ¹	15	s
<input checked="" type="checkbox"/>	Blind Transfer	*03	
<input checked="" type="checkbox"/>	Call Pickup ¹	*4	
<input checked="" type="checkbox"/>	Extension Pickup ¹	*04	
<input checked="" type="checkbox"/>	Intercom ¹	*5	
<input checked="" type="checkbox"/>	Normal Spy ¹	*90	
<input checked="" type="checkbox"/>	Whisper Spy ¹	*91	
<input checked="" type="checkbox"/>	Barge Spy ¹	*92	
Call Parking Preferences			
	Call Parking	*6	
	Extension range used to park calls	690-699	(Ex: 690-699)
	Number of seconds a call can be parked for ¹	60	
Call Forwarding Preferences			
<input checked="" type="checkbox"/>	Reset to Defaults ¹	*70	
<input checked="" type="checkbox"/>	Enable Forward All Calls	*71	
<input checked="" type="checkbox"/>	Disable Forward All Calls	*071	
<input checked="" type="checkbox"/>	Enable Forward When Busy	*72	
<input checked="" type="checkbox"/>	Disable Forward When Busy	*072	
<input checked="" type="checkbox"/>	Enable Forward No Answer	*73	
<input checked="" type="checkbox"/>	Disable Forward No Answer	*073	
<input checked="" type="checkbox"/>	Forward to Number ¹	*74	
<input checked="" type="checkbox"/>	Forward to Voicemail	*074	
<input checked="" type="checkbox"/>	Enable Do Not Disturb	*75	
<input checked="" type="checkbox"/>	Disable Do Not Disturb	*075	

Figure 3.5.3

3.5.4 SIP Settings

1) General

•UDP Port

Port use for sip registrations, Default is 5060.

•TCP Port

Port use for sip registrations, Default is 5060.

•TLS Port

Port use for sip registrations, Default is 5061.

•RTP Port Start

Beginning of RTP port range

•RTP Port End

End of RTP port range

•DTMF Mode

Set default mode for sending DTMF. Default setting: rfc2833

•Max Registration/Subscription Time

Maximum duration (in seconds) of a SIP registration . Default is 3600 seconds.

·Min Registration/Subscription Time

Minimum duration (in seconds) of a SIP registration . Default is 60 seconds.

·Default Incoming/Outgoing Registration Time

Default Incoming/Outgoing Registration Time: Default duration (in seconds) of incoming/outgoing registration.

·Register Attempts

The number of SIP REGISTER messages to send to a SIP Registrar before giving up. Default is 8 times.

·Register Timeout

Number of seconds to wait for a response from a SIP Registrar before timed out . Default is 20 seconds.

·Calling Channel Codec Priority

Once enabled, when dialing out via SIP/SPS trunks, the codec of calling channel will be selected in preference. If not, MyPBX will follow the priority in your SIP/SPS trunks.

·Video Support

Support for SIP video or no. Default is yes.

·Max Bit Rate

Configure the max bit rate for video stream. The default: 384kb/s

·DNS SRV Look Up

Please enable this option when your SIP trunk contains more than one IP address.

·User Agent

To change the useragent parameter of asterisk, the default is 'MyPBX', you should change it if needed.

2) NAT

Note: Configuration of this section is only required when using remote extensions.

·Enable STUN

STUN (Simple Traversal of UDP through NATs) is a protocol for assisting devices behind a NAT firewall or router with their packet routing.

•STUN Address

The STUN server allows clients to find out their public address, the type of NAT they are behind and the internet side port associated by the NAT with a particular local port. This information is used to set up UDP communication between the client and the VOIP provider and so establish a call.

•External IP Address

The IP address that will be associated with outbound SIP messages if the system is in a NAT environment .

•External Host

Alternatively you can specify an external host, and the system will perform DNS queries periodically.

This setting is only required when your public IP address is not static. It is recommended that a static public IP address be used with this system. Please contact your ISP for more information.

•External Refresh Interval

If an external host has been supplied, you may specify how often the system will perform a DNS query on this host. This value is specified in seconds.

•Local Network Identification

Used to identify the local network using a network number/subnet mask pair when the system is behind a NAT or firewall .

Some examples of this are as follows:

'192.168.0.0/255.255.0.0' : All RFC 1918 addresses are local networks;

'10.0.0.0/255.0.0.0' : Also RFC1918;

'172.16.0.0/12': Another RFC1918 with CIDR notation;

'169.254.0.0/255.255.0.0' : Zero conf local network.

Please refer to RFC1918 for more information.

•NAT Mode

Global NAT configuration for the system . The options for this setting are as follows:

Yes = Use NAT. Ignore address information in the SIP/SDP headers and reply to the sender's IP address/port.

No = Use NAT mode only according to RFC3581.

Never = Never attempt NAT mode or RFC3581 support.

Route = Use NAT but do not include rport in headers.

•Allow RTP Reinvite

By default, the system will route media streams from SIP endpoints through itself. Enabling this option causes the system to attempt to negotiate the endpoints to route packets to each other directly, bypassing the system. It is not

always possible for the system to negotiate endpoint-to-endpoint media routing.

3) Codecs

A codec is a compression or decompression algorithm that used in the transmission of voice packets over a network or the Internet.

u-law: A PSTN standard codec, used in North America, that provides very good voice quality and consumes 64kbit/s in each direction (receiving and transmitting) of a VoIP call.

a-law: A PSTN standard codec, used outside of North America, that provides very good voice quality and consumes 64kbit/s in each direction (receiving and transmitting) of a VoIP call.

GSM: A wireless standard codec, used worldwide, that provides adequate voice quality and consumes 13.3kbit/s in each direction (receiving and transmitting) of a VoIP call. GSM is supported by many VoIP phones.

SPEEX: Speex is an Open Source/Free Software patent-free audio compression format designed for speech. The Speex Project aims to lower the barrier of entry for voice applications by providing a free alternative to expensive proprietary speech codecs. Moreover, Speex is well-adapted to Internet applications and provides useful features that are not present in most other codecs.

G.722: G.722 is a wideband speech coding algorithms which supports the bit rate of 64, 56 and 48kbps wideband. It's a broadband voice encoding of G series.

G.726: A PSTN codec, used worldwide, that provides good voice quality and consumes 32kbit/s in each direction (receiving and transmitting) of a VoIP call. G.726 is supported by some VoIP phones.

ADPCM, G.729A, H261, H263, H263p, H264,MPEG4.

Note: If you would like to use G.729, please enter your license.

4) QOS

QoS (Quality of Service) is a major issue in VOIP implementations. The issue is how to guarantee that packet traffic for a voice or other media connection will not be delayed or dropped due interference from other lower priority traffic. When the network capacity is insufficient, QoS could provide priority to users by setting the value.

5) Advanced Settings

·From Field

Where to get the caller ID in sip packet.

·To Field

Where to get the DID in sip packet.

·180 Ringing

It is set when the telecom provider needs. Usually it is not needed.

·Qualify

Send check alive packets to the sip provider.

·Remote Party ID

Whether send Remote-Party-ID on SIP header. Default no.

·Session -timers

Enable session-timer mode, default: yes

·Session-expires

The max refresh interval

·Session-minse

The min refresh interval, which mustn't be less than 90s

·Session-refresher

Choose session-refresher, the default is Uas

▶ SIP (Session Initiation Protocol) Configuration

General

Enable UDP Port: 5060
 Enable TCP Port: 5060
 Enable TLS Port: 5061
 RTP Port Start: 10000
 RTP Port End: 12000
 DTMF Mode: rfc2833
 Max Registration/Subscription Time: 3600
 Min Registration/Subscription Time: 60
 Default Incoming/Outgoing Registration Time: 120
 Register Attempts: 8
 Register Timeout: 20
 Calling Channel Codec Priority: Yes
 Video Support: Yes
 Max Bit Rate: 384 kb/s
 DNS SRV Look Up: No
 User Agent:

NAT

Note: Configuration of this section is only required when you use remote extensions.

Enable STUN:
 STUN Address:
 STUN Port:
 External IP Address:
 External Host:
 External Refresh Interval:
 Local Network Identification:
 NAT Mode: yes
 Allow RTP Re-invite: yes

Codecs

Available Codecs
 SPEEX
 G722
 G726
 ADPCM
 G729A
 MPEG4

Allowed Codecs
 u-law
 a-law
 GSM
 H261
 H263
 H263P
 H264

G.729 License Key:

Note: If you would like to use G.729, please enter your license key above.

QoS

Tos SIP: CS3 Cos SIP: 3
 Tos Audio: EF Cos Audio: 5
 Tos Video: AF41 Cos Video: 4

Advanced Settings

From Field: From
 To Field: INVITE
 180 Ringing:
 Remote Party ID: send trust
 Session-timers: Accept
 Session-expires: 1800 s
 Session-minse: 90 s
 Session-refresher: Uas

Figure 3.5.4

3.5.5 IAX Settings

1) General

•Bind Port

Port use for IAX2 registrations, Default is 4569.

·Bandwidth

Low/medium/high with this option you can control which codec to be used.

·Min Registration Time

Minimum duration (in seconds) of a IAX2 registration. Default is 60 seconds.

·Max Registration Time

Maximum duration (in seconds) of a IAX2 registration. Default is 1200 seconds.

2) Codecs

A codec is a compression or decompression algorithm that used in the transmission of voice packets over a network or the Internet.

u-law: A PSTN standard codec, used in North America, that provides very good voice quality and consumes 64kbit/s in each direction (receiving and transmitting) of a VoIP call.

a-law: A PSTN standard codec, used outside of North America, that provides very good voice quality and consumes 64kbit/s in each direction (receiving and transmitting) of a VoIP call.

GSM: A wireless standard codec, used worldwide, that provides adequate voice quality and consumes 13.3kbit/s in each direction (receiving and transmitting) of a VoIP call. GSM is supported by many VoIP phones.

SPEEX: Speex is an Open Source/Free Software patent-free audio compression format designed for speech. The Speex Project aims to lower the barrier of entry for voice applications by providing a free alternative to expensive proprietary speech codecs. Moreover, Speex is well-adapted to Internet applications and provides useful features that are not present in most other codecs.

G.726: A PSTN codec, used worldwide, that provides good voice quality and consumes 32kbit/s in each direction (receiving and transmitting) of a VoIP call. G.726 is supported by some VoIP phones.

ADPCM, G.729A, H261, H263, H263p, H264.

Note: If you would like to use G.729, please enter your license.

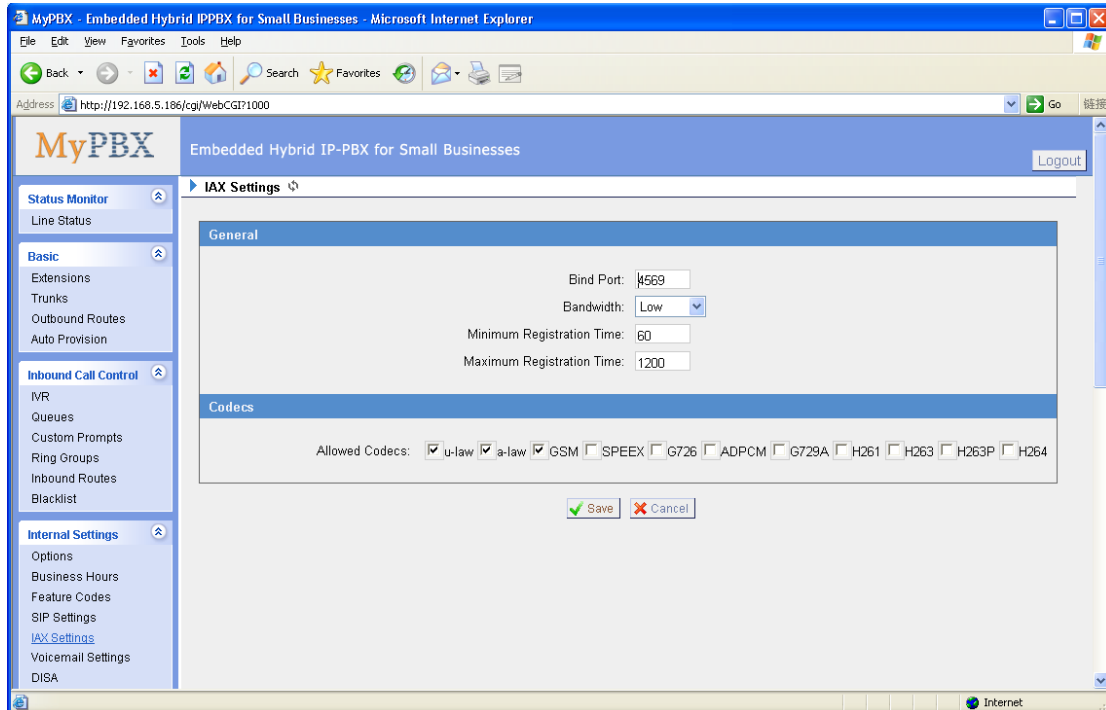


Figure 3.5.5

3.5.6 Voicemail Settings

1) General Voicemail Settings

a) Message Options

•Max Messages per Folder

Set the maximum number of messages that can be stored in a single voicemail box.

•Max Message Time

Set the maximum length of a single voicemail message.

•Min Message Time

Set the minimum length of a single voicemail message. Messages below this threshold will be automatically deleted.

•Ask Caller to Dial 5

If this option is set, the caller will be prompted to press 5 before leaving a message.

•Operator Breakout from Voicemail

If this option is set, the caller can jump out of the voicemail and go to the destination (IVR) you set by dialing "0".

b) Greeting Settings

•Busy Prompt

Greeting played when the extension called is busy.

Skip greeting: Do not play a greeting.

Play busy greeting: play the extension busy greeting.

•Unavailable Prompt

Greeting played when the extension called is Unavailable.

Skip greeting: Do not play a greeting.

Play Unavailable greeting: play the extension Unavailable greeting.

•Leave a Message Prompt

Greeting when ask the caller to dial 5 to leave a message.

Skip greeting: Do not play a greeting.

Play busy greeting: play the extension busy greeting.

Play Unavailable greeting: play the extension Unavailable greeting.

c) Playback Options

•Announce Message Caller ID

If this option is enabled, the Caller ID of the party that left the message will be played back before the voicemail message begins playing.

•Announce Message Duration

If this option is set, the duration of the message in minutes will be played back before the voicemail message begins playing.

. Announce Message Arrival Time

If this option is set, the arrival time of the message will be played back before the voicemail message begins playing.

. Allow Users to Review Messages

Allow callers to review their recorded message before sending it to voicemail.

2) SMTP Settings for Voicemail

Note: If you want to send voicemail messages as email attachments, please configure this section.

•E-mail Address

The E-mail Address that MyPBX will use to send voicemail.

•Password

The password for the email address used above

•SMTP Server

The IP address or hostname of an SMTP server that the MyPBX will connect to in order to send voicemail messages via email, i.e. mail.yourcompany.com.

•Port

SMTP Port: the default value is 25.

•Use SSL/TLS to send secure message to server

If the server of sending email needs to authenticate the sender, you need to select the check box.

Note: Must be selected for Gmail or exchange server.

After filling out the above information, you can click on the 'Test Account Settings' button to check whether the setup is OK.

- 1) If the test is successful, you can use the email safely.
- 2) If test failed, please check the above information is correct or network is proper.

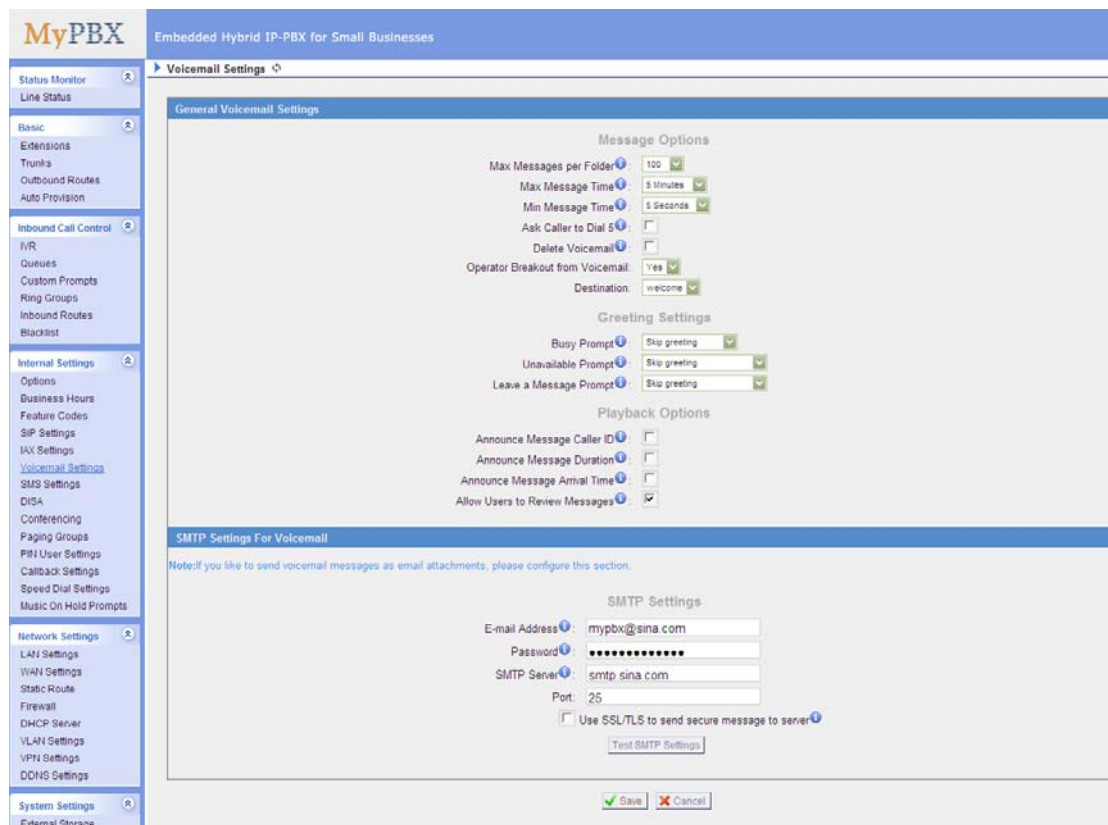


Figure 3.5.6

3.5.7 SMS Settings

MyPBX supports SMS to Email and Email to SMS. (Only for GSM trunks)

1) Enable SMS to Email

If you enable this, as soon as the GSM trunks receive small messages, MyPBX

will send the text of this message to the email addresses listed on the Email List. You can add email addresses to the Email List.

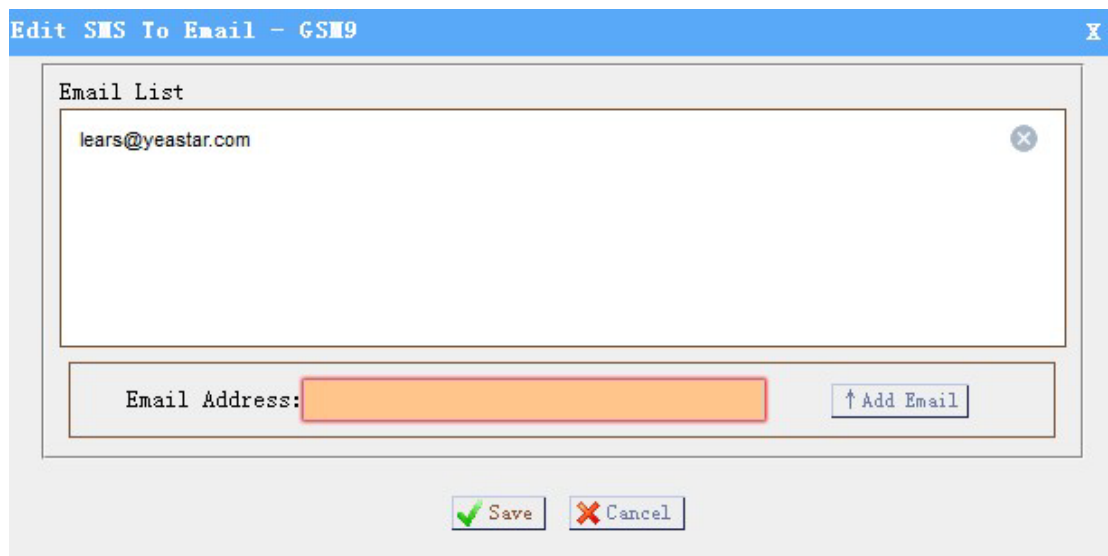


Figure 3.5.7.1

2) Enable Email to SMS

If you enable this, you can use MyPBX to send out message by sending an email to the specified address.

•Enable Country Code

If you want to add country code before the dialed numbers, please tick this.

•Country Code

The country code to be add before the dialed numbers.

•Receive mails every

The interval time of receiving mails from POP3 server.

•Access Code

This PIN code is used to verify the subject of the emails received. If the form of email passes the verification, it will be send out by SIM card. If not, this email will be deleted immediately.

3) Email Settings

Note:

1. If you want to use "SMS to Email", please configure POP3 setting.
2. If you configure the POP3 setting, MyPBX will download emails from the mail server regularly. Once downloaded, the emails will be deleted from the mail server.

•Email Address

This email address will be used to:

1. Send email to the addresses listed on "SMS to Email" setting.
2. Receive email and send the text of the email to the target mobile number by SMS.

Note: If you use gmail, just put your user name here. E.g. email address: test@gmail.com, you just put "test" here.

•Password

Input the password of this email here.

•SMTP Server (SMTP)

•SMTP Server Port

•Receive Server (POP3)

•Receive Server Port

If you want to know more about Email to SMS, please refer to [APPENDIX F](#)

▶ SMS Settings

SMS Settings

▶ Enable SMS To Email

GSM Trunk Name	GSM Port	Email List		
GSM9	9	chengeng930@163.com chengeng530@gmail.com chenge...		
GSM11	11	--		
GSM13	13	--		

▶ Enable Email To SMS

Email To SMS

Enable Country Code:

Country Code:

Receive mails every:

Access Code:

▶ Email Settings

Email Settings

Note:

1. If you want to use "SMS to Email", please configure POP3 setting.

2. If you configure the POP3 setting, MyPBX will download emails from the mail server regularly. Once downloaded, the emails will be deleted from the mail server.

Email Address:

Password:

SMTP Server (SMTP):

SMTP Server Port:

Receive Server (POP3):

Receive Server Port:

Use SSL/TLS for security on this server(SMTP)

Figure 3.5.7.2

3.5.8 DISA

DISA (Direct Inward System Access) allows someone calling in from outside the telephone switch (PBX) to obtain an 'internal' system dial tone and make calls as if they were using one of the extensions attached to the telephone switch. To use DISA, a user calls a DISA number, which invokes the DISA application. The DISA application in turn requires the user to enter a PIN number, followed by the pound sign (#). If the PIN number is correct, the user will hear dial tone on which a call may be placed. Obviously, this type of access has serious security implications, and great care must be taken not to compromise your security.

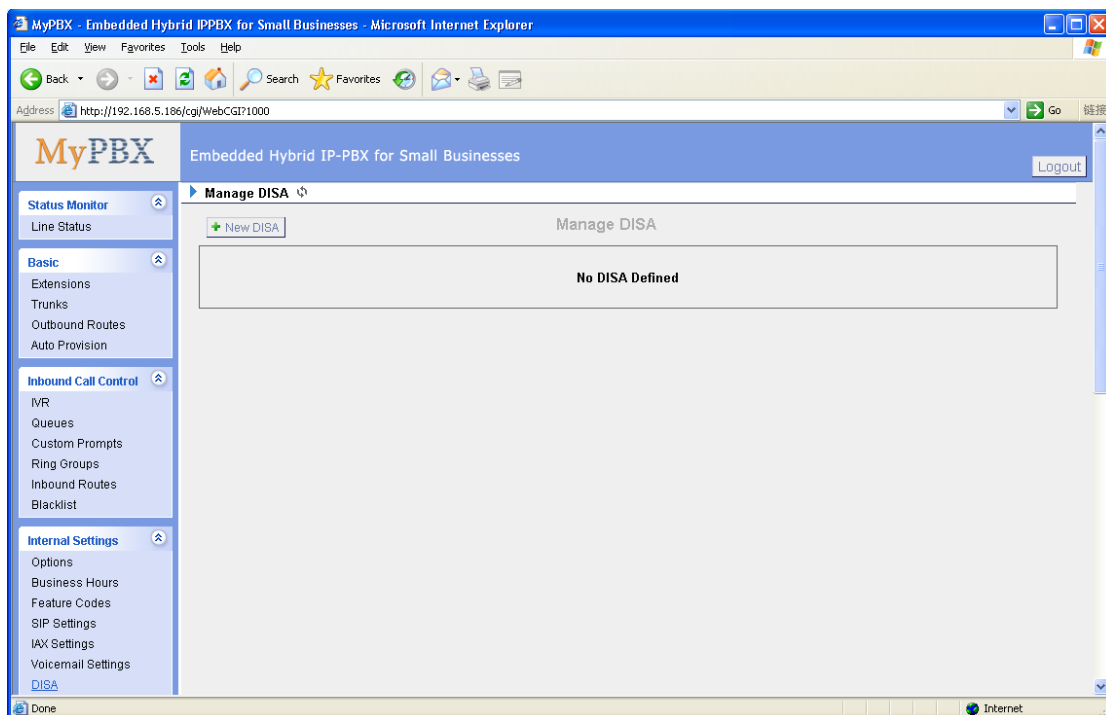


Figure 3.5.8.1

To add a new DISA application, click the New DISA button.

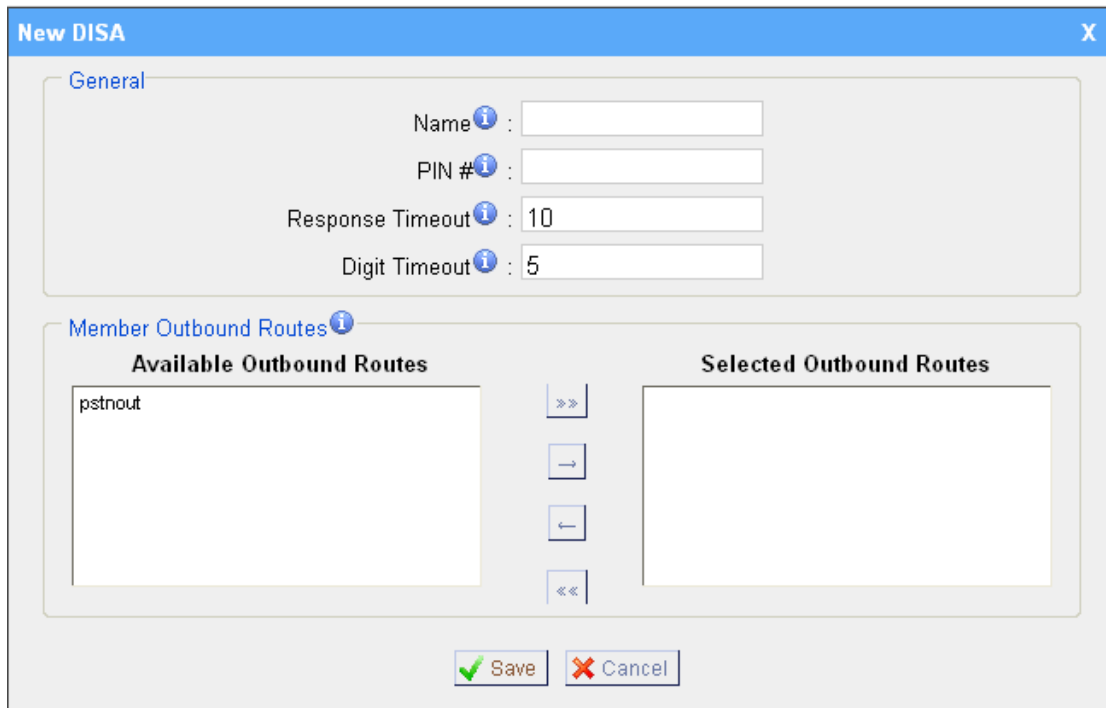


Figure 3.5.8.2

1) General

•DISA Name

Give this DISA application a name to help you identify it.

•PIN

The password for this DISA .

•Response Timeout

The maximum amount of time the system will wait before hanging up the call if the user has dialed an incomplete or invalid number. Default is 10 seconds.

•Digit Timeout

The maximum amount of time permitted between each digit when the user is dialing an extension number. Default is 5 seconds.

2) Member Outbound Routes

Used to set the outbound routes that can be accessed from this DISA .

3.5.9 Conferencing

Conference Calls increase employee efficiency and productivity, and provide a more cost-effective way to hold meetings.

•Extension


This is the number dialed to reach this Conference Room.

•Admin

Admin can kick a user out and can lock the conference room.

• **Pin #**

Set a PIN # that must be entered in order to access this conference room (i.e. 1234).

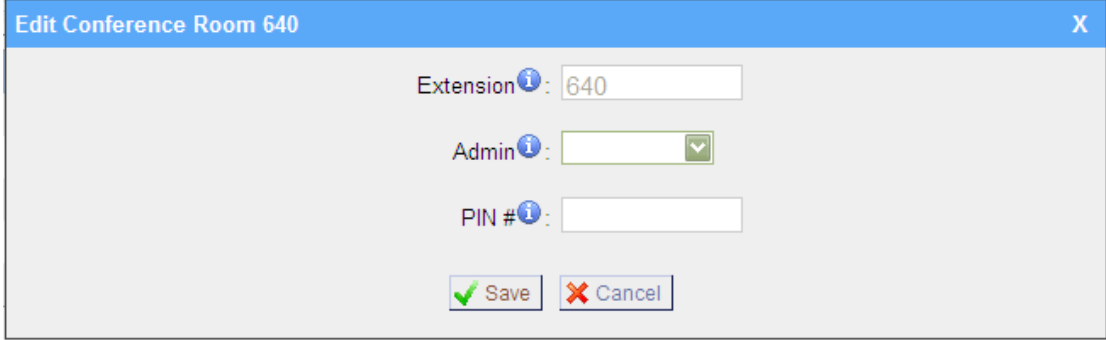

The screenshot shows a dialog box titled "Edit Conference Room 640". It has three input fields: "Extension" containing "640", "Admin" with a dropdown arrow, and "PIN #" which is empty. Below the fields are "Save" and "Cancel" buttons.

Figure 3.5.9

3.5.10 Paging Groups

Paging is used to make an announcement over the speakerphone to a phone or group of phones. Targeted phones will not ring, but instead answer immediately into speakerphone mode. Please note that this section is for configuring paging groups. If you would like to configure Intercom settings, please open the Other Settings -> Feature Codes screen.

This feature is supported by the following SIP phones:

Yealink's T28, T26, T22, T20, T10T, T9CM. Other SIP devices may also work with this feature but are not officially supported.

Note: A paging group can have a maximum of 20 members.

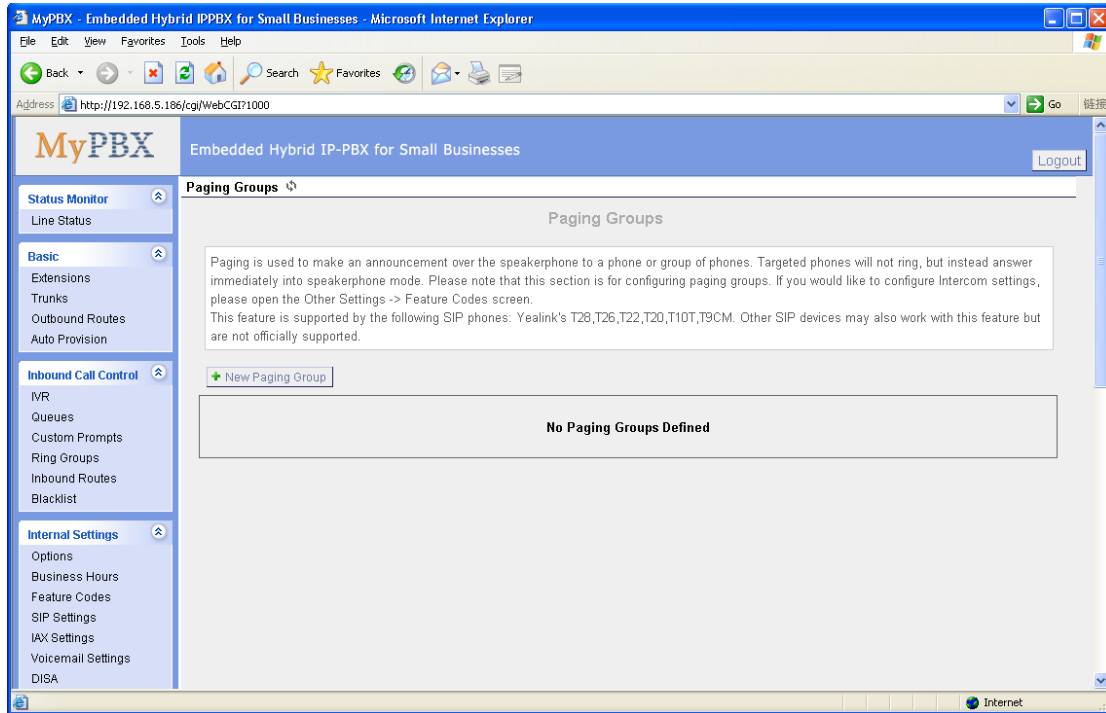


Figure 3.5.10.1

•Paging Group Number

Defines the numbered extension that may be dialed to reach this group.

•Duplex

Paging is typically one way for announcements only. Checking this will make paging duplex, allowing all users in the group to talk and be heard by all.

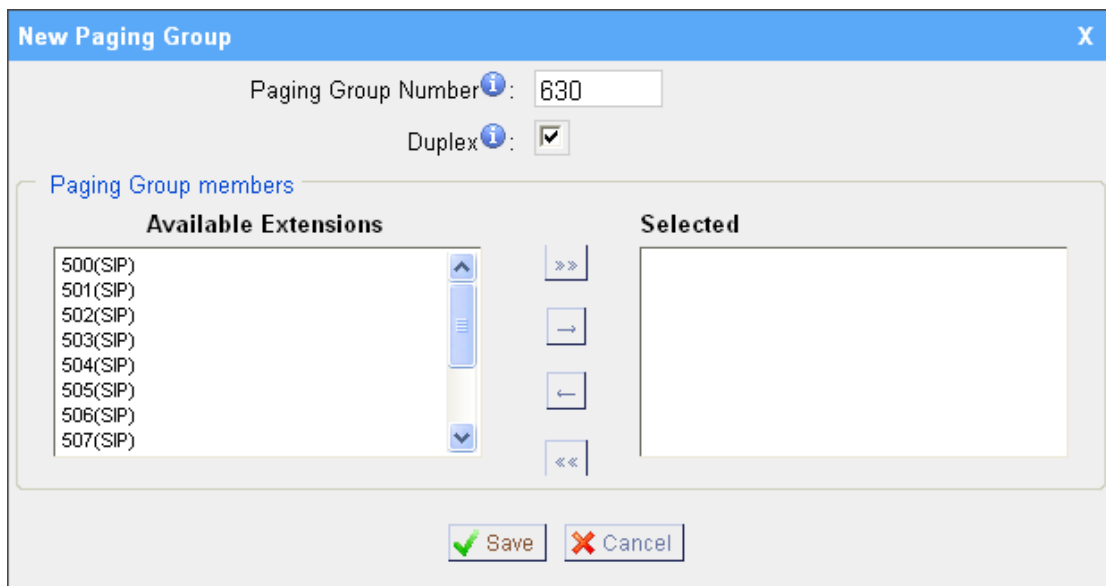



Figure 3.5.10.2

3.5.11 DNIS Settings

DNIS (Dialed Number Identification Service) is a telephone service that identifies for the receiver of a call the number that the caller dialed.

Note:

1. DID number is not available in PSTN/GSM/UMTS trunks
2. If DID is not configured here, all the calls via this trunk will show the DNIS instead of the original caller ID

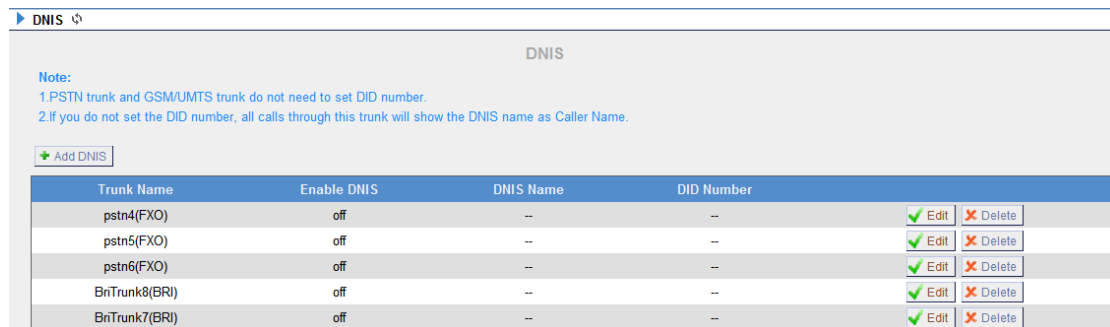

Trunk Name	Enable DNIS	DNIS Name	DID Number		
pstn4(FXO)	off	--	--		
pstn5(FXO)	off	--	--		
pstn6(FXO)	off	--	--		
BrTrunk8(BRI)	off	--	--		
BrTrunk7(BRI)	off	--	--		

Figure 3.5.11

3.5.12 PIN User Settings

PIN User are used to manage lists of PINs that can be used to access restricted features such as Outbound Routes. If user use PIN User call out, system will auto record the PIN in the call detail records.

1) Options

• **Access Code**

.Dial this code to access PIN.

• **Prompt for Entry**

Prompt caller enter the PIN Number.

• **Prompt for Entry Failure**

Prompt the caller when an invalid PIN is entered.

2) PIN User

MyPBX can store a number of PIN Users. PIN Users may be used to keep track of calls in relation to particular activities or clients. They can also be used to keep track of calls by particular users or sets of users.

- PIN entered are checked against those stored by the system. If an invalid PIN is entered, the PIN is requested again.
- The system administrator can configure certain numbers or types of numbers to require entry of a PIN before you can continue making a call to such a number.

- The system administrator can also configure you to have to enter a PIN before making any external call.

• **Name**

A character-based name for this PIN list, i.e. 'YeastarPIN'

• **PIN List**

Enter a list of one or more PINs, One PIN per line.

• **Outbound Route**

PIN User can use those outbound route to make call out.

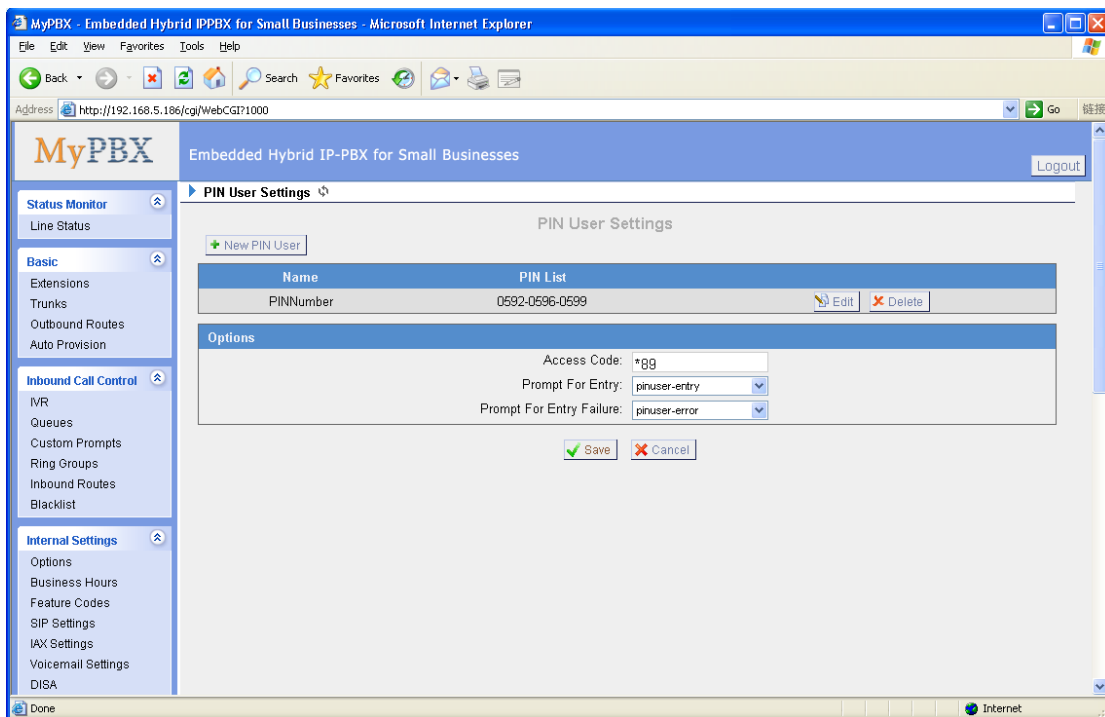


Figure 3.5.12

3.5.13 Callback Settings

MyPBX allows caller A to dial an inbound route number, and after hearing the ring, A can hang up the call or wait for MyPBX to cut off the call, then MyPBX will call A with this number. When A pick up the call, A can dial the number he wants to call; MyPBX will call the number with its outbound route.

Note:

1. If you'd like to use callback feature, please make sure if it's enabled on the inbound route setting panel.
2. No callback rules needed to be set if the trunk supports call back with the caller ID directly.

• **Allow All Numbers**

If you want to apply Callback function to all incoming numbers, please tick Allow All numbers.

Follow the step to use this function.

Step 1: Enable Callback.

Inbound Routes – Choose “Yes” on “ Enable Callback” to enable this function.

Refer to **chapter 3.4.5.1**

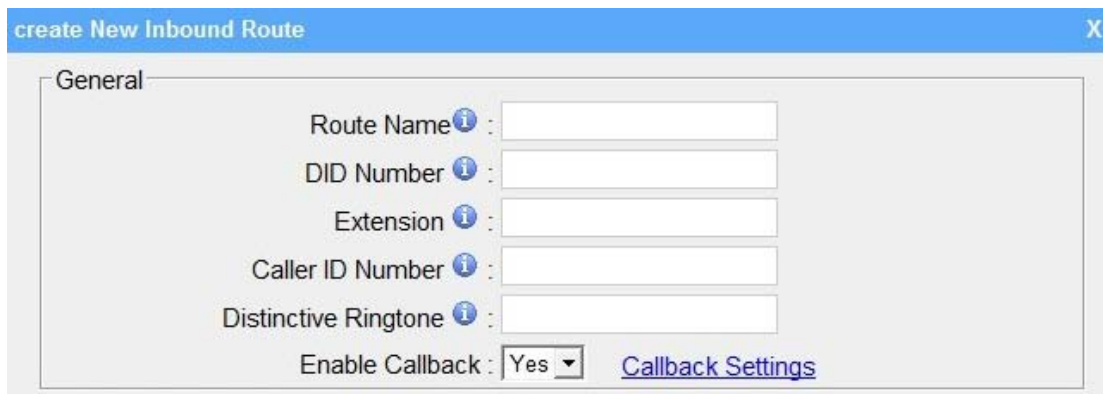


Figure 3.5.13.1

Step 2: Create Callback number

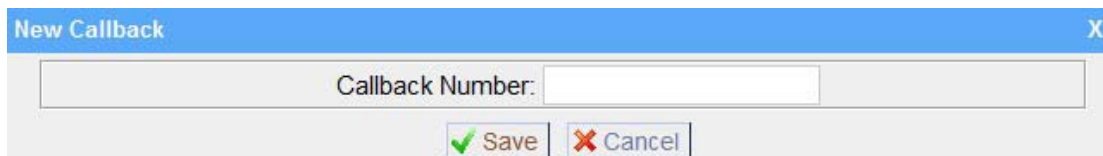


Figure 3.5.13.2

Step 3: Create Callback Rules

You will need to create callback rules when the system should strip or add digits.

•Trunk Name

Choose the trunk with callback rules

•Strip digits from front

Define how many digits will be stripped from the call in number before the callback is placed. For example, when you call from number 123456789 into MyPBX, the caller ID is 0123456789, but you can only call 123456789 successfully from MyPBX trunk. You should configure number 0123456789 as the call back number and strip 1 digit before the callback is placed

•Prepend before dialing

Define digits added before a callback number before the callback is placed. For example, the call in number (Caller ID) is 123456789, MyPBX need to send 9123456789 to its trunk when call to this number. You should configure

123456789 as the call back number and add 9 before the callback is placed. You can add 'w' for analog trunks for some delay too.

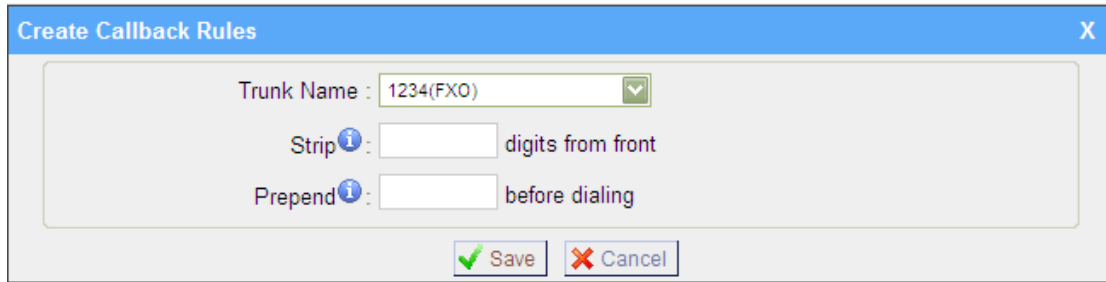


Figure 3.5.13.3

3.5.14 Speed Dial Settings

1) Options

• **The prefix of speed dial**

The prefix should be dialed before the speed dial number. Default is *99.

2) Add new speed dial.

• **Source Number**

The speed dial number.

• **Destination Number**

The number you want to call.

e.g. The source number is "123". The destination number is 5503305. The prefix number is *99. You can use an extension with any type to dial *99123, then it will call to number 5503305.

Note: Don't forget to add the outbound dial prefix if you would like to dial the speed dial number through trunk.

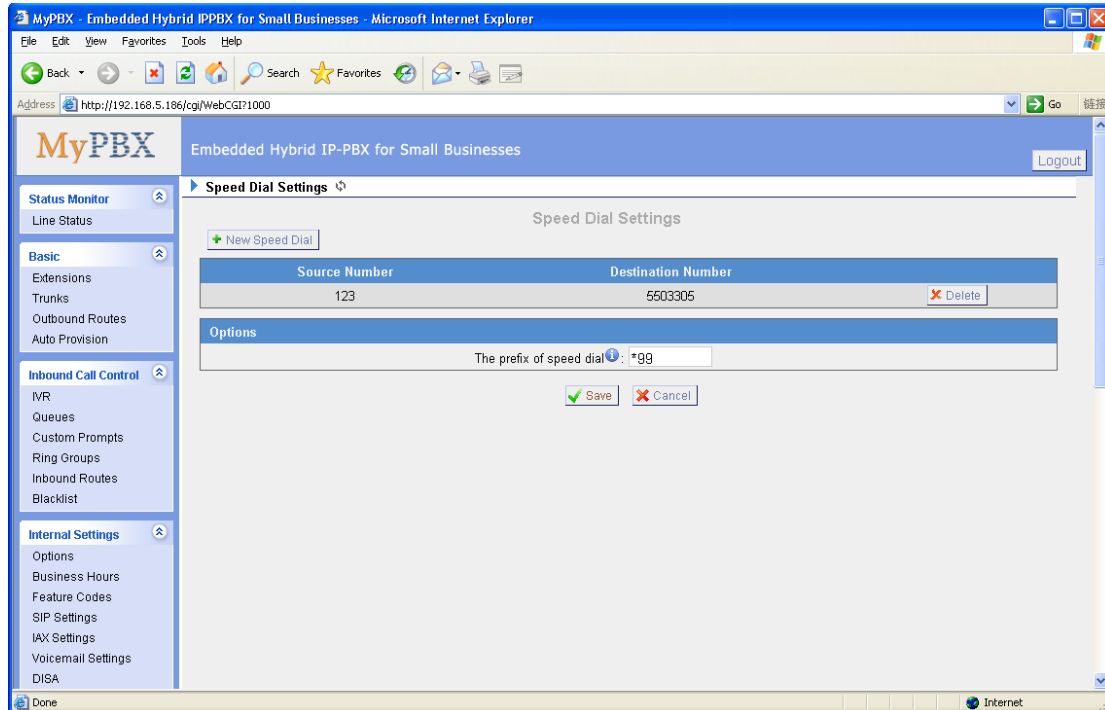


Figure 3.5.14

3.5.15 Music on Hold Prompts

The administrator can upload on hold music as follows:

- 1) Click 'Upload Music on Prompt'
- 2) Click 'Browse' to choose the desired audio file.
- 3) Click 'Upload' to upload the selected file.

Note: The sound file format should be as follows: GSM 6.10, 8.000kHz, Mono, 1kb/sec, The file size must not be greater than 1.8MB.

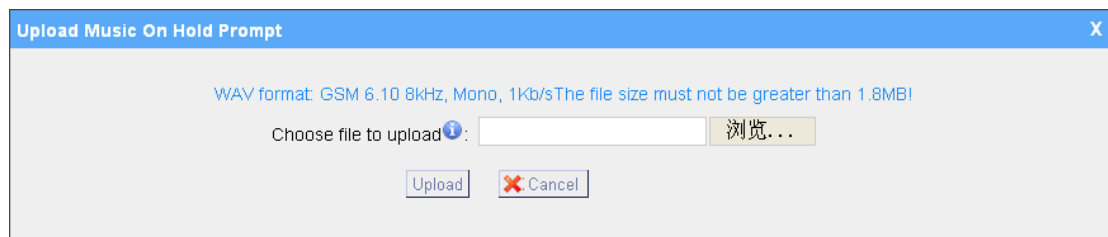


Figure 3.5.15

3.6 Network Settings

3.6.1 LAN Settings

·DHCP

If this option is set, MyPBX will use DHCP to get an available IP address from

your local network. Not recommended.

• **Enable SSH**

This is the advance way to access the device, you can use the putty software to access the device. In the SSH access, you can do more advance setting and debug.

• **Port:** the default is 8022,

• **Hostname**

Set the host name for MyPBX.

• **IP Address**

Set the IP Address for MyPBX.

• **Subnet Mask**

Set the subnet mask for MyPBX.

• **Gateway**

Set the gateway for MyPBX.

• **Primary DNS**

Set the primary DNS for MyPBX.

• **Secondary DNS**

Set the secondary DNS for MyPBX.

• **IP Address2**

Set the second IP Address for MyPBX.

• **Subnet Mask2**

Set the second subnet mask for MyPBX.

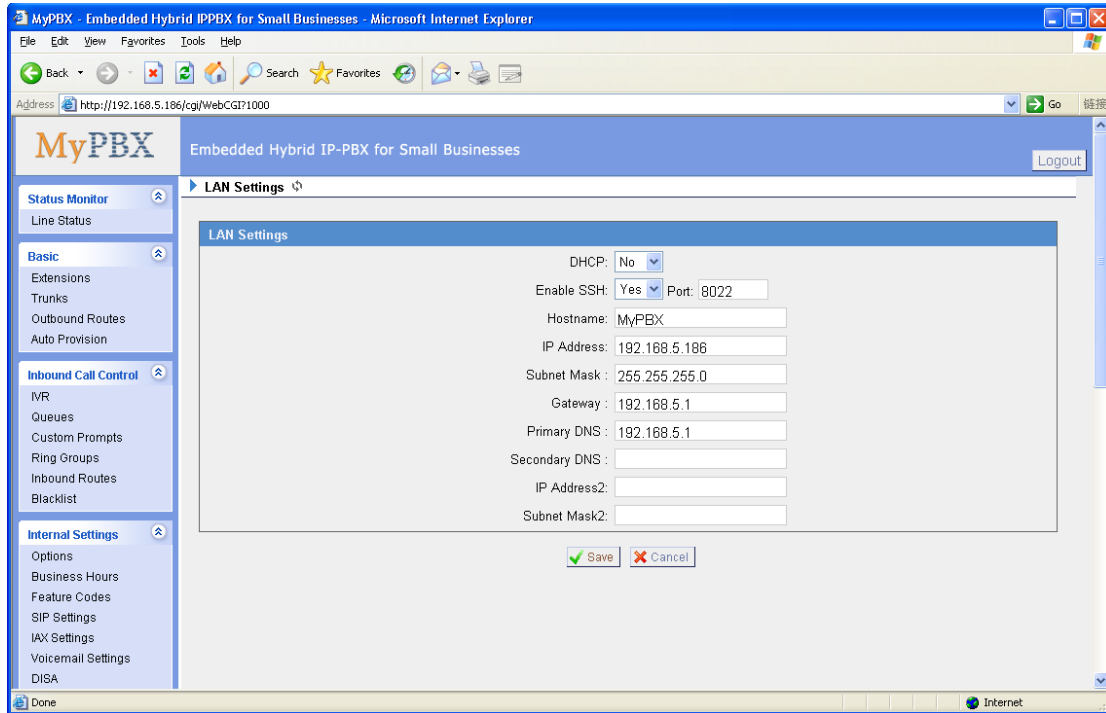


Figure 3.6.1

3.6.2 WAN Settings

It supports three connection types: DHCP (obtain an IP automatically), PPPoE, Static IP Address.

•DHCP

.If your ISP says that you are connecting through DHCP or a dynamic IP address from your ISP, perform these steps:

- Step1: Select **DHCP** as the WAN Connection Type.
- Step2: Click **Save** button to save the settings.
- Step3: Reboot the device.
- Step4: Check the WAN's Status (System Info → WAN → Status).

•Static IP Address

If your ISP says that you are connecting through a static or fixed IP address from your ISP, perform these steps:

- Step1: Select **Static IP Address** as the WAN Connection Type.
- Step2: Enter the IP Address.
- Step3: Enter the Subnet Mask.
- Step4: Enter the Gateway Address.
- Step5: Enter the Primary DNS and Secondary DNS.
- Step6: Click the **Save** button to save the settings.
- Step7: Reboot the device.

Step8: Check the WAN's Status (System Info → WAN → Status).

•PPPoE

If your DSL provider says that you are connecting through PPPoE or if you normally enter a user name and password to access the Internet, perform these steps:

Step1: Select **PPPoE** as the WAN Connection Type.

Step2: Enter the User Name.

Step3: Enter the Password.

Step4: Click the **Save** button to save the settings.

Step5: Reboot the device.

Step6: Check the WAN's Status (System Info → WAN → Status).

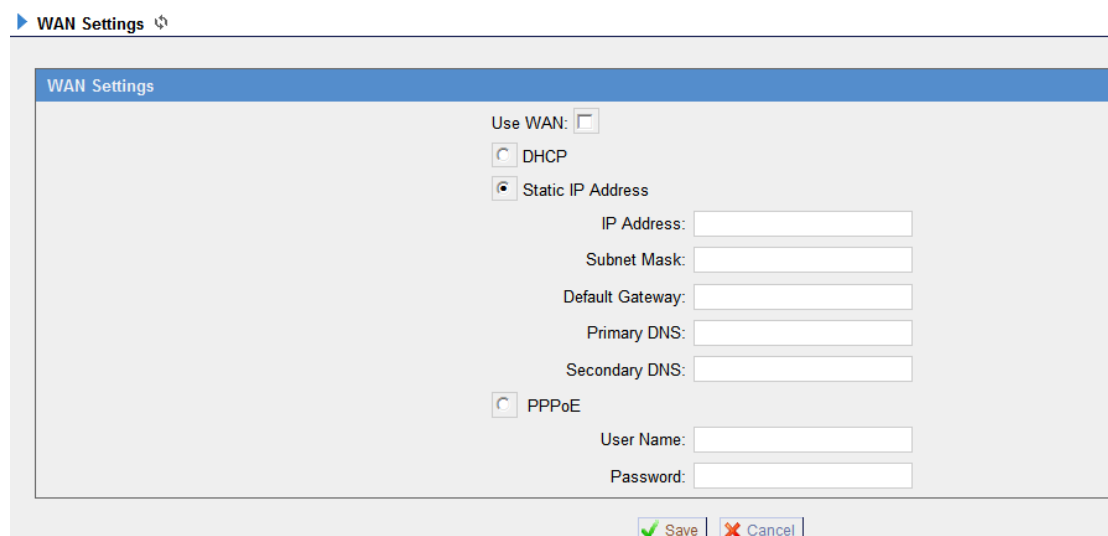


Figure 3.6.2

3.6.3 Static Route

MyPBX will have more than one internet connection in some situations but it has only one default gateway. You will need to set some Static Route for MyPBX to force it goes out through different gateway when access to different internet. The default gateway priority of MyPBX from high to low is OpenVPN→WAN port→LAN port.

1) Route table

The current route rules of MyPBX

•Destination

The destination network to be accessed to by MyPBX

•Subnet Mask

Specify the destination network portion.

•Gateway

Which gateway MyPBX will go through when access to the destination network.

•Metric

The cost of a route is calculated by using what are called routing metric. Routing metrics are assigned to routes by routing protocols to provide measurable statistic which can be used to judge how useful (how low cost) a route is.

•Interface

Define which internet port to go through.

2) Static Route Rules

You can add new static route rules here.

▶ Static Route Settings

Routing Table				
Destination	Subnet Mask	Gateway	Metric	Interface
192.168.4.0	255.255.254.0	0.0.0.0	0	LAN
224.0.0.0	224.0.0.0	0.0.0.0	0	LAN
0.0.0.0	0.0.0.0	192.168.5.1	0	LAN

Static Route Rules

Destination: Subnet Mask: Gateway: Metric: Interface: LAN

No Static Routes Defined

Figure 3.6.3

3.6.4 Firewall

Firewalls are used to prevent unauthorized Internet users from accessing private networks connected to the Internet, especially intranets. All messages entering or leaving the intranet pass through the firewall, which examines each message and blocks those that do not meet the specified security criteria.

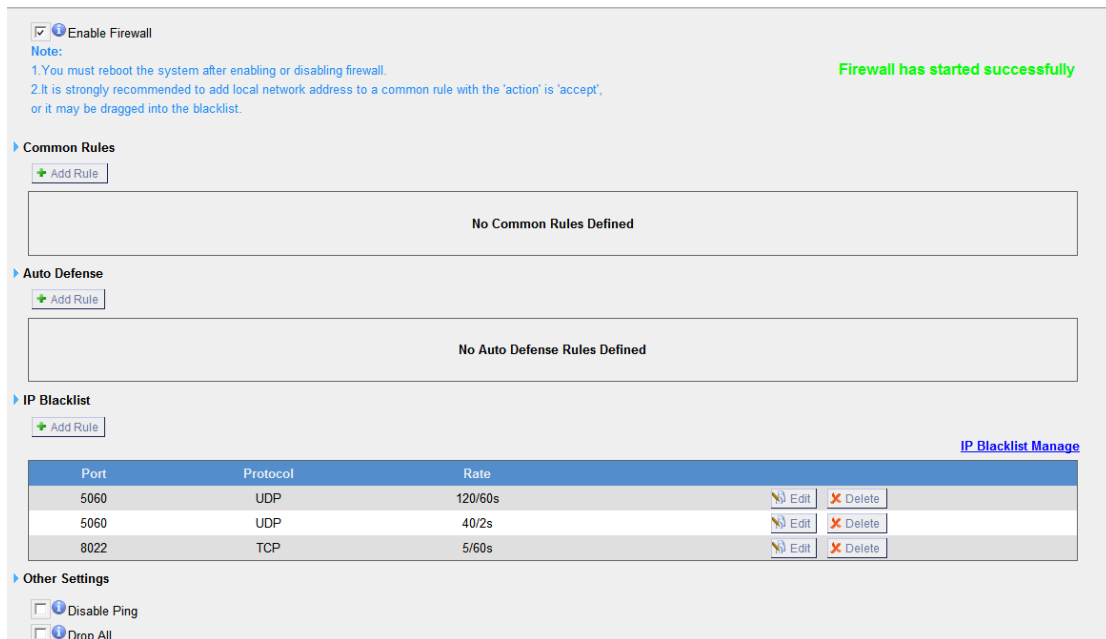


Figure 3.6.4

1) Enable Firewall

Enable the firewall to protect the device. You should reboot the device to let the firewall run successfully.

2) Common Rules

•Name

A name for this rule , e.g. 'HTTP'.

•Description

Simple description for this rule . E.g.: Accept the specific host to access the web interface for configuration.

•Protocol

The protocols for this rule .

•Port

Initial port should be on the left and end port should be on the right.
 The end port must be equal to or greater than start port.

•IP

The IP address for this rule . The format of IP address is: IP/mask

Ex: 192.168.5.100/255.255.255.255 for IP 192.168.5.100

Ex: 216.207.245.47/255.255.255.255 for IP 216.207.245.47

Ex: 192.168.5.0/255.255.255.0 for IP from 192.168.5.0 to 192.168.5.255 .

•MAC Address


The format of MAC Address is XX:XX:XX:XX:XX:XX, X means 0~9 or A~F in hex, the A~F are not case sensitive.

•Action

Accept: Accept the access from remote hosts.

Drop: Drop the access from remote hosts.

Ignore: Ignore the access.

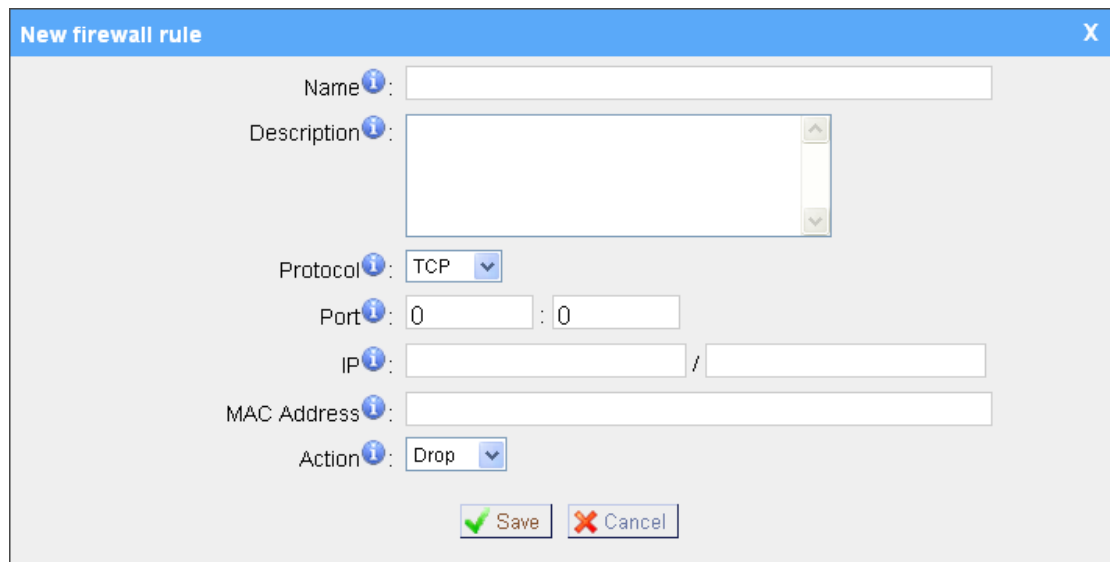

The screenshot shows a 'New firewall rule' dialog box with the following fields and options:

- Name:** Text input field.
- Description:** Text area with scrollbars.
- Protocol:** Dropdown menu set to 'TCP'.
- Port:** Two text input fields, both containing '0'.
- IP:** Two text input fields separated by a slash, both empty.
- MAC Address:** Text input field.
- Action:** Dropdown menu set to 'Drop'.
- Buttons:** 'Save' (with a green checkmark icon) and 'Cancel' (with a red X icon).

Figure 3.6.4.1

3) Auto Defense

•Port

Auto defense port, e.g.: 8022.


•Protocol

Auto defense protocol , TCP or UDP.

•Rate

The maximum packets or connections can be handled per unit time.

E.g.: (Port: 8022 Protocol: TCP Rate: 10/minute) means maximum 10 TCP connection to port 8022 can be handled per minute, the eleventh connection will be refused directly.

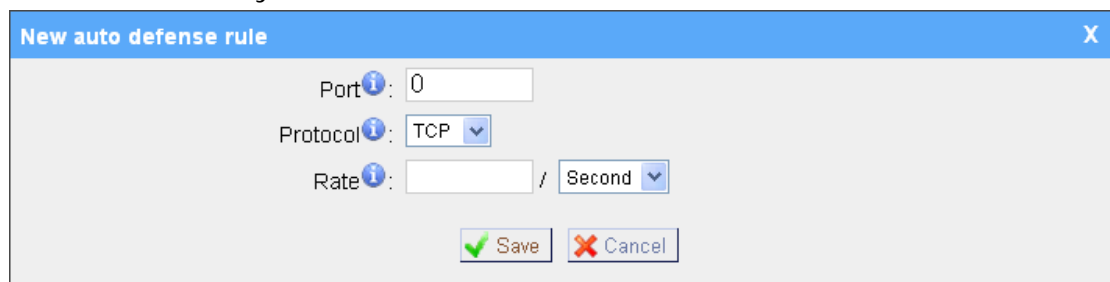

The screenshot shows a 'New auto defense rule' dialog box with the following fields and options:

- Port:** Text input field containing '0'.
- Protocol:** Dropdown menu set to 'TCP'.
- Rate:** Text input field followed by a dropdown menu set to 'Second'.
- Buttons:** 'Save' (with a green checkmark icon) and 'Cancel' (with a red X icon).

Figure 3.6.4.2

4) IP Blacklist

You can set some packets accept speed rules here. When a IP address which hasn't been accepted in common rules sends packets faster than the allowed speed, it will be set as black IP address and blocked automatically.

a) New Rule

•Port

Auto defense port

•Protocol


Auto defense protocol. TCP or UDP.

•IP Packets

Allowed IP packets number in the specific time interval.

•Time interval

The time interval to receive IP packets. For example, IP packets 90,time interval 60 means 90 IP packets are allowed in 60 seconds.

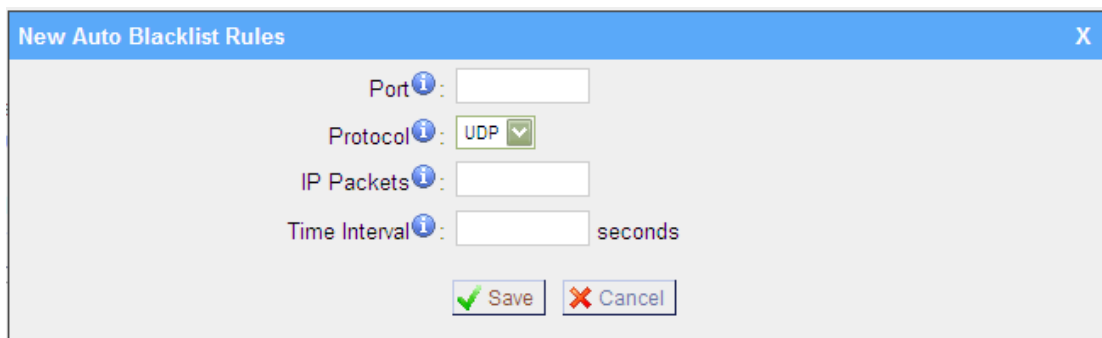

The screenshot shows a dialog box titled "New Auto Blacklist Rules" with a close button (X) in the top right corner. It contains four input fields: "Port" (empty), "Protocol" (set to "UDP" with a dropdown arrow), "IP Packets" (empty), and "Time Interval" (empty) followed by the text "seconds". At the bottom, there are two buttons: "Save" with a green checkmark icon and "Cancel" with a red X icon.

Figure 3.6.4.3

b) IP Blacklist Manage

You can manage the IP addresses which are blocked automatically here.



The screenshot shows a table titled "IP Blacklist" with a "Go Back to Firewall Rules Settings" link in the top right. The table has four columns: "Attacked Time", "Protocol", "Attacked Port", and "Source IP address". There is one row of data and a "Delete" button in the rightmost cell.

Attacked Time	Protocol	Attacked Port	Source IP address
1970-Jan-8--19:58	UDP	5060	203.117.31.243

Figure 3.6.4.4

5) Other Settings

•Disable Ping

Enable this item, net ping from remote hosts will be dropped.

•Drop All

When you enable 'Drop All' feature, system will drop all packets or connection from other hosts if there are no other rules defined. To avoid locking the devices, at least one 'TCP' accept common rule must be created for port used for SSH

access, port used for HTTP access and port sued for CGI access.

3.6.5 DHCP Server

Dynamic Host Configuration Protocol (DHCP) is a network protocol that enables a server to automatically assign an IP address to a computer from a defined range of numbers (i.e., a scope) configured for a given network. You can set a local network NTP server for MyPBX here too.

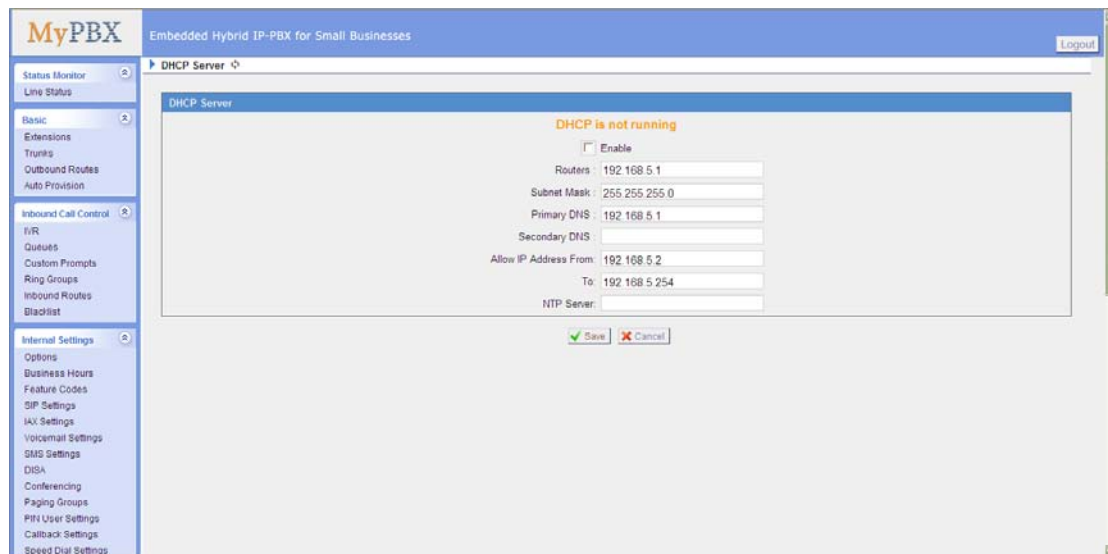


Figure 3.6.5

3.6.6 VLAN Settings

A VLAN(Virtual LAN) is a logical local area network (or LAN) that extends beyond a single traditional LAN to a group of LAN segments, given specific configurations.

1) VLAN Over Lan

•NO.1

Click the NO.1 you can edit the first VLAN over Lan.

•VLAN Number

.The VLAN Number is a unique value you assign to each VLAN on a single device.

•VLAN IP Address

Set the IP Address for MyPBX VLAN over Lan.

•VLAN Subnet Mask

Set the Subnet Mask for MyPBX VLAN over Lan.

• **Default Gateway**

Set the Default Gateway for MyPBX VLAN over Lan

• **NO.2**

Click the NO.2 you can edit the first VLAN over Lan.

• **VLAN Number**

.The VLAN Number is a unique value you assign to each VLAN on a single device.

• **VLAN IP Address**

Set the IP Address for MyPBX VLAN over Lan.

• **VLAN Subnet Mask**

Set the Subnet Mask for MyPBX VLAN over Lan.

• **Default Gateway**

Set the Default Gateway for MyPBX VLAN over Lan.

2) VLAN Over Wan

• **NO.1**

Click the NO.1 you can edit the first VLAN over Wan.

• **VLAN Number**

.The VLAN Number is a unique value you assign to each VLAN on a single device.

• **VLAN IP Address**

Set the IP Address for MyPBX VLAN over Wan.

• **VLAN Subnet Mask**

Set the Subnet Mask for MyPBX VLAN over Wan.

• **Default Gateway**

Set the Default Gateway for MyPBX VLAN over Wan.

• **NO.2**

Click the NO.2 you can edit the first VLAN over Wan.

• **VLAN Number**

.The VLAN Number is a unique value you assign to each VLAN on a single device.

• **VLAN IP Address**

Set the IP Address for MyPBX VLAN over Wan.

·VLAN Subnet Mask

Set the Subnet Mask for MyPBX VLAN over Wan.

·Default Gateway

Set the Default Gateway for MyPBX VLAN over Wan.

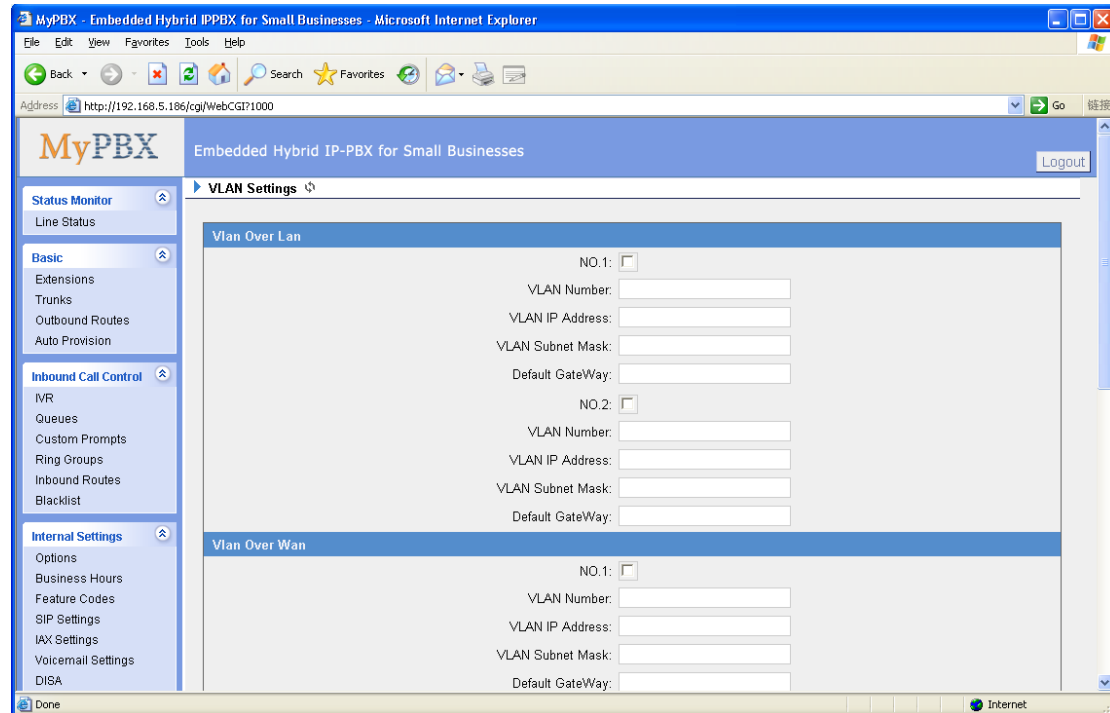


Figure 3.6.6

3.6.7 VPN Settings

A virtual private network (VPN) is a method of computer networking--typically using the public internet--that allows users to privately share information between remote locations, or between a remote location and a business' home network. A VPN can provide secure information transport by authenticating users, and encrypting data to prevent unauthorized persons from reading the information transmitted. The VPN can be used to send any kind of network traffic securely. MyPBX supports OpenVPN.

·Enable VPN

·Import VPN Config

Import configuration file of OpenVPN. Don't configure 'user' and 'group' in the 'config' file.

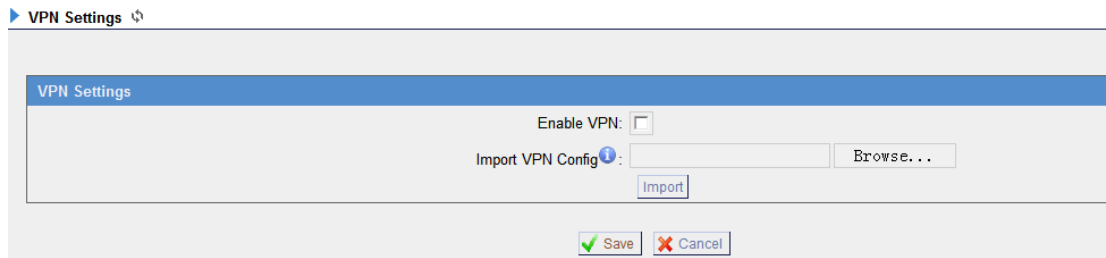


Figure 3.6.7

3.6.8 DDNS Settings

DDNS(Dynamic DNS) is a method / protocol / network service that provides the capability for a networked device, such as a router or computer system using the Internet Protocol Suite, to notify a Domain Name System (DNS) name server to change, in real time, the active DNS configuration of its configured hostnames, addresses or other information.

•Enable DDNS

•DDNS Server

Select the DDNS server you sign up for service.

•User Name

User name the DDNS server provides you.

•Password

User account's password .

•Host Name

Note: DDNS allows you to access your network using domain names instead of IP address. The service manages changing IP address and updates your domain information dynamically. You must sign up for service through dyndns.org, freedns.afraid.org, www.no-ip.com, www.zoneedit.com

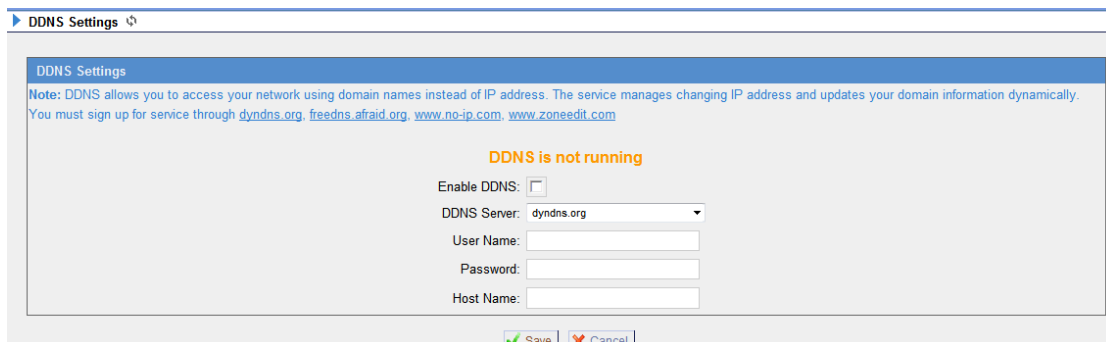


Figure 3.6.8

3.7 System Settings

3.7.1 External Storage

The External Storage feature is used to extend storage space. Once configured, the files (voicemail, call recording files, CDR files) created before the configured days will be moved to the Net-Disk.

Auto-Backup extends the allocated disk space for backing up critical files. When properly configured, MyPBX will move all qualified files to a Windows PC every 30 minutes. For the voicemail files and recording files, they must be created before Auto-Backup has been configured.

How to configure External Storage, please see **APPENDIX B How to Configure Autobackup**.

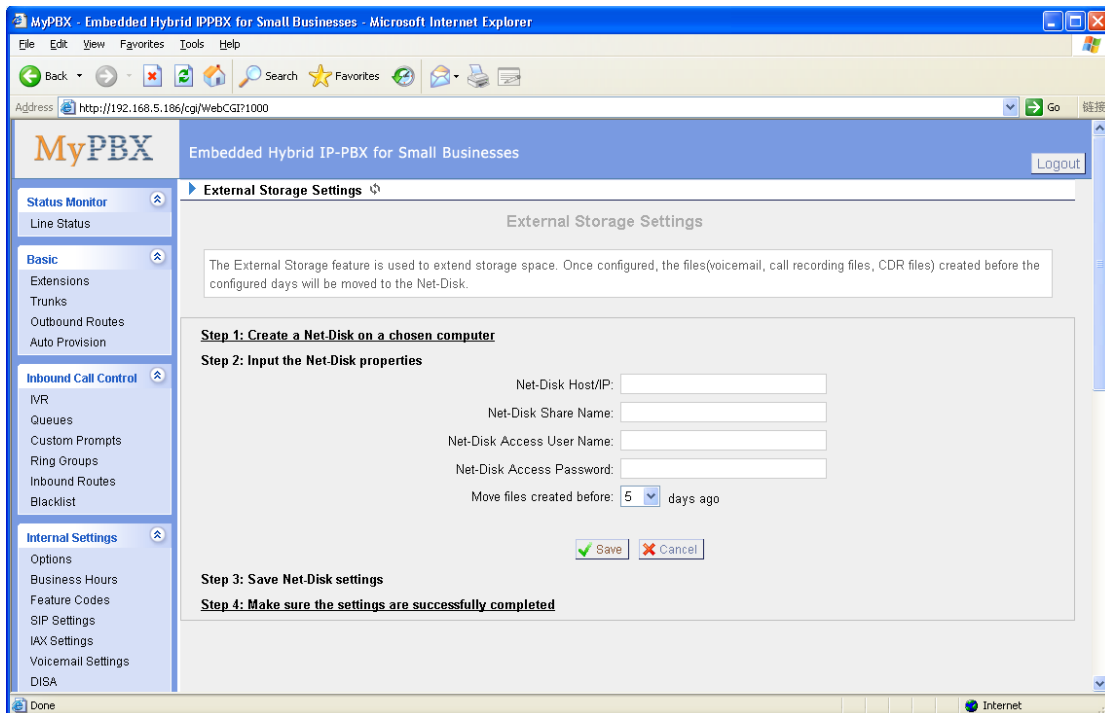


Figure 3.7.1

3.7.2 Password Settings

The default password is '**password**'. To change the password, enter the new password and click update. The system will then prompt you re-login using your new password.

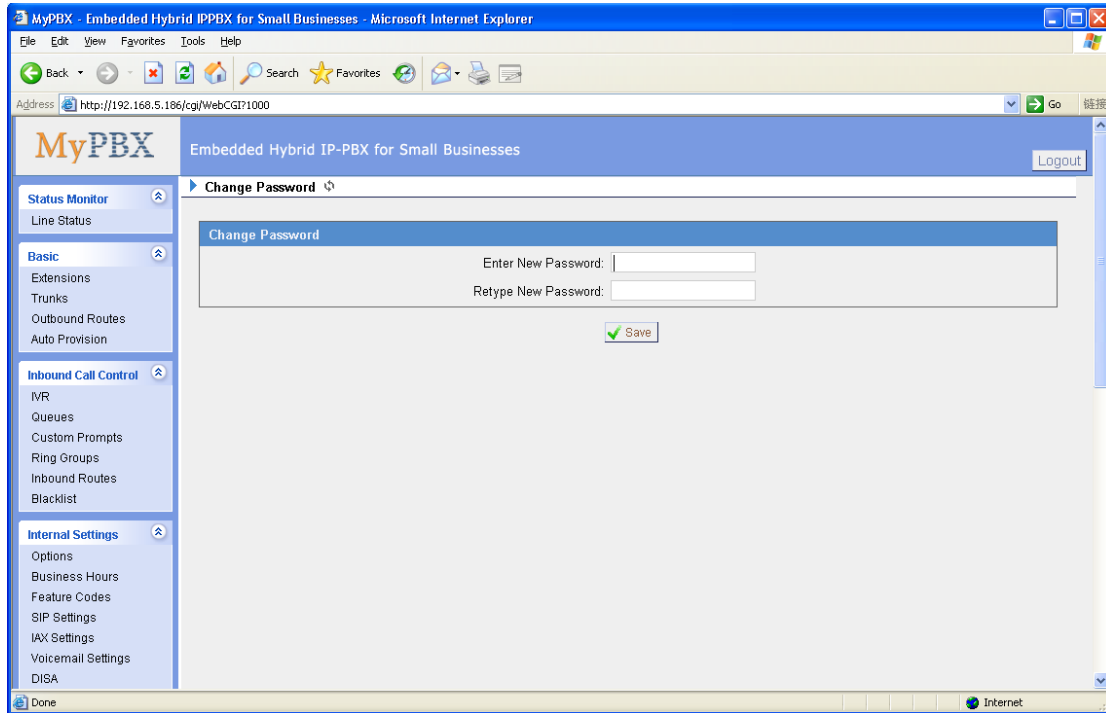


Figure 3.7.2

3.7.3 System Prompts

MyPBX have prompts of many languages. You can download the appropriate language you need. MyPBX can support American English, Australian English, Chinese, Dutch, French, Canadian French, German, Greek, Hungarian, Italian, Polish, Portuguese, Brazilian Portuguese, Russian, Spanish, Mexican Spanish, Turkish, Thai, Korean currently.

Note:

Auto-detection is highly recommended. But if you prefer to download via HTTP or TFTP server, please contact the local dealer for the prompts.

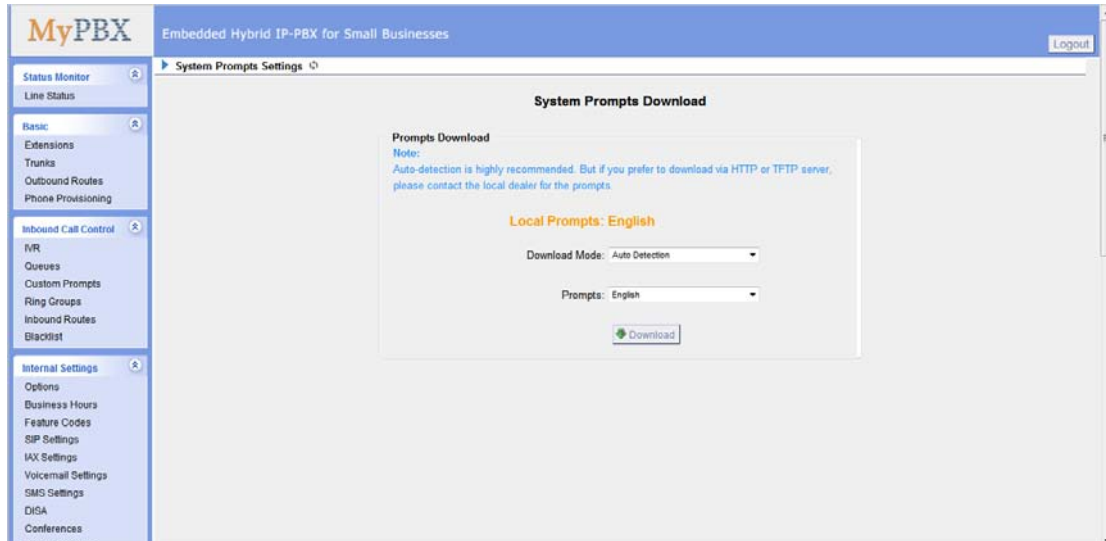


Figure 3.7.3

3.7.4 Date and Time

Set the date and time for MyPBX.

• Time Zone

You can choose your time zone here.

• Daylight Saving Time

Set the mode to Automatic or disabled

• Automatically Synchronize With an Internet Time Server

Input the NTP server so that MyPBX will update the time automatically

• Set Date & Time Manually

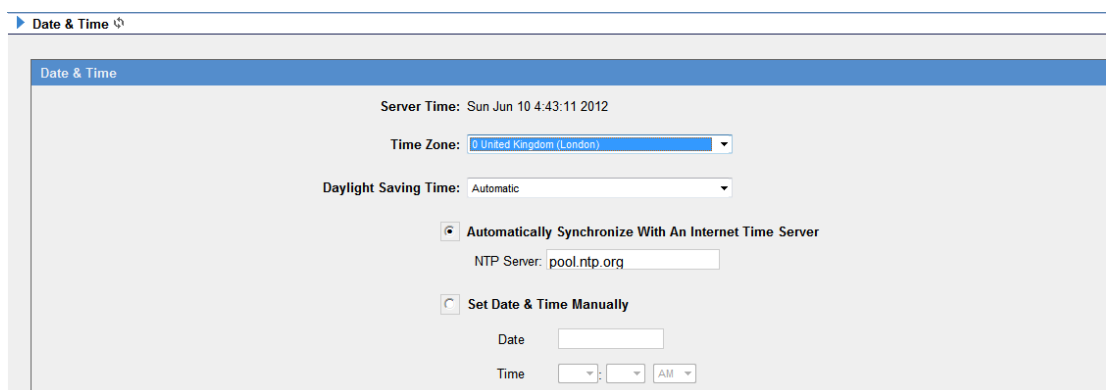


Figure 3.7.4

3.7.5 Backup and Restore

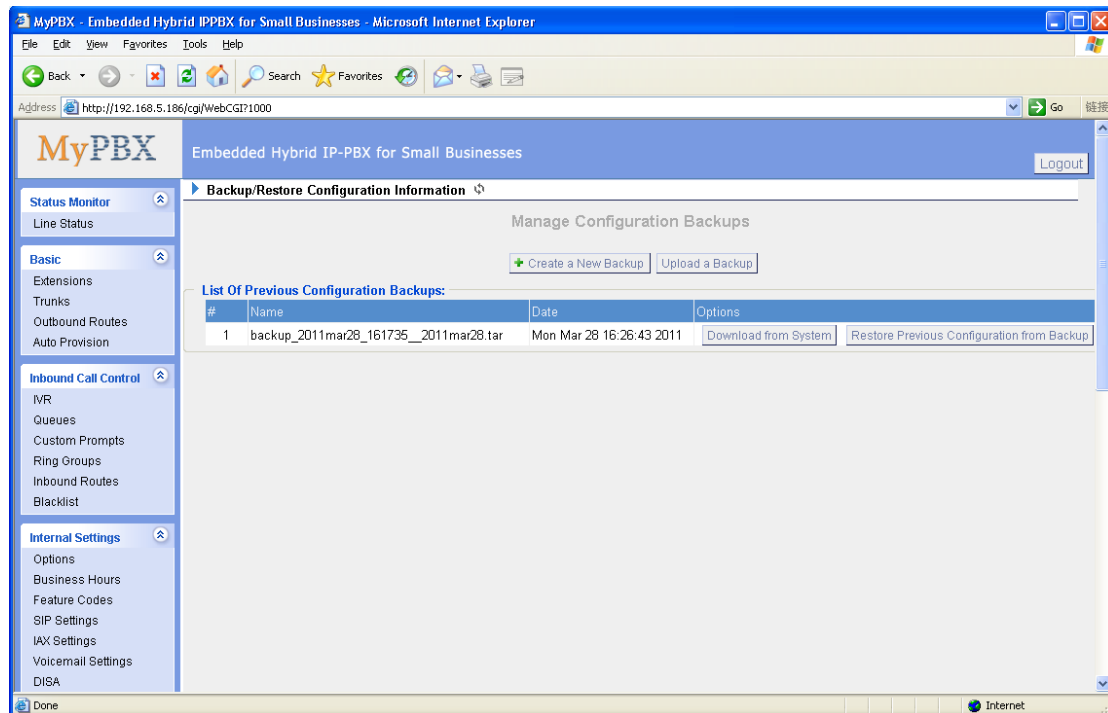


Figure 3.7.5

3.7.6 Reset and Reboot

·Reboot System

Warning: Rebooting the system will terminate all active calls!

·Reset to Factory Defaults

Warning: A factory reset will erase all configuration data on the system. Please do not turn off the system until the RUN light begins blinking. Any power interruption during this time could cause damage to the system.

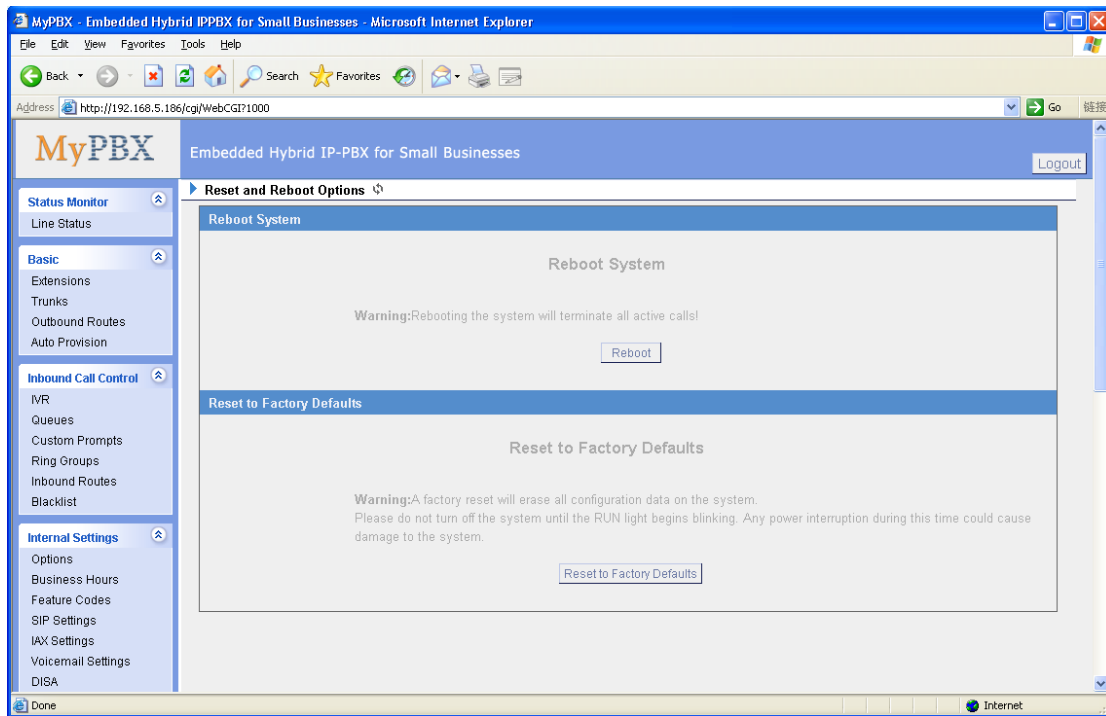


Figure 3.7.6

3.7.7 Firmware Update

Upgrading of the firmware is possible through the Administrator web interface using a TFTP Server or an HTTP URL.

Enter your TFTP Server IP address and firmware file location, then click start to update the firmware.

More Information, please see <http://www.yeastar.com/download/MyPBX/>

Note:

1. If enabled 'Reset configuration to Factory Defaults', System will restore to factory default settings.
2. When update the firmware, please don't turn off the power.

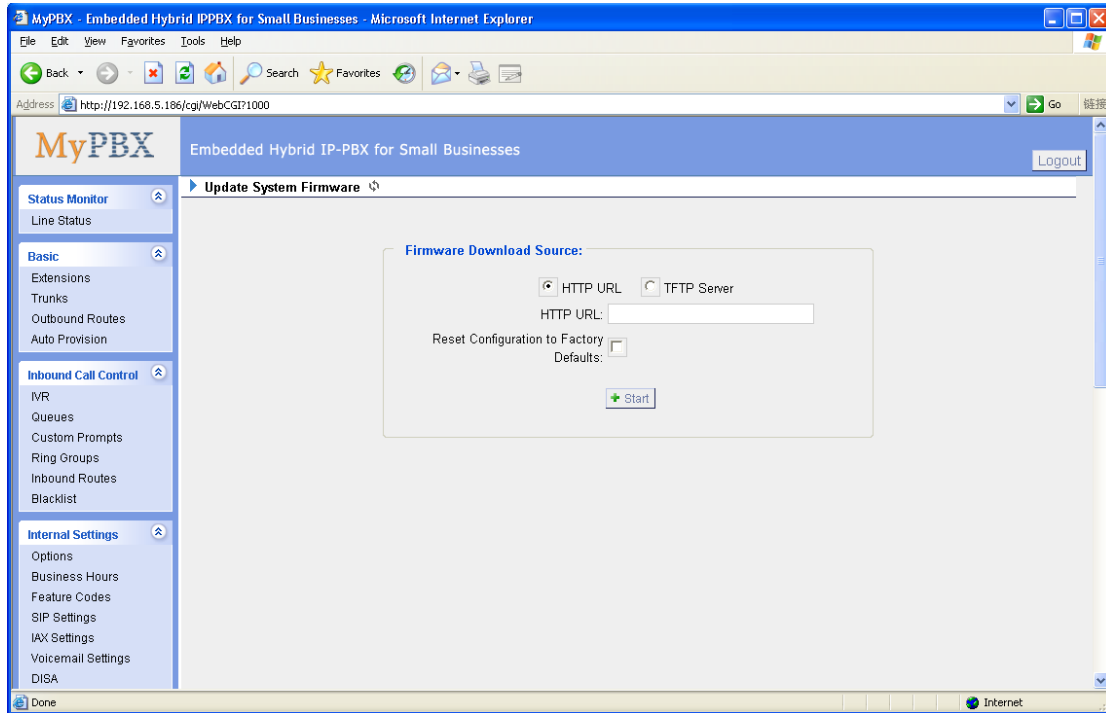


Figure 3.7.7

3.7.8 Hot Standby

This feature can ensure that the system runs stably.

If you want to use this feature, you should have 2 MyPBX. And the configuration of the 2 MyPBX should be same exactly, including hardware version, firmware version, the modules, and the position where the module is installed.

When you are using this feature, one MyPBX should be configured as primary, and the other should be configured as secondary. When the primary is down, the secondary will be active automatically and take over the service. At the same time, MyPBX can notify the administrator this failure using email and/or SMS.

At any time, the status of one MyPBX is "Active" and the other is "Standby". When we make any change on the MyPBX whose status is "Active", and when you click "Apply Changes" button, the configuration will be synchronized to the MyPBX whose status is "Standby". So the configuration on the 2 MyPBX is same all the time.

By default, the status of primary is "Active" and the status of secondary is "Standby". When the primary is down and the secondary will take over the service, the status of secondary will change to "Active" and status of primary will change to "Standby".

Step 1 Verify the basic information of the servers

In this step, the system information and port information will be detected automatically.

Step 2 Configure the IP address and hostname of the primary and secondary servers

This step explains how to configure the IP and hostname of the 2 MyPBX using an example.

Notice: The 2 MyPBX MUST have different IP and Hostname.

Step 3 Configure Hot Standby Settings (Example)

You can configure detail information of Hot Standby.

Basic

Below "Basic", you can check/configure the following:

Running Status: Check the device status, "Disable", "Active" and "Standby".

Enable: Yes/No

Mode: Primary/Secondary

Primary/Secondary Hostname: The hostname of the other MyPBX

Primary/Secondary IP: The IP of the other MyPBX

Access code: The 2 MyPBX must have the same access code.

Virtual IP: The IP which the client use to communicate the "Active" server.

Network Connection Detection: commonly gateway

Down Notification:

In this section, you can choose how to notify the administrator when the server is down. You can choose "None", "Email", "SMS" and "Both".

Advanced

Keep Alive: Set the interval how long MyPBX will send packets to another MyPBX

Dead Time: The time after which heartbeat keep-alive packets get no response, the system will deem that the other MyPBX has been down.

Disk Synchronization: Choose disk synchronization method.

If you want to enable Hot Standby, please refer to [Appendix I](#).

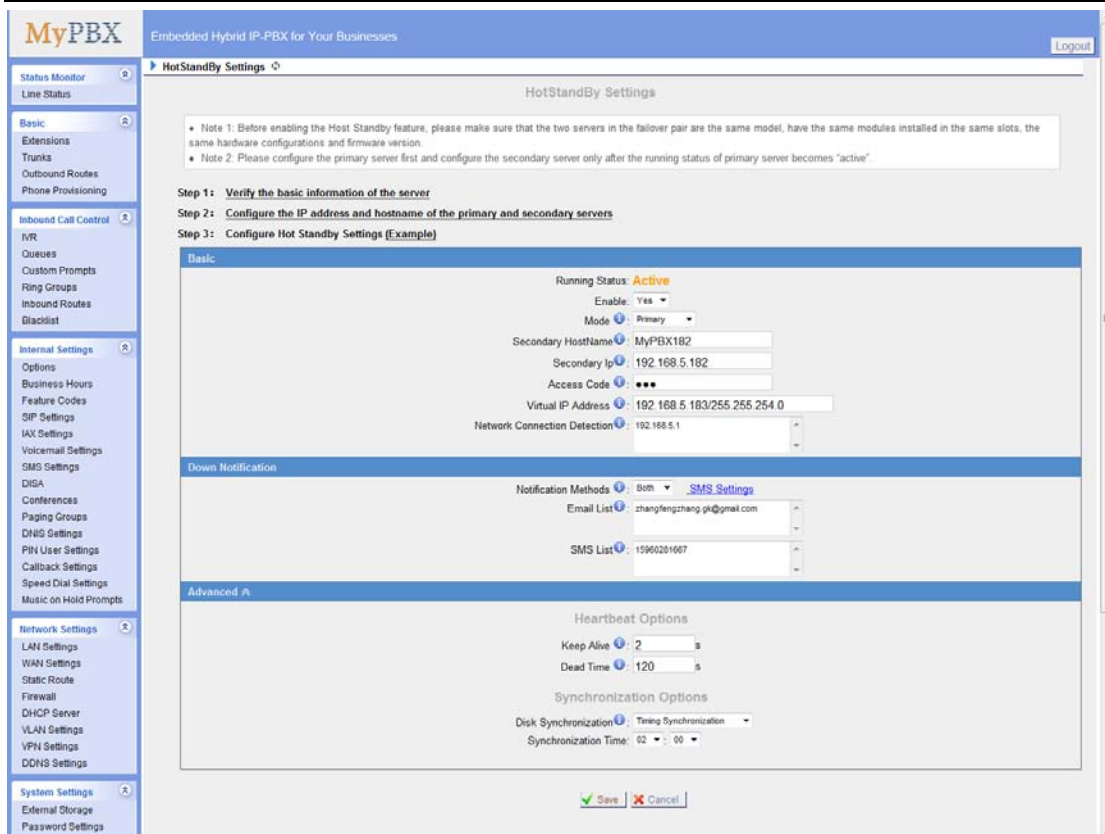


Figure 3.7.8

3.7.9 Storage Management

You can check the information of the hard disk, manage the disk and do some related configuration.

·Device Information

It's the information of the hard disk.

·Disk Management

You can format disk or clean up the disk here.

Note: Please check if you need to back up these files before formatting or clearing up the hard disk. Don't power off the device during the period.

·Other Settings

You can:

- Save Voicemails in the Disk
- Save One Touch Recording Files in the Disk
- Save CDR in the Disk

If you want to enable auto recording, please refer to [Appendix J](#)

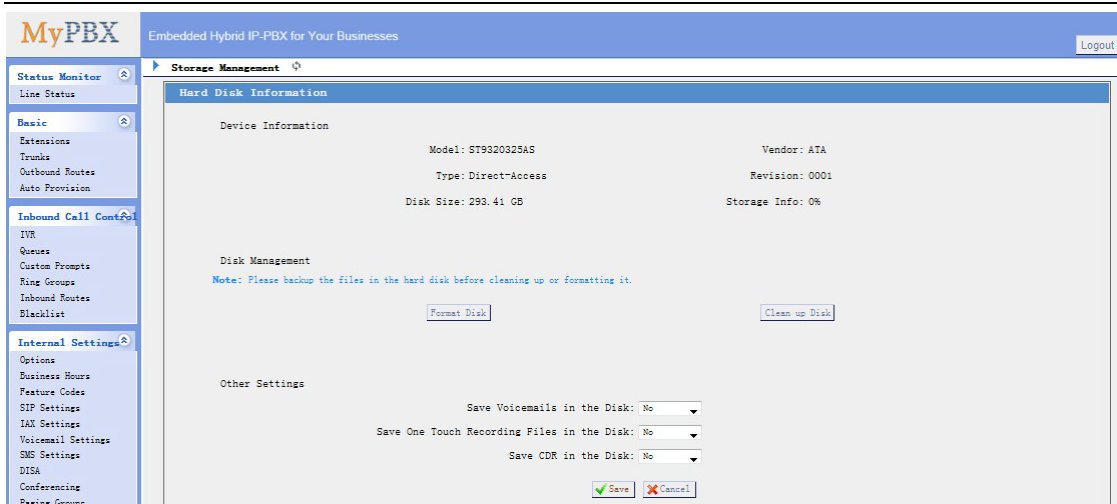


Figure 3.7.9

3.8 Reports

3.8.1 Call Logs

The call Log captures all call details, including call time, caller number, callee number, call type, call duration, etc. An administrator can search and filter call data by filter the call logs by call date, caller/callee, trunk, duration, billing duration, status, communication type.

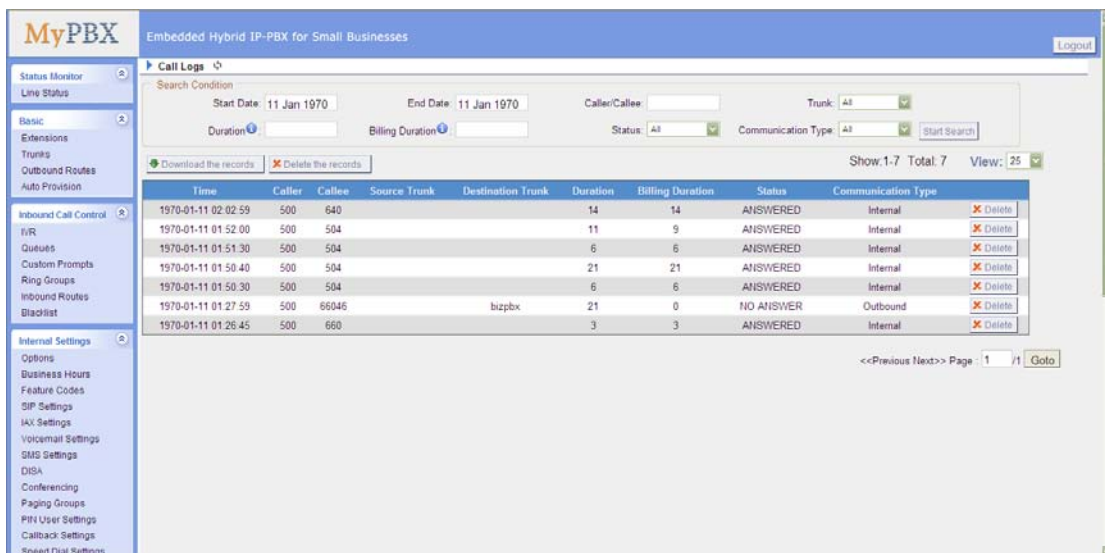


Figure 3.8.1

3.8.2 System Logs

You can download and delete the system logs of MyPBX.

Options

• **Enable Hardware Log**

Save the information of hardware; (up to 4 log files)

• **Enable Normal Log**

Save the prompt information; (up to 16 log files)

• **Enable Web Log**

Save the history of web operations (up to 2 log files)

• **Enable Debug Log**

Save debug information (up to 2 log files)

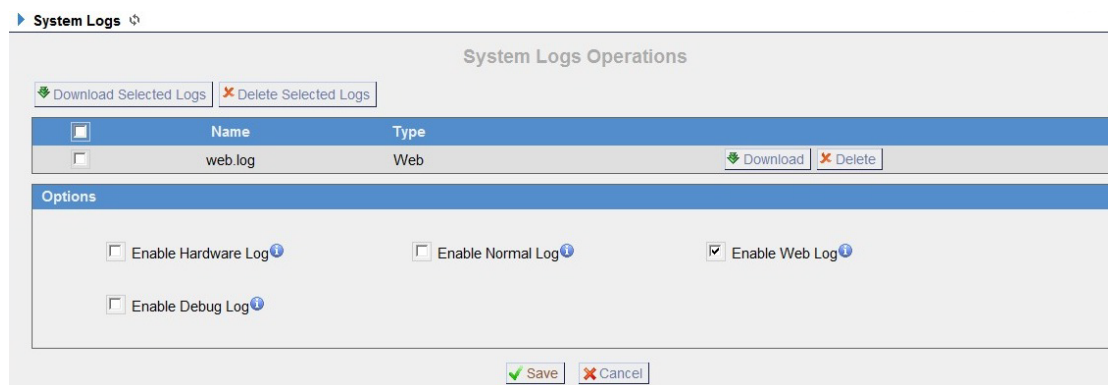


Figure 3.8.2

3.8.3 System Info

General:

Information about hardware version , firmware version and system uptime.

LAN:

Information about hostname, MAC address, IP address, gateway, Primary DNS and Secondary DNS.

Disk Usage:

Disk usage information.

Memory Usage:

Memory usage information .

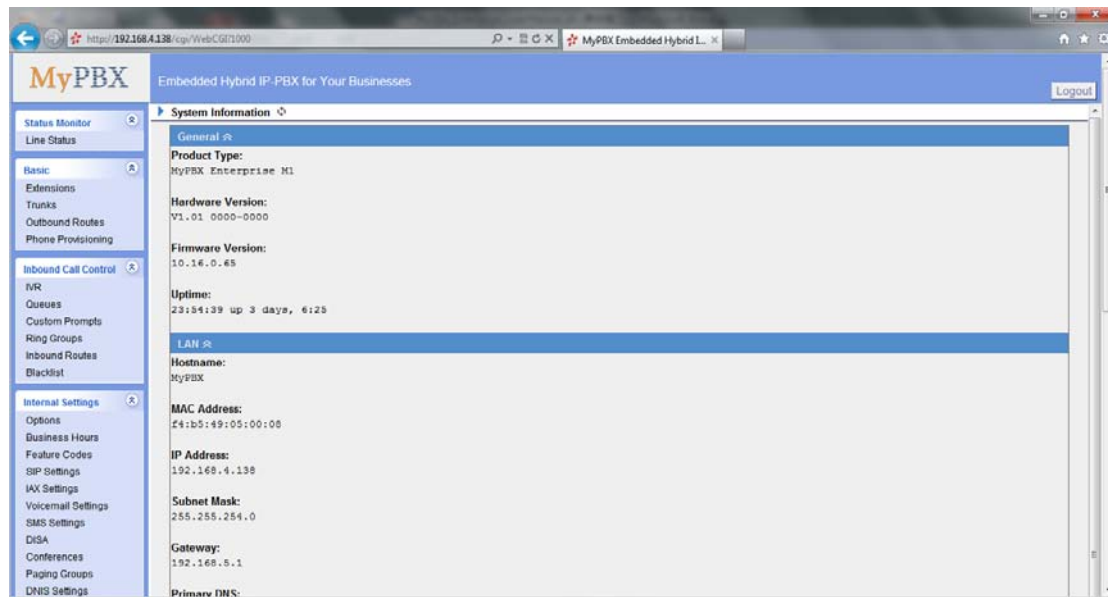



Figure 3.8.3

4. Access MRI

MRI (MyPBX Recording Interface). Users may access MRI by logging into the MRI web interface with their username (extension number) and voicemail password.

4.1 Allow users to access MRI

The extension's 'User Web Interface' option must be checked before the associated user can log into MRI.

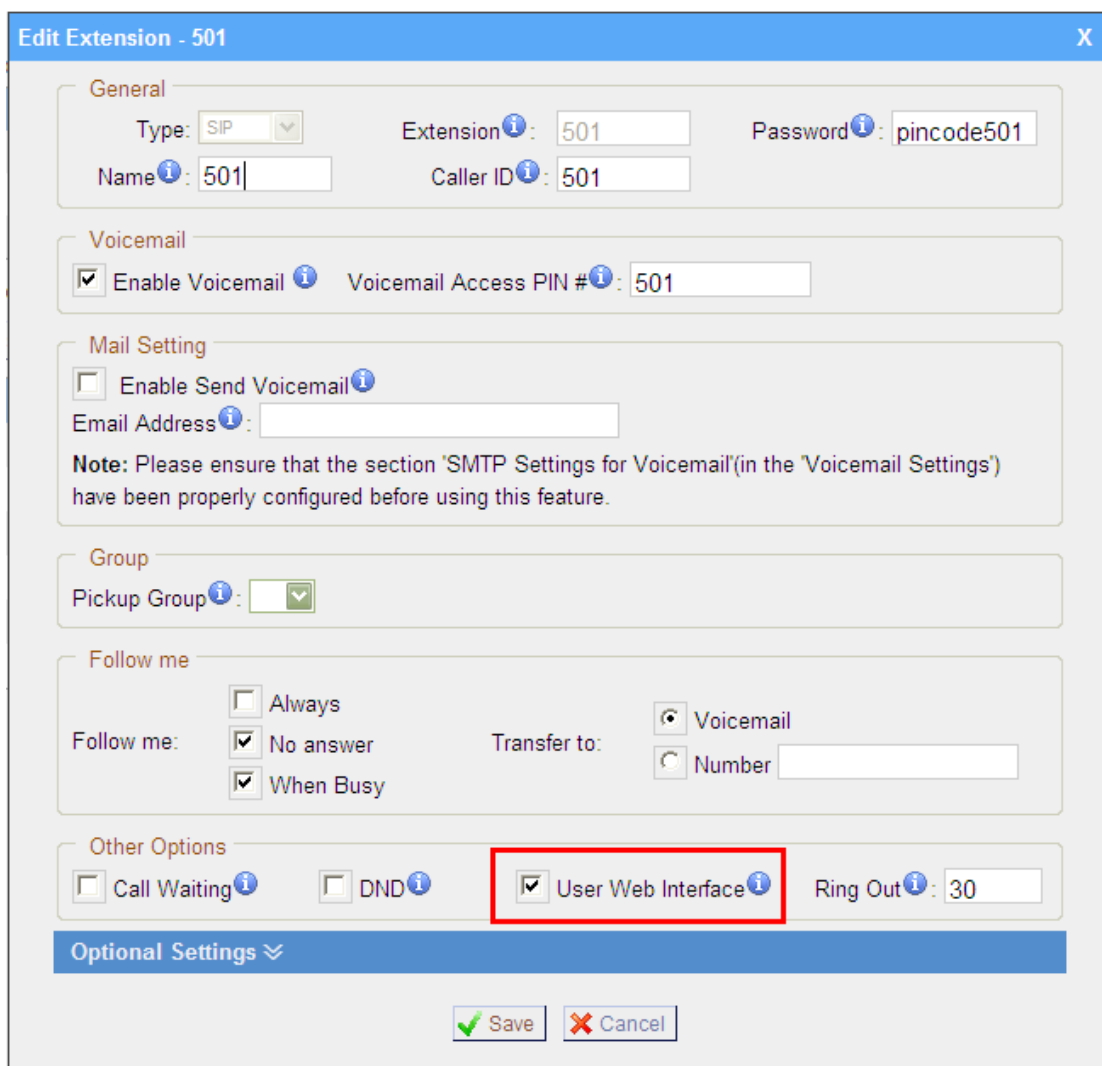

The screenshot shows the 'Edit Extension - 501' configuration window. It is divided into several sections:

- General:** Type: SIP, Extension: 501, Password: pincode501, Name: 501, Caller ID: 501.
- Voicemail:** Enable Voicemail, Voicemail Access PIN #: 501.
- Mail Setting:** Enable Send Voicemail, Email Address: [empty]. Note: Please ensure that the section 'SMTP Settings for Voicemail'(in the 'Voicemail Settings') have been properly configured before using this feature.
- Group:** Pickup Group: [empty].
- Follow me:** Follow me: Always, No answer, When Busy. Transfer to: Voicemail, Number [empty].
- Other Options:** Call Waiting, DND, User Web Interface (highlighted with a red box), Ring Out: 30.

At the bottom, there is an 'Optional Settings' dropdown and 'Save' and 'Cancel' buttons.

Figure 4-1

4.2 User login

Users can access the MRI web interface by navigating to the MyPBX IP address using a web browser. If you are unsure of this address, please contact your

network administrator.

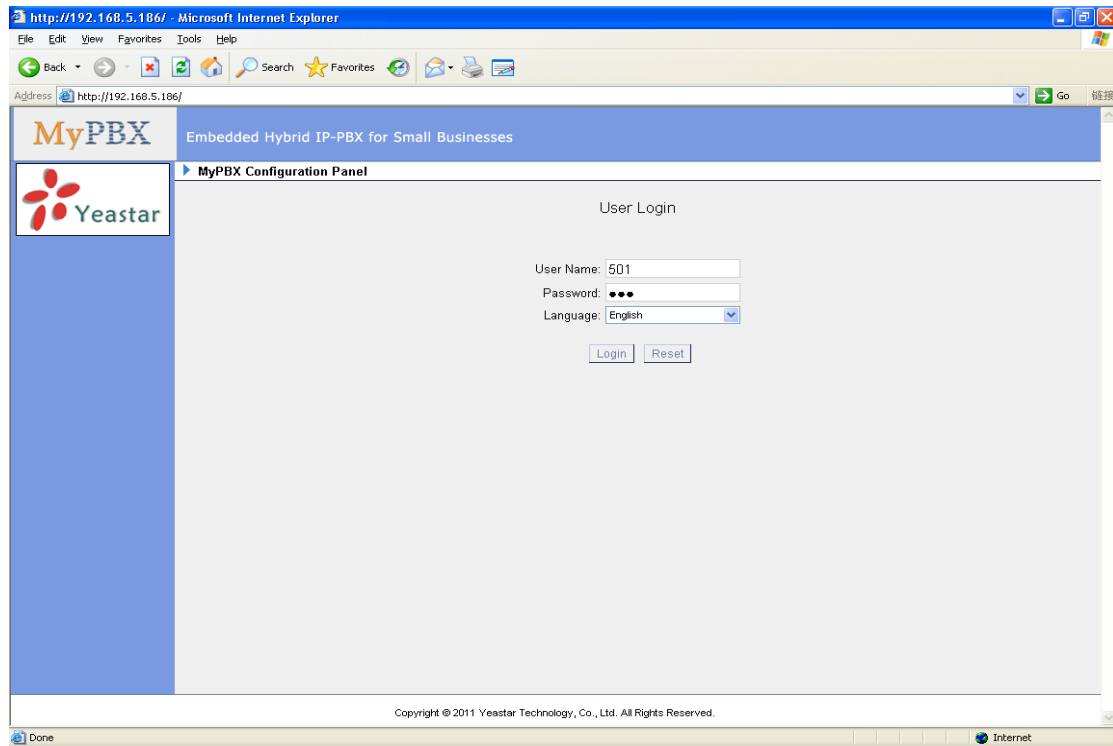


Figure 4-2

4.3 Voicemail

Users can check, delete, move and download voicemail files here.

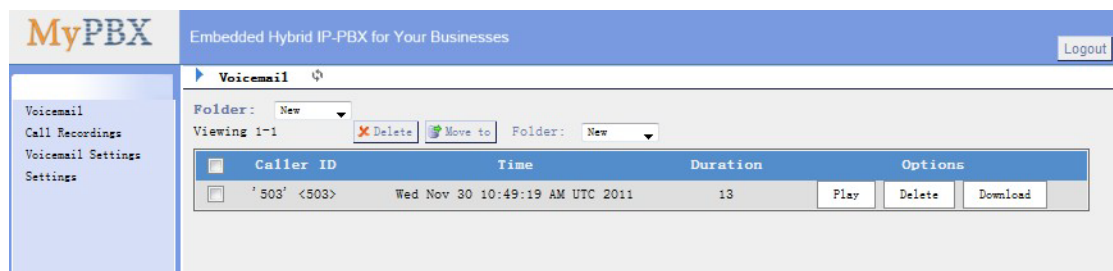


Figure 4-3

4.4 Call Recordings

Users can play, delete and download recorded files here.


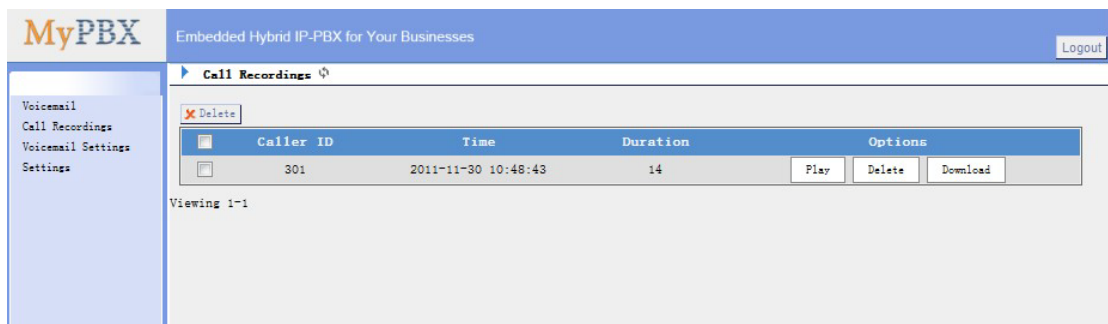


Figure 4-4

4.5 Voicemail Settings

- **Voicemail password:** new voicemail box password.
 - **Enter again to confirm:** confirm new voicemail box password.
 - **Email Address:** Email address use to receive the voicemail or Fax.
- Note:** Please ensure that the section 'SMTP Settings For Voicemail'(in the 'Voicemail Settings') have been properly configured before using this feature.
- **Enable Voicemail**
Check this box if the user should have a voicemail account.
 - **Enable Send Voicemail**
Once enabled, the voicemail or Faxex will be sent to email as an attachment.

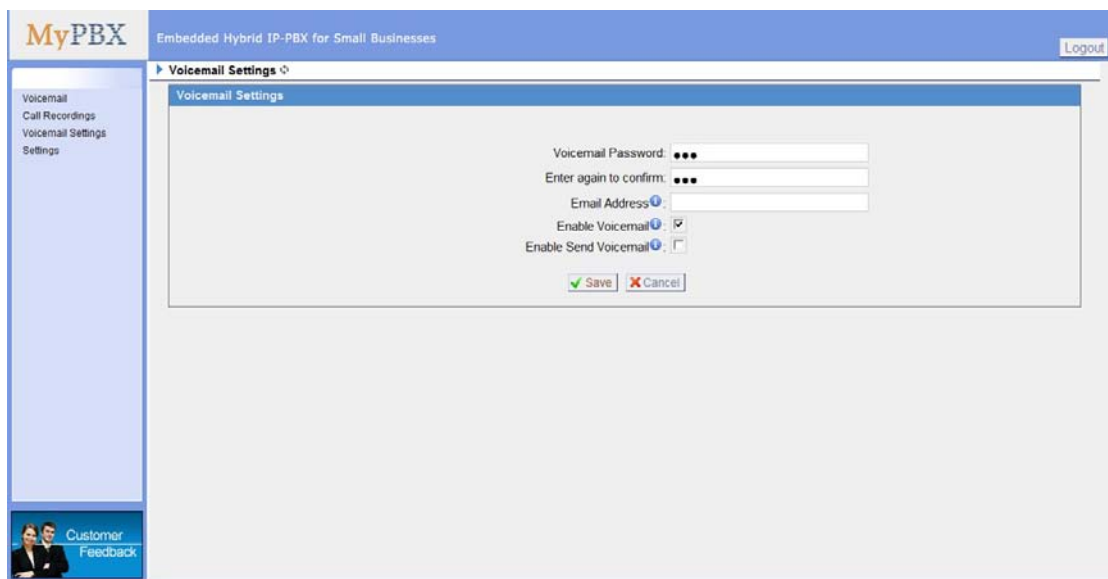


Copyright © 2011 Yeastar Technology Co., Ltd. All Rights Reserved.

Figure 4-5

4.6 Settings


You can do some basic setting here. Such as call forwarding, DND, Mobile Extension Number.

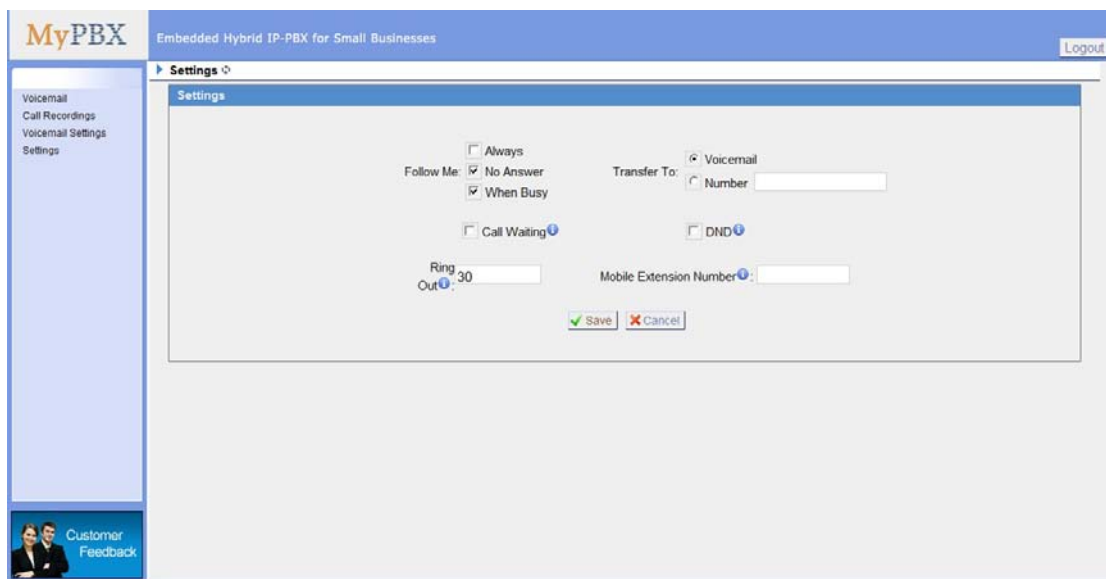

Copyright © 2011 Yeostar Technology Co., Ltd. All Rights Reserved.

Figure 4-6

5. Use MyPBX

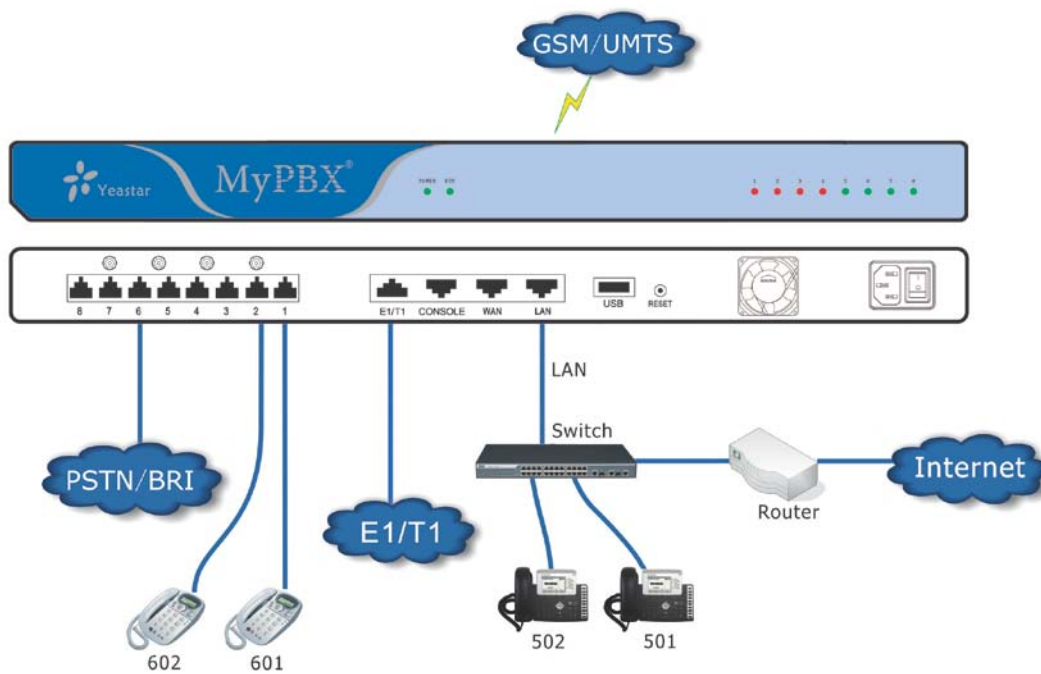

5.1 Make outbound call

To make an outbound call, we need to add trunk first. There are five types of VoIP Trunk:

- **Analog Trunk:** FXO ports of MyPBX, connected to a local PSTN.
- **GSM Trunk:** GSM ports of MyPBX, connected to GSM Network.
- **BRI Trunk:** BRI ports of MyPBX, connected to a local PSTN.
- **VoIP Trunk:** Connected to remote VOIP service server.
- **Service Provider:** Connected to service provider server.

What are FXO and FXS?

FXS (Foreign exchange Station) is an interface which drives an analog telephone or FAX machine. FXS interfaces deliver power, provide ringing, and use FXO signaling. FXS interfaces are what allow you to hook telephones and other analog devices to your PBX

FXO (Foreign exchange Office) is an interface that connects to a phone line to supply your PBX with access to a public telephone network. FXO interfaces use FXS signaling. FXO interfaces allow you to connect your PBX to real analog phone lines.

5.1.1 Sample Routing via PSTN Trunk

Let's route all inside extensions through an analog trunk by dialing 9. In Outbound Routes, add a new outbound route as below.

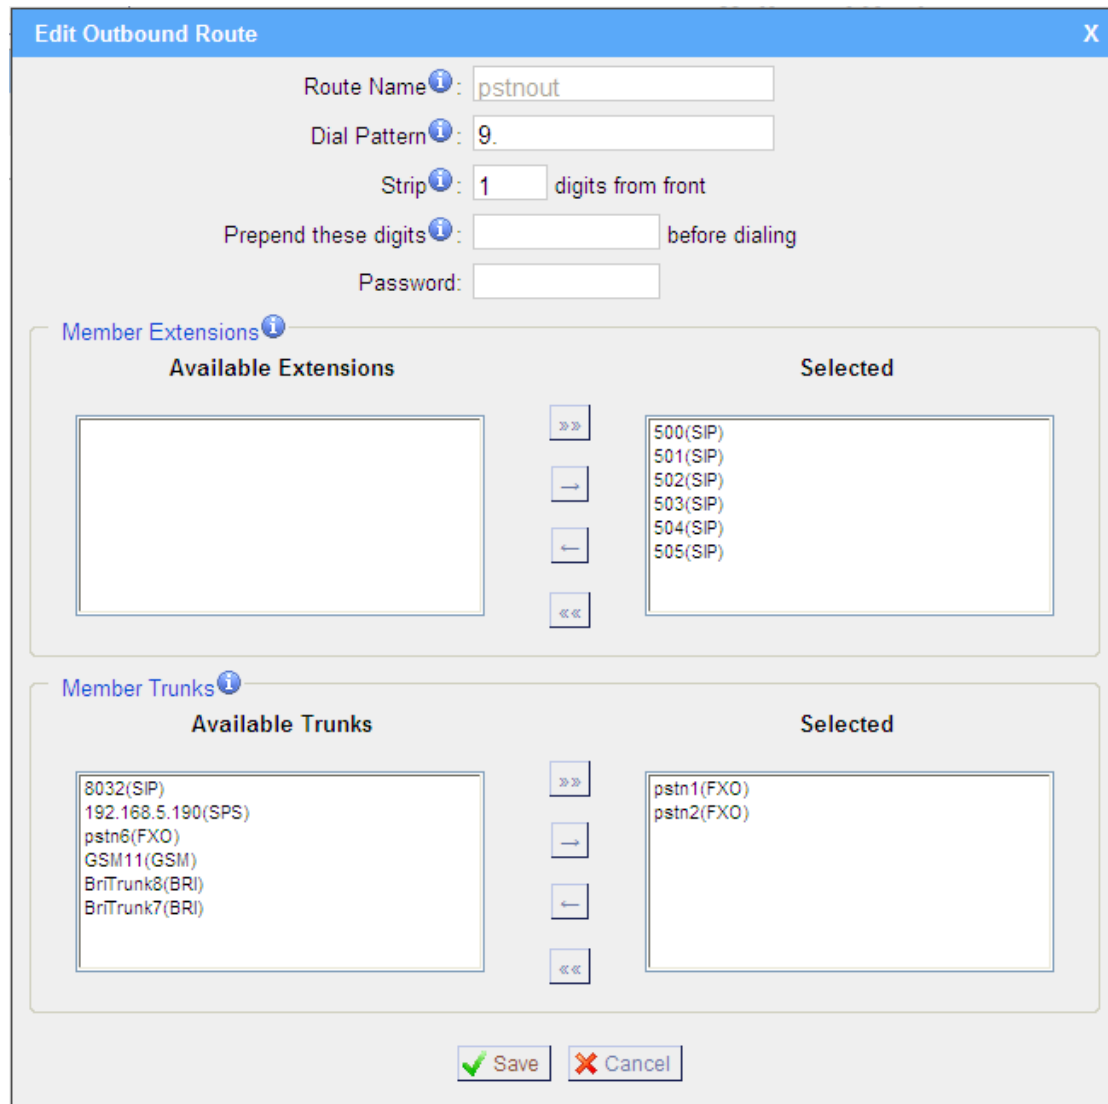


Figure 5-1

As we can see from the outbound route of 'pstnout', all phone numbers starting with 9 will have their first digit stripped off (digit 9) and will be sent to the PSTN (port 1-2).

After we have configured the above, we can dial 9 + local number to dial out via a PSTN line.

Note: Setting number prefix to wild card **X** and setting Strip to **0** digits from the front will allow all calls to go through this outbound route.

5.1.2 Sample Routing via VoIP Trunk

Let's configure all inside extensions to dial '0' through the VoIP Trunk.

1. Add VoIP service provider

Before we do add this, please make sure you have a VoIP Trunk account.

Trunks → VoIP Trunk → SIP Trunk

Enter your account information on this page, and click Save.

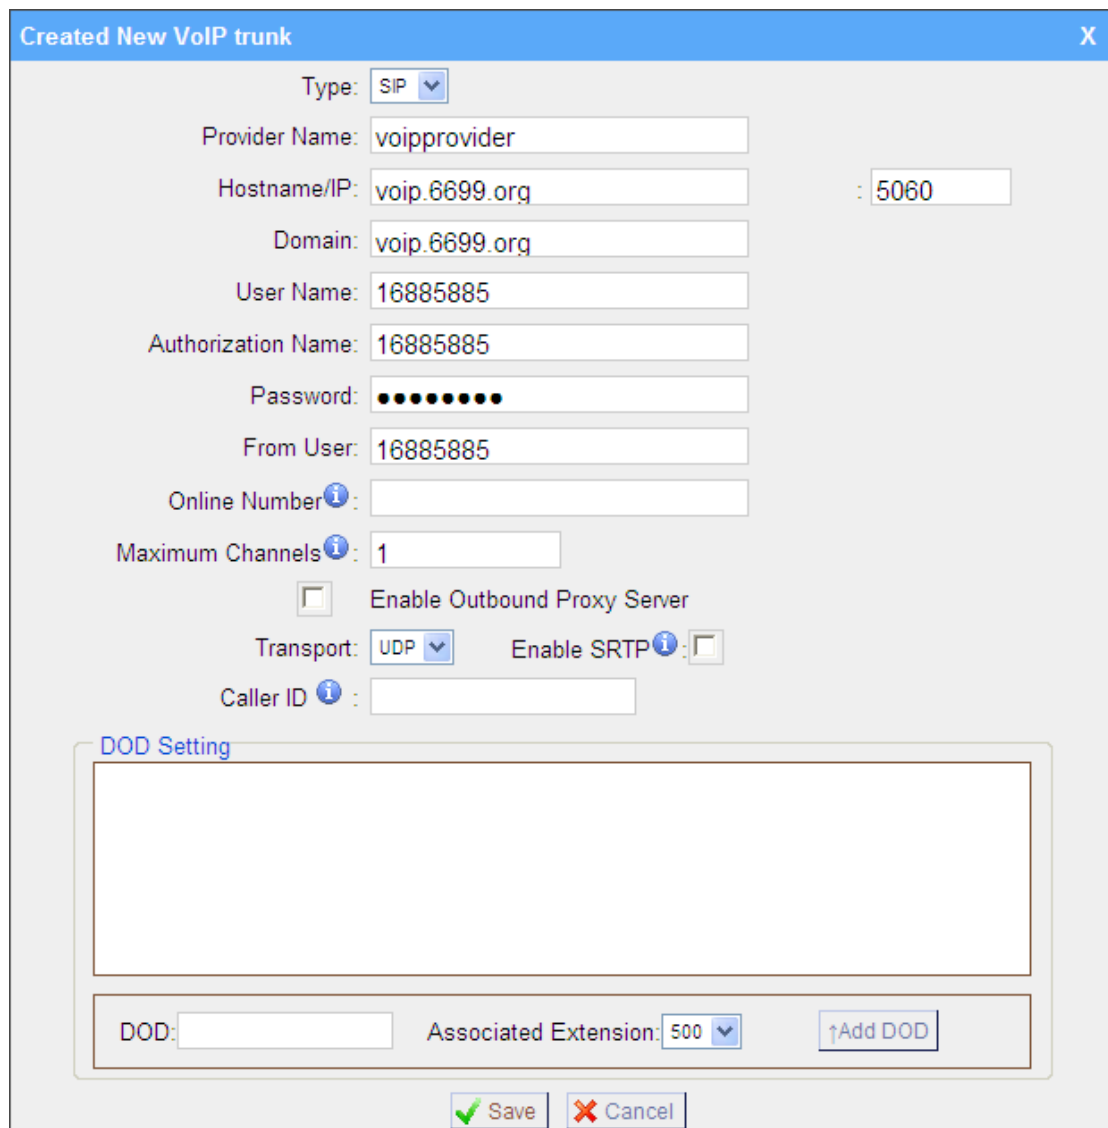


Figure 5-2

2. Add Outbound Routes

As we can see from the Outbound Route of 'voipout', all phone numbers

starting with 0 will have their first digit stripped off (digit 0) and will be sent to the SIP Trunk.

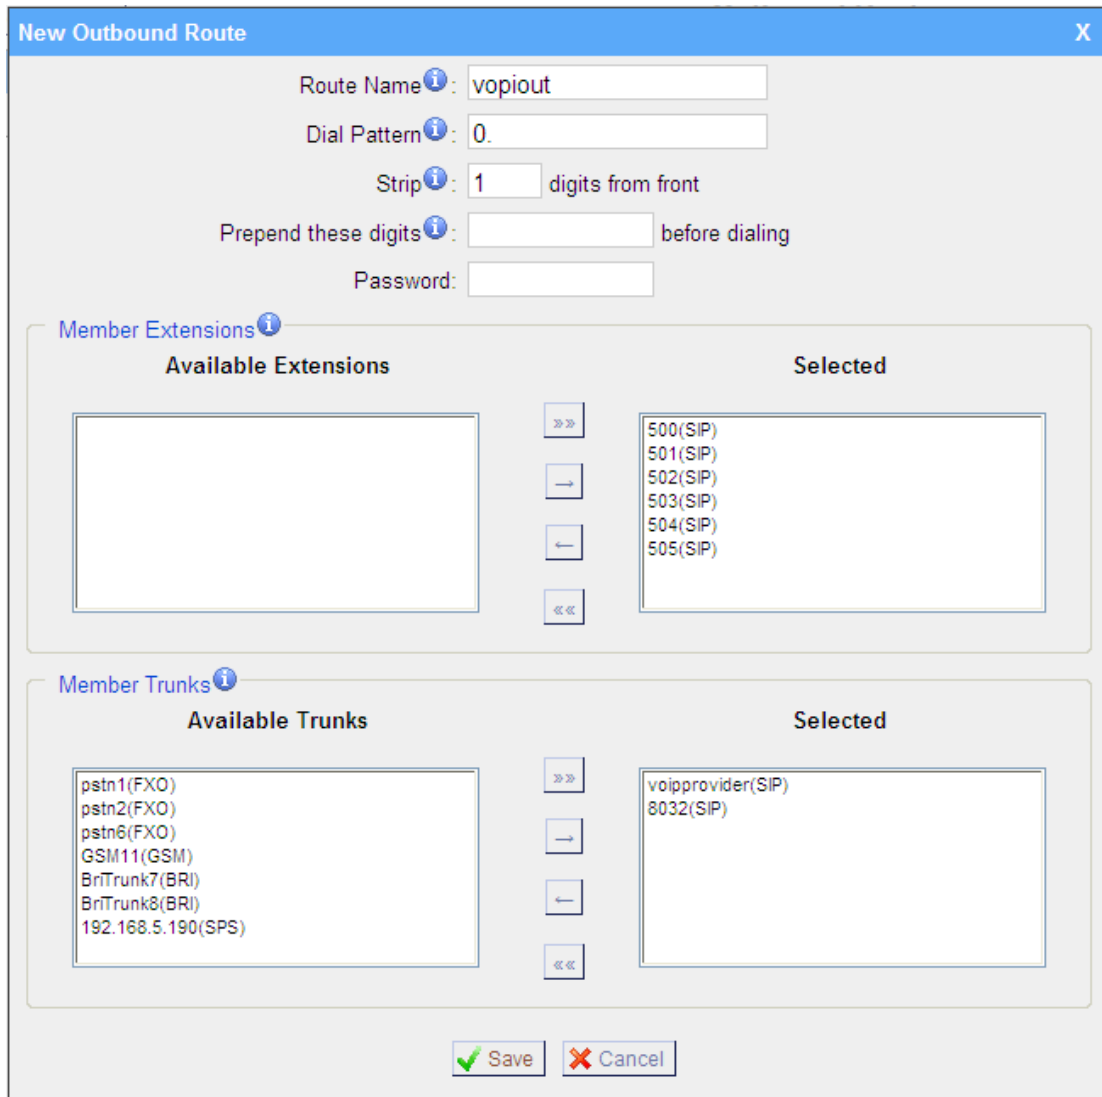


Figure 5-3

Now that we have added two outbound dialing rules, any call starting with 9 will be routed to the PSTN, and any number starting with 0 will be routed to the SIP Trunk.

5.2 Incoming call


5.2.1 Sample Routing to an IVR

Let's configure an incoming call to route to the IVR. In the IVR itself, let's configure digit 0 to route the call to extension 500, and digit 1 to route the

call to extension 501.

1. Add IVR

To add a new IVR, go to IVR → Create New IVR

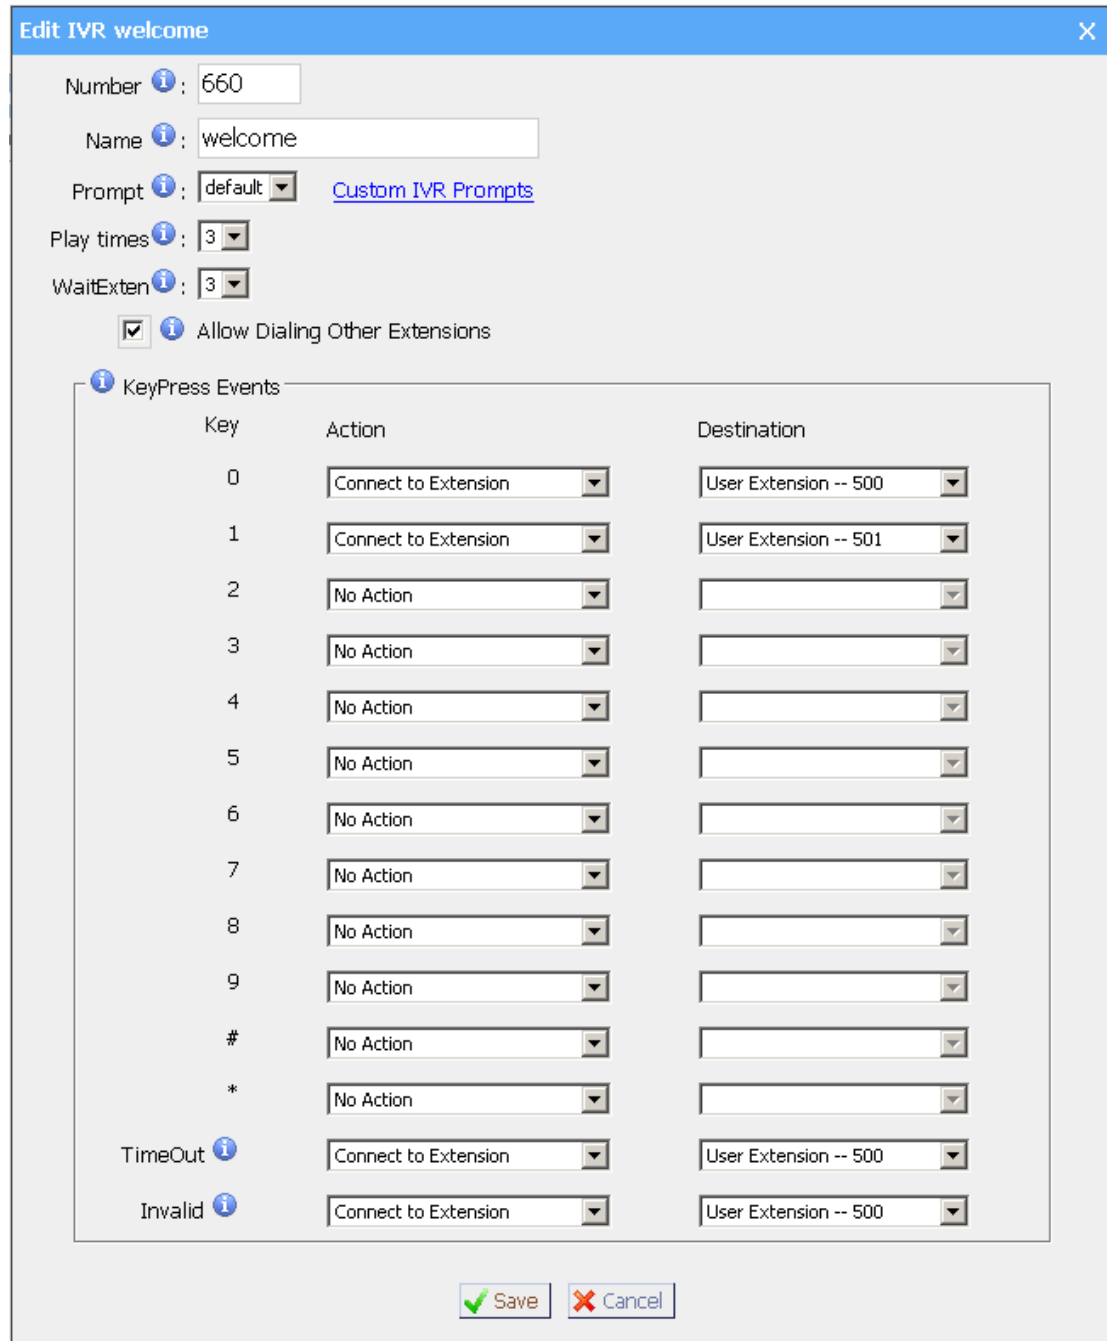

Edit IVR welcome

Number *i*: 660

Name *i*: welcome

Prompt *i*: default [Custom IVR Prompts](#)

Play times *i*: 3

WaitExten *i*: 3

i Allow Dialing Other Extensions

i KeyPress Events

Key	Action	Destination
0	Connect to Extension	User Extension -- 500
1	Connect to Extension	User Extension -- 501
2	No Action	
3	No Action	
4	No Action	
5	No Action	
6	No Action	
7	No Action	
8	No Action	
9	No Action	
#	No Action	
*	No Action	
TimeOut <i>i</i>	Connect to Extension	User Extension -- 500
Invalid <i>i</i>	Connect to Extension	User Extension -- 500

Save Cancel

Figure 5-4

2. Add Inbound Routes

As we can see from the Inbound Route of 'allin', all incoming calls will be sent to the IVR.

create New Inbound Route
X

General

Route Name ⓘ :

DID Number ⓘ :

Extension ⓘ :

Caller ID Number ⓘ :

Distinctive Ringtone ⓘ :

Member Trunks ⓘ

Available Trunks		Selected
	<input type="button" value="»»"/> <input type="button" value="→"/> <input type="button" value="←"/> <input type="button" value="««"/>	<div style="border: 1px solid #ccc; padding: 5px;"> pstn1(FXO) pstn2(FXO) pstn6(FXO) GSM11(GSM) BrnTrunk7(BRI) BrnTrunk8(BRI) 8032(SIP) voipprovider(SIP) </div>

During Office Hours

Destination:

<input type="checkbox"/> End Call	
<input type="checkbox"/> Extension	<input type="text" value="Extension -- 500"/>
<input type="checkbox"/> Voicemail	<input type="text" value="Voicemail -- 500"/>
<input checked="" type="checkbox"/> IVR	<input type="text" value="IVR -- welcome"/>
<input type="checkbox"/> RingGroup	<input type="text" value="RingGroup -- ringgroup_defi"/>
<input type="checkbox"/> Conference Room	<input type="text" value="Conference Room -- 640"/>
<input type="checkbox"/> DISA	<input type="text" value="DISA --"/>
<input type="checkbox"/> Queues	<input type="text" value="Queues --"/>
<input type="checkbox"/> Faxes ⓘ	<input type="text" value="Faxes -- 500"/>
<input type="checkbox"/> Outbound Routes ⓘ	<input type="text" value="Route Name -- pstnout"/>

Outside Office Hours

Destination:

<input type="checkbox"/> End Call	
<input type="checkbox"/> Extension	<input type="text" value="Extension -- 500"/>
<input type="checkbox"/> Voicemail	<input type="text" value="Voicemail -- 500"/>
<input checked="" type="checkbox"/> IVR	<input type="text" value="IVR -- welcome"/>
<input type="checkbox"/> RingGroup	<input type="text" value="RingGroup -- ringgroup_defi"/>
<input type="checkbox"/> Conference Room	<input type="text" value="Conference Room -- 640"/>
<input type="checkbox"/> DISA	<input type="text" value="DISA --"/>
<input type="checkbox"/> Queues	<input type="text" value="Queues --"/>
<input type="checkbox"/> Faxes ⓘ	<input type="text" value="Faxes -- 500"/>
<input type="checkbox"/> Outbound Routes ⓘ	<input type="text" value="Route Name -- pstnout"/>

Figure 5-5

APPENDIX A FAQ

Q1. How to Register SIP device?

A1:

1) Register SIP soft phone

Download the x-lite softphone from counterpath website

www.counterpath.com

After install the x-lite, right click the panel and select the SIP Account setting and then configure it.

Display Name: 500

User Name: 500

Password: 500

Authorization Name: 500

Domain: 192.168.5.150

2) Register IP Phone (for example, Yealink's T28 IP Phone)

a) Connect the T28's Internet port to the switch. And it can get the IP from your route.

b) Press the 'OK' key on T28 to get the IP of T28.

c) Put the IP on web browser then you can enter the T28 configure page through this IP.

d) Put the SIP extensions info on the T28 IP phones.

Display Name: 501

User Name: 501

Register Name: 501

Password: 501

SIP Server: 192.168.5.150

Use the same method register another T28 to other extension.

Q2. How do I reset MyPBX back to the factory default settings?

A2: To perform a reset, please follow steps below:

Step 1: Hold down the 'Reset' button on the back of the unit for 5 seconds and watch the LEDs on the front of the MyPBX. When the status LED turns red, let go of the reset button.

Step 2: When the RUN status LED starts blinking, MyPBX will be set back to factory defaults.

Step 3: To access the configuration page, navigate to **192.168.5.150** using a web browser. Make sure that you are on the 192.168.5.0 subnet before

doing this.

Step 4: Login to the device with the username 'admin' and the password 'password', in order to begin reconfiguring the device.

APPENDIX B How to Configure Autobackup

Before Autobackup can be properly configured, an SMB share folder accessible from MyPBX must be set up on a Windows based machine. Once that has been set up, please follow the steps below.

Step 1 Add a new folder, rename it, and set this new folder's share Properties according to Figure B-1

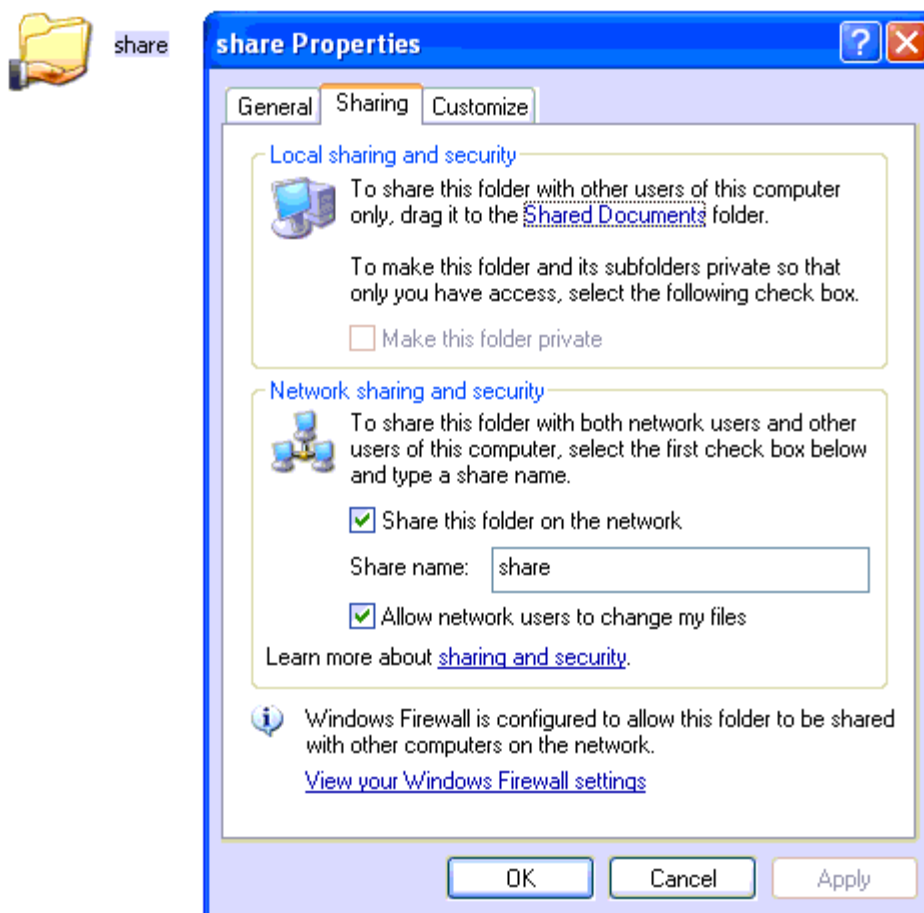


Figure B-1 Set up share Properties

Step 2 Enter the new folder and create a new text file, then rename this file to status.txt. This step is very important, DO NOT forget to create the status.txt file.

Step 3 Configure Autobackup settings on MyPBX to Figure B-2

External Storage Settings

The External Storage feature is used to extend storage space. Once configured, the files(voicemail, call recording files, CDR files) created before the configured days will be moved to the Net-Disk.

Step 1: Create a Net-Disk on a chosen computer

Step 2: Input the Net-Disk properties

Net-Disk Host/IP:

Net-Disk Share Name:

Net-Disk Access Username:

Net-Disk Access Password:

Move files created before: days ago

Step 3: Save Net-Disk settings

Step 4: Make sure the settings are successfully completed

Figure B-2 Autobackup Setting

Net-Disk Host/IP: Change this to the IP address of the computer where backup files will be stored.

Net-Disk Share Name: Change this to the name of the shared folder where backups will be stored.

Net-Disk Share Username: The user name used to log into the network share. Leave this blank if it is not required

Net-Disk Share Password: The password used to log into the network share. Leave this blank if it is not required

If configuring is correctly, open your Windows share folder to see if the MyPBX backup files and folders has been created. If the contents of the backup folder look similar to Figure B-3, then you have successfully configured Autobackup on the MyPBX unit.

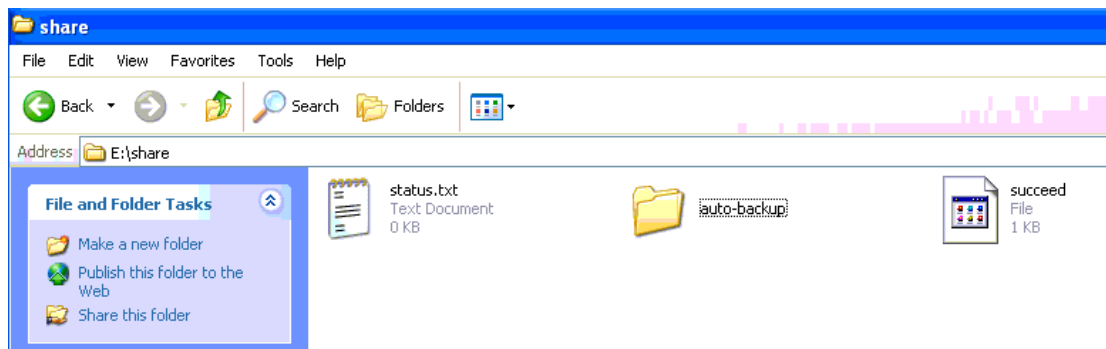


Figure B-3 Autobackup setting succeed

APPENDIX C How to Configure NAT setting

When MyPBX is behind a NAT(firewall),you need to configure NAT setting on MyPBX if you want to use a remote extension.

Please follow section **1** or **2** below depending on your network configuration.

1. If MyPBX is connected to a local network, you must set up port forwarding on your router. Specifically, you must map port 5060 (default SIP port) and port 10001-10200 (default RTP port range) as UDP ports.

Next, go to the MyPBX web interface and configure the SIP settings according to Figure C-1:

External IP Address: your router's public IP address

External Host: your router's domain

External Refresh Interval: 20 seconds

Local Network Identification: 192.168.5.0/255.255.255.0 (change this according to your network configuration)

NAT mode: Yes

Allow RTP Reinvite: No


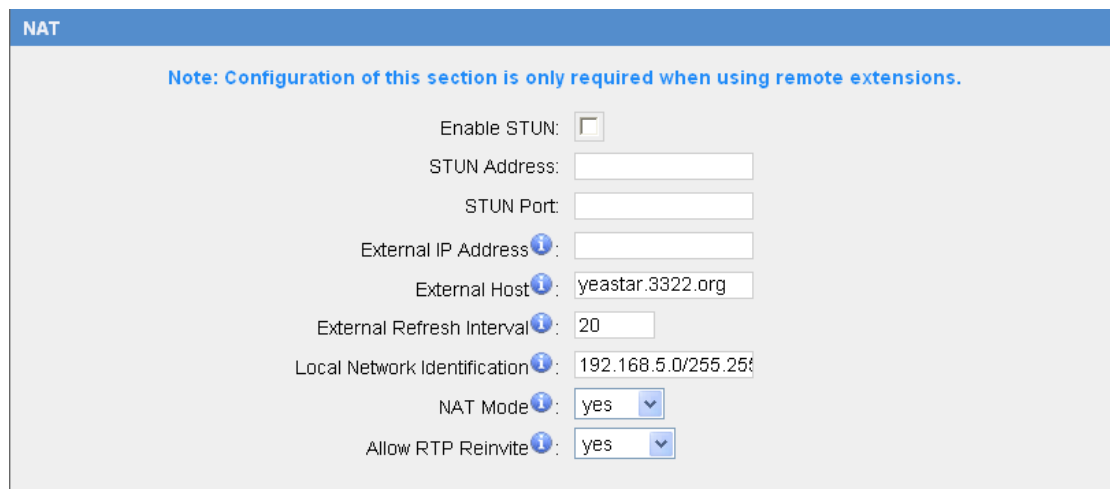


Figure C-1

Assuming that your router's host address is yeastar.3322.org, your local network is from 192.168.5.1-192.168.5.254, and the subnet Mask is 255.255.255.0, the MyPBX network settings should be configured like Figure C-2

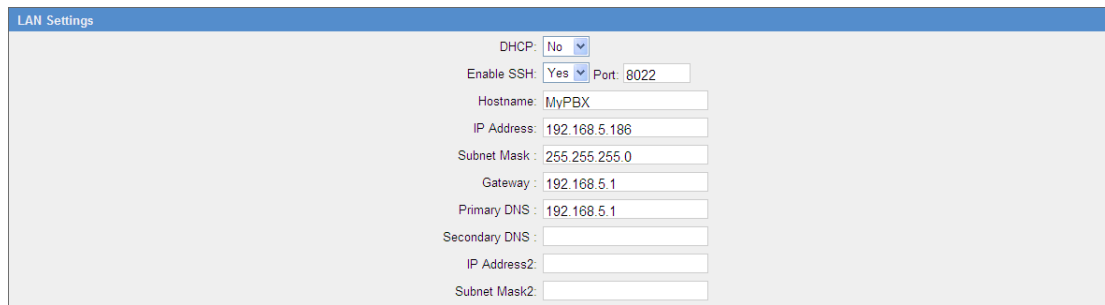

LAN Settings

DHCP: No

Enable SSH: Yes Port: 8022

Hostname: MyPBX

IP Address: 192.168.5.186

Subnet Mask: 255.255.255.0

Gateway: 192.168.5.1

Primary DNS: 192.168.5.1


Secondary DNS:

IP Address2:

Subnet Mask2:

Figure C-2 MyPBX Network setting

2. If MyPBX has a public IP, (i.e. is connected directly to your internet service provider), the network settings should be configured according to Figure C-3:

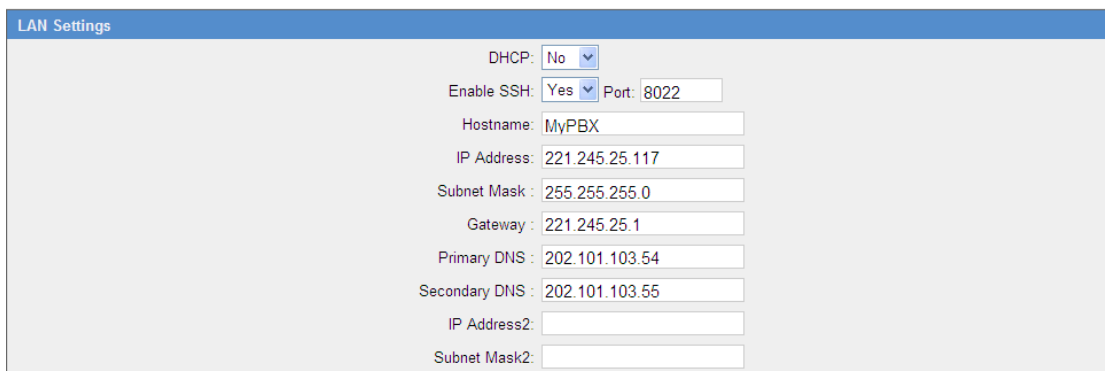

LAN Settings

DHCP: No

Enable SSH: Yes Port: 8022

Hostname: MyPBX

IP Address: 221.245.25.117

Subnet Mask: 255.255.255.0

Gateway: 221.245.25.1

Primary DNS: 202.101.103.54


Secondary DNS: 202.101.103.55

IP Address2:

Subnet Mask2:

Figure C-3

Next, you should configure the NAT settings according to Figure C-4

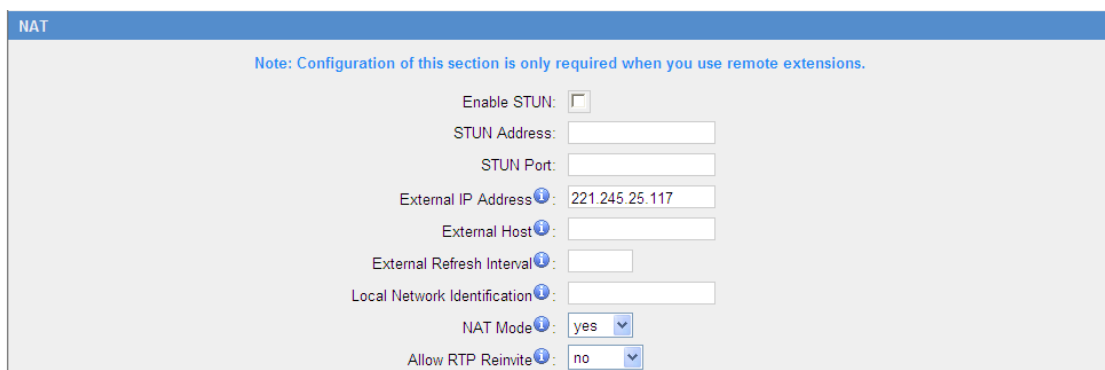

NAT

Note: Configuration of this section is only required when you use remote extensions.

Enable STUN:

STUN Address:

STUN Port:

External IP Address: 221.245.25.117

External Host:

External Refresh Interval:

Local Network Identification:

NAT Mode: yes

Allow RTP Reinvite: no

Figure C-4

External IP Address: The public IP address of MyPBX

External Host: Leave this blank if no domain has been configured

External Refresh Interval: Leave this blank

Local Network Identification: Leave this blank

NAT mode: Yes

Allow RTP Reinvite: No

APPENDIX D How to Use Auto Provision

Step1. Disable DHCP Server on your local network.
E.g. Disable DHCP Server on Linksys Router.

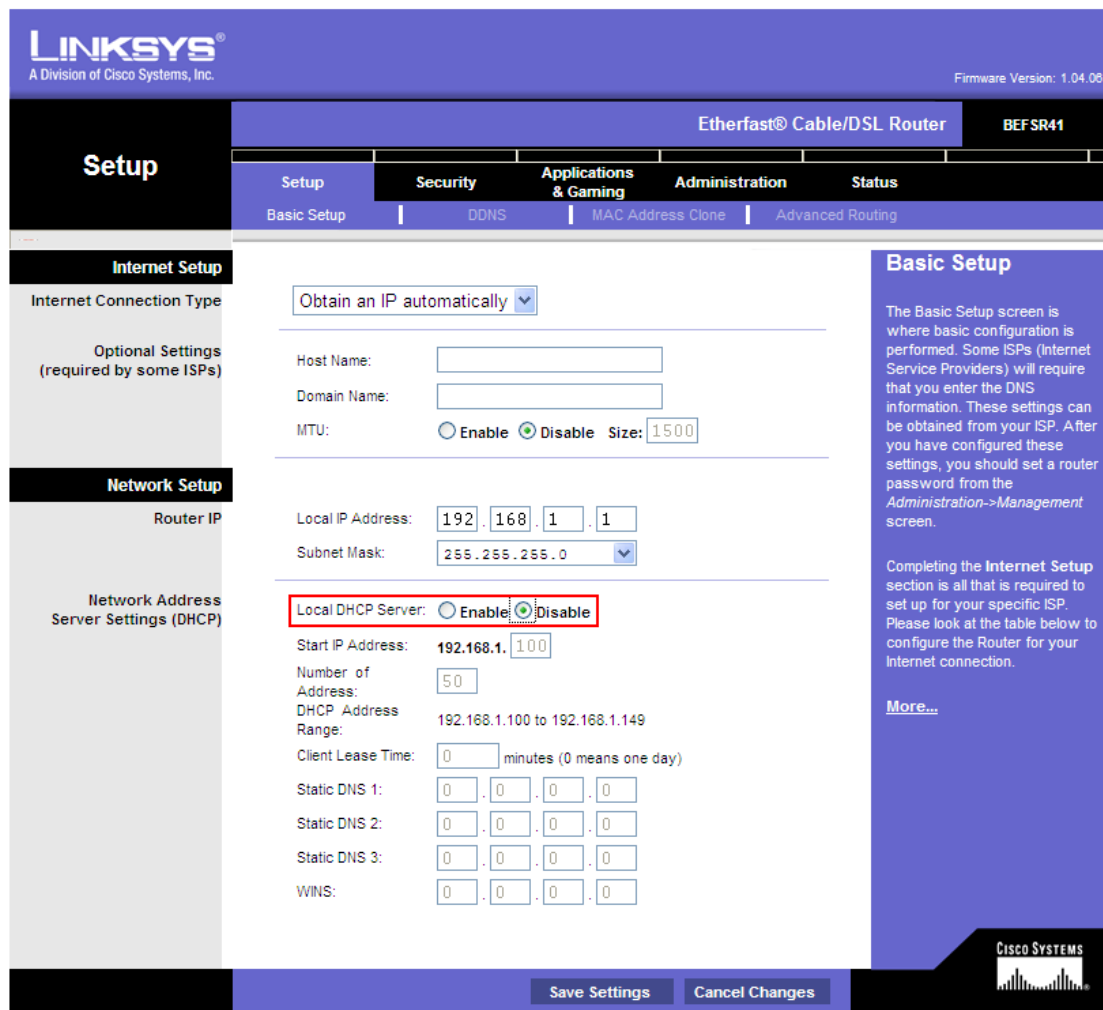


Figure D-1

Step2. Enable DHCP Server on MyPBX.
Login MyPBX web interface, System Settings → DHCP Server → Enable DHCP Server.

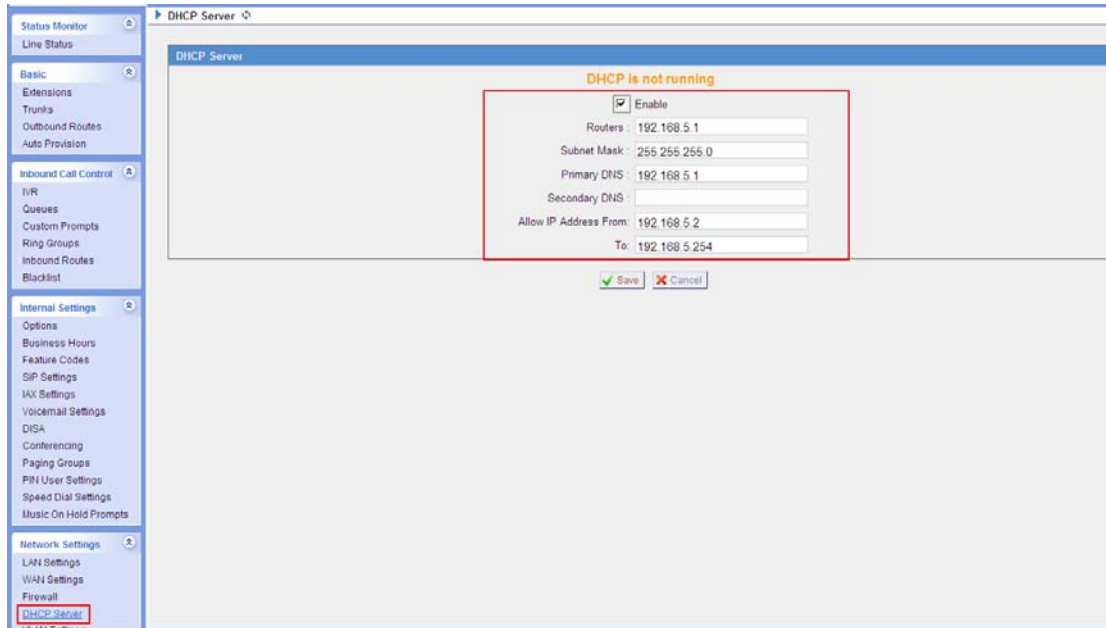


Figure D-2

Step3. Configure phones on MyPBX auto-provision page.

1. Login MyPBX web interface, Basic → Auto Provision → Create New Phone.

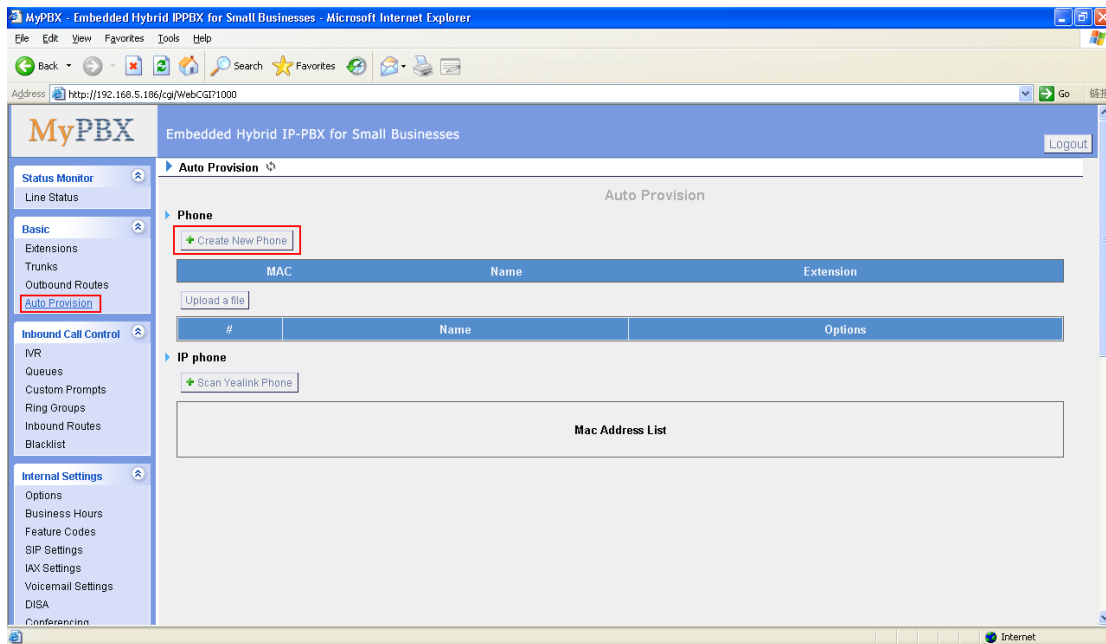


Figure D-3

2. Fill in the phone detail message on the pop-up windows.

Input IP Phone's MAC address, configure Name, Call waiting, Line, Extension, Label, Line active for the phone.

Line	Extension	Label	Line Active
<input checked="" type="checkbox"/> Line1	500	500	<input checked="" type="checkbox"/>
<input type="checkbox"/> Line2			<input type="checkbox"/>
<input type="checkbox"/> Line3			<input type="checkbox"/>
<input type="checkbox"/> Line4			<input type="checkbox"/>
<input type="checkbox"/> Line5			<input type="checkbox"/>
<input type="checkbox"/> Line6			<input type="checkbox"/>

Figure D-4

Step4. Turn on the power and connect the network cable to IP Phone.

Remark: The factory default setting of DHCP for IP Phone is enable, so you can skip this step to step 5.

If the DHCP is disable, please follow below step to enable it. (e.g.: Yealink’s IP Phone).

1. Login IP phone’s web page.
2. Enable DHCP.

Figure D-5

Step5. Finish.

APPENDIX E How Do I Configure Distinctive Ring Tones

Step1: On your IP phone, navigate to the Phone settings web configuration page and find the Distinctive Ring Tone section.

For each custom ring tone, enter the Internal Ringer Text (can be digits or text) to trigger the ring tone. For example, you may enter "Family".

e.g.: Yealink's IP phone.

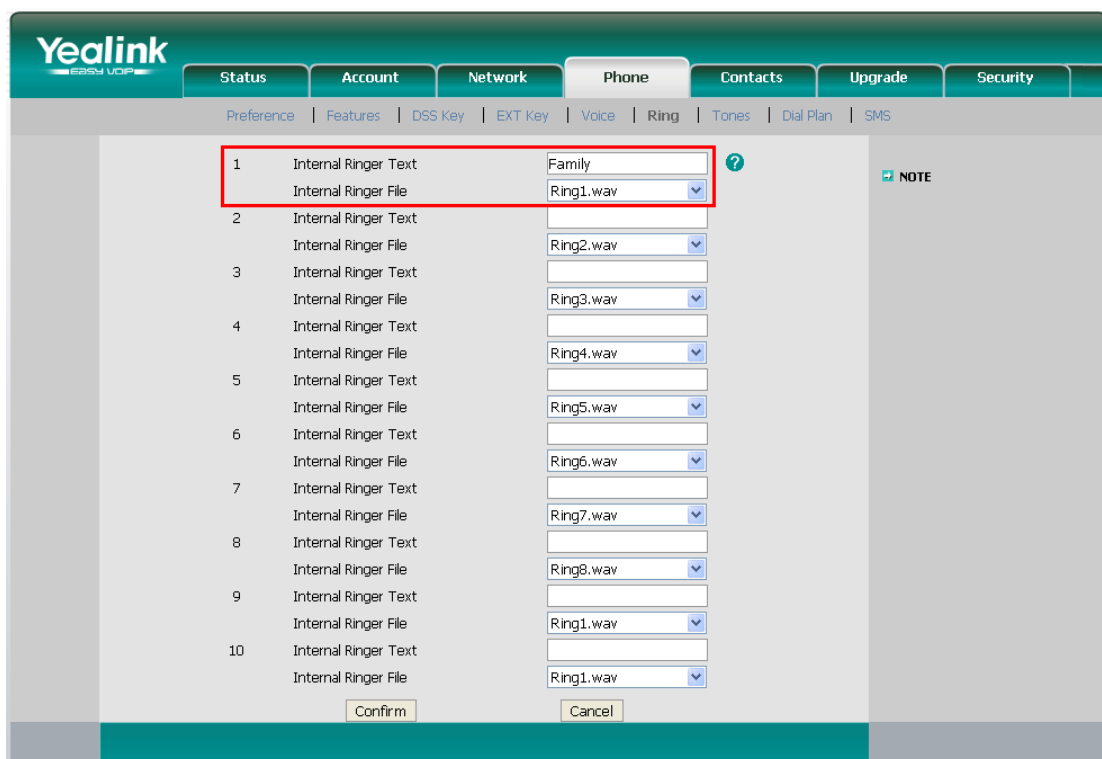


Figure E-1

Step2. Configure the 'Distinctive Ringtone' on MyPBX.

MyPBX web interface, Inbound Routes → Edit Inbound Route, fill in the Internal Ringer Text on 'Distinctive Ringtone'.

Edit Inbound Route: allin
X

General

Route Name i :

DID Number i :

Extension i :

Caller ID Number i :

Distinctive Ringtone i :

Member Trunks i

Available Trunks		Selected
	<input type="button" value="»»"/> <input type="button" value="→"/> <input type="button" value="←"/> <input type="button" value="««"/>	<div style="font-size: 10px;"> pstn1(FXO) pstn2(FXO) pstn6(FXO) GSM11(GSM) BrTrunk7(BRI) BrTrunk8(BRI) 8032(SIP) voipprovider(SIP) </div>

During Office Hours

Destination:

<input type="checkbox"/> End Call	
<input type="checkbox"/> Extension	<input type="text" value="Extension -- 500"/> v
<input type="checkbox"/> Voicemail	<input type="text" value="Voicemail -- 500"/> v
<input checked="" type="checkbox"/> IVR	<input type="text" value="IVR -- welcome"/> v
<input type="checkbox"/> RingGroup	<input type="text" value="RingGroup -- ringgroup_defi"/> v
<input type="checkbox"/> Conference Room	<input type="text" value="Conference Room -- 640"/> v

Figure E-2

Step3. Finish.

APPENDIX F How to Use Email to SMS

How to use Email to SMS

You need to send an email to the specified email address (you set in Email Settings. In this case, it is lears@yeastar.com). The content of this email will be sent to the number you want as message. The subject (title) of the email will determine the number. Here are some examples of the formats to the subject of the email.

Example:

1. Send message with no PIN code and default GSM port.

Format: phonenumber

if the subject is "12345678", the text of this email ("Welcome to Yeastar!") will be sent to number "12345678" through the first available GSM trunk (No pin code should be set by administrator).

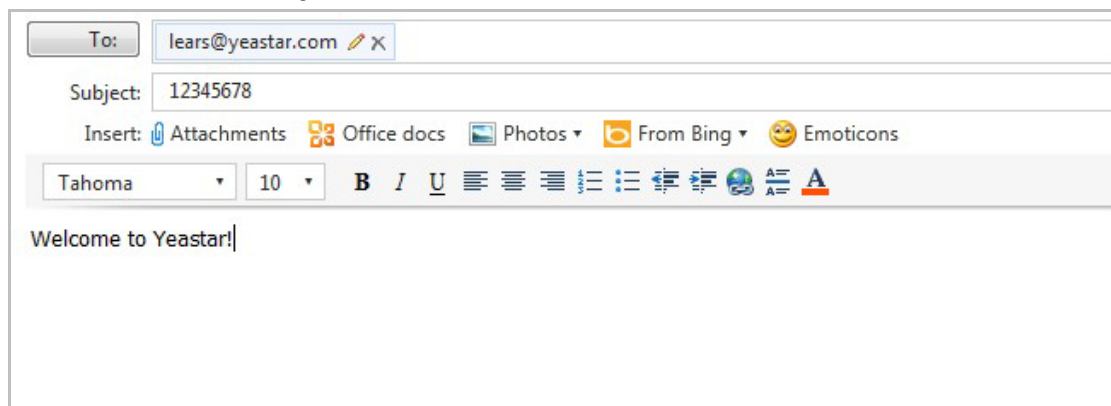


Figure F-1

2. Send message with no PIN code and specified GSM port.

Format: port:portnumber-phonenumber

if the subject is "port:9-12345678", the text of this email ("Welcome to Yeastar!") will be sent to the number "12345678" through GSM trunk 9 (No pin code should be set by administrator).

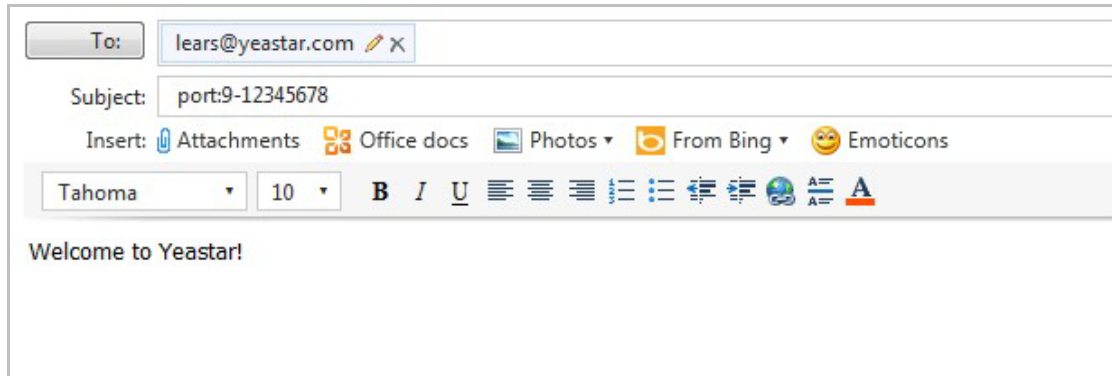


Figure F-2

3. Send message with PIN code and default GSM port.

Format: 500:pincode-number-phonenummer

if the subject is "500:987-12345678", the text of this email("Welcome to Yeastar!") will be sent to number "12345678" through the first available GSM trunk("987" is the pin code set by administrator).

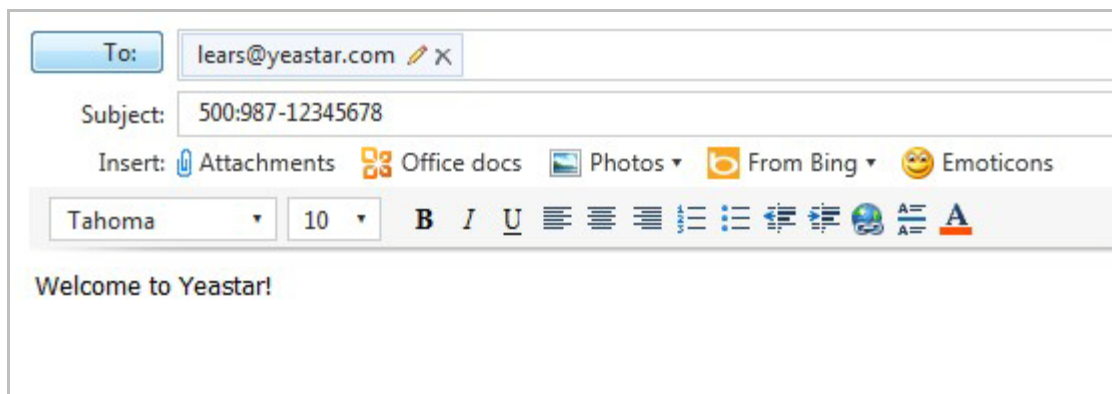


Figure F-3

4. Send message with PIN code and specified GSM port.

Format: 500:pincode-number-port:portnumber-phonenummer

if the subject is "500:987-port:9-12345678", the text of this email("Welcome to Yeastar!") will be sent to number "12345678" through GSM trunk 9("987" is the pin code set by administrator).

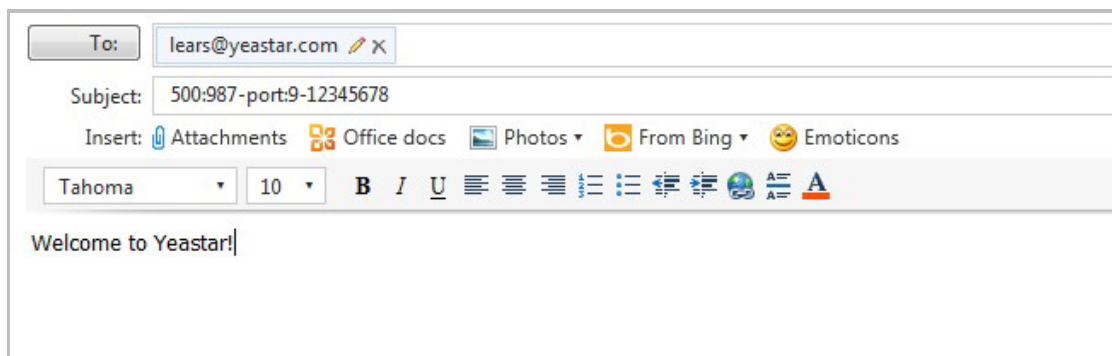


Figure F-4 Figure 3-53

APPENDIX G How to Use DID

Direct inward dialing (DID), also called direct dial-in (DDI) in Europe and Oceania, is a feature offered by telephone companies for use with their customers' private branch exchange (PBX) systems. In DID service the telephone company provides one or more trunk lines to the customer for connection to the customer's PBX and allocates a range of telephone numbers to this line (or group of lines) and forwards all calls to such numbers via the trunk.

MyPBX support DID, you can configure DID in inbound route. Related settings: **DID Number, Extension, Destination.**

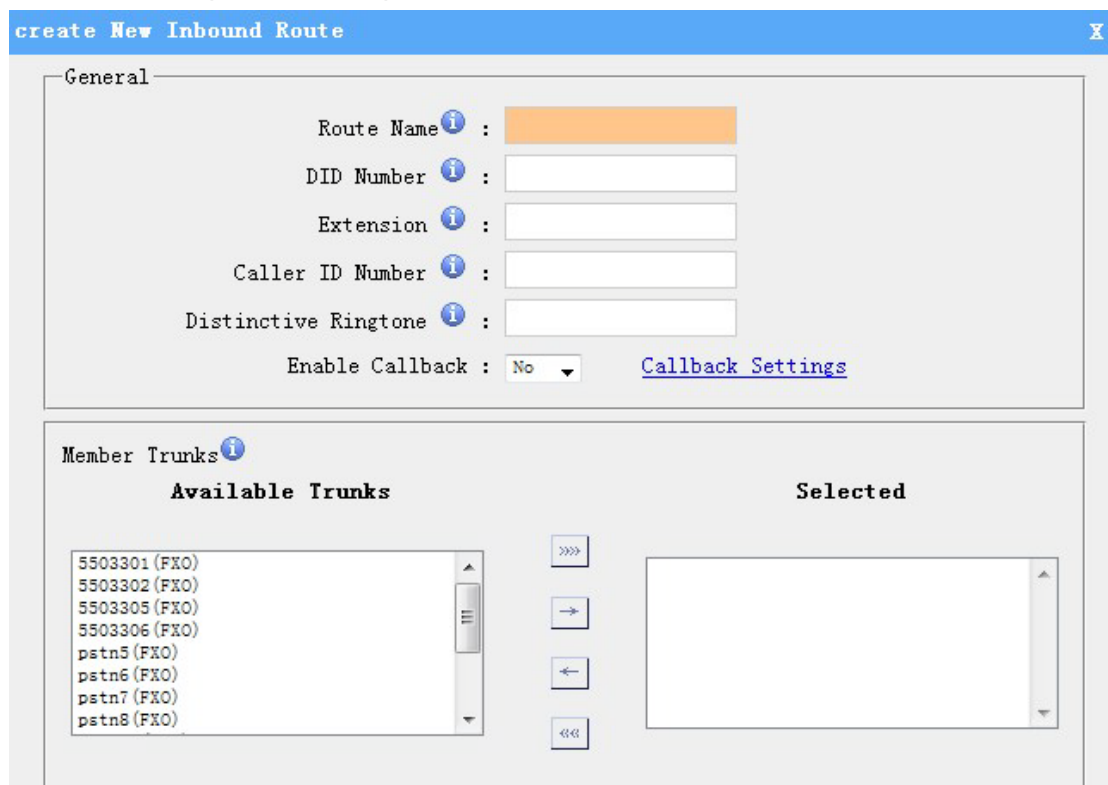


Figure G-1

•DID Number

Define the expected DID Number if this trunk passes DID on incoming calls. Leave this field blank to match calls with any or no DID info. Only service provider, E1 trunks, BRI trunks or SIP trunks need to be configured with this setting.

You can also use pattern matching to match a range of numbers. The following patterns may be used:

X: Any Digit from 0-9

Z: Any Digit from 1-9

N: Any Digit from 2-9

[12345-9] : Any digit in the brackets (in this example, 1,2,3,4,5,6,7,8,9)

The '.' Character will match any remaining digits. For example, 9011. will match any phone number that starts with 9011, excluding 9011 itself.

The '!' will match none remaining digits, and causes the matching process to complete as soon as it can be determined that no other matches are possible.

•**Extension**

Define the extension for DID number, this field only valid when use E1 trunk for this inbound router. You can only input number and '-' in this field, and the format can be xxx or xxx-xxx. The count of the number must be only one or equal the count of the DID number.

•**Destination**

If you don't set the extension, you can set the destination of the call here.

Example 1:

Step1: You set the DID number (5503XXX in this example).

Step2: You choose the destination (Ring Group in this example).

The configuration of this example means when the incoming call with DID number 5503XXX (7 digits number start with 5503) will go to the destination Ring Group.

If you choose the destination, please leave the Extension form blank.

create New Inbound Route
X

General

Route Name i :

DID Number i :

Extension i :

Caller ID Number i :

Distinctive Ringtone i :

Enable Callback : [Callback Settings](#)

Member Trunks i

Available Trunks		Selected
<div style="font-size: small;"> 5503301 (FXO) 5503302 (FXO) 5503305 (FXO) 5503306 (FXO) pstn5 (FXO) pstn6 (FXO) pstn7 (FXO) pstn8 (FXO) </div>	<input type="button" value=">>>"/> <input type="button" value="→"/> <input type="button" value="←"/> <input type="button" value="<<<"/>	

During Office Hours

Destination:

<input type="radio"/> End Call	
<input type="radio"/> Extension	<input type="text" value="Extension -- 500"/>
<input type="radio"/> Voicemail	<input type="text" value="Voicemail -- 500"/>
<input type="radio"/> IVR	<input type="text" value="IVR -- welcome"/>
<input checked="" type="radio"/> RingGroup	<input type="text" value="RingGroup -- NationalSe"/>
<input type="radio"/> Conference Room	<input type="text" value="Conference Room -- 640"/>
<input type="radio"/> DISA	<input type="text" value="DISA -- test"/>
<input type="radio"/> Queues	<input type="text" value="Queues -- test"/>
<input type="radio"/> Faxes i	<input type="text" value="Faxes -- 500"/>
<input type="radio"/> Outbound Routes i	<input type="text" value="Route Name -- toOCS"/>

Figure G-2

Example 2:

Step1: You set the DID number (6001-6099 in this example).

Step2: You set the Extension (6001-6099 in this example).

The configuration of this example means when the incoming call with DID number 6001 to 6099 will go to the destination 6001 to 6099(number 6001 to extension 6001, number 6002 to extension 6002).

The destination you set below will be disabled if you set the Extension.

create New Inbound Route X

General

Route Name ⓘ :

DID Number ⓘ :

Extension ⓘ :

Caller ID Number ⓘ :

Distinctive Ringtone ⓘ :

Enable Callback : [Callback Settings](#)

Member Trunks ⓘ

Available Trunks		Selected
<input type="text" value="5503301 (FXO)"/> <input type="text" value="5503302 (FXO)"/> <input type="text" value="5503305 (FXO)"/> <input type="text" value="5503306 (FXO)"/> <input type="text" value="pstn5 (FXO)"/> <input type="text" value="pstn6 (FXO)"/> <input type="text" value="pstn7 (FXO)"/> <input type="text" value="pstn8 (FXO)"/>	<input type="button" value=">>>"/> <input type="button" value="→"/> <input type="button" value="←"/> <input type="button" value="<<<"/>	<input type="text"/>

Figure G-3

APPENDIX H How to Use BLF Key to Choose the PSTN line.

MyPBX allows you to choose the specific PSTN line to make outbound call by pressing the BLF key on the IP Phone.

Follow the steps to do the configuration with your Yealink phone

1. We want to choose pstn1 or pstn2 to call out.

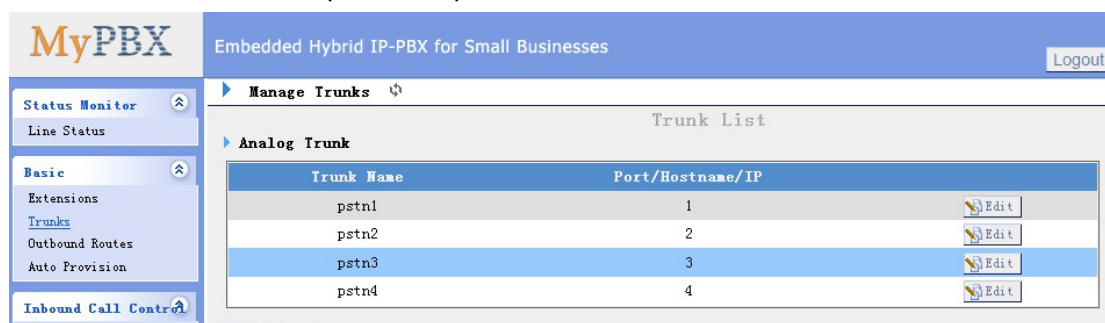


Figure H-1

2. Configure the IP Phone:



Figure H-2

Test

When you press DSS Key 1/2, the phone will connect to pstn1/pstn2 line. If pstn1/pstn2 is not busy, you will hear the dial tone. You can dial the number you want and use this line to call out then.

APPENDIX I How to Configure Hot Standby

When you are using MyPBX Enterprise, you can enable Hot Standby if you have 2 MyPBX. Then when one MyPBX is down, the other MyPBX will take over service. This feature can ensure your telephone system runs normally.

Requirements of Hot Standby:

1. The 2 MyPBXs MUST have same hardware version and firmware version.
2. The 2 MyPBXs MUST install same modules on same slots.
3. The 2 MyPBXs MUST have different IP and hostname.

Example:

In this example, we use 2 MyPBXs. One MyPBX has an IP of "192.168.5.181" and a hostname of MyPBX181; the other MyPBX has an IP of "192.168.5.182" and a hostname of MyPBX182. MyPBX181 is "Primary" and MyPBX182 is "Secondary"; the virtual IP is "192.168.5.183", and net mask is "255.255.254.0"; the gateway is "192.168.5.1".

MyPBX181 Basic(Figure I-1):

Enable: Yes

Mode: Primary

Secondary Hostname: MyPBX182

Secondary IP: 192.168.5.182

Access Code: 123

Virtual IP Address: 192.168.5.183/255.255.254.0

Network Connection Detection: 192.168.5.1

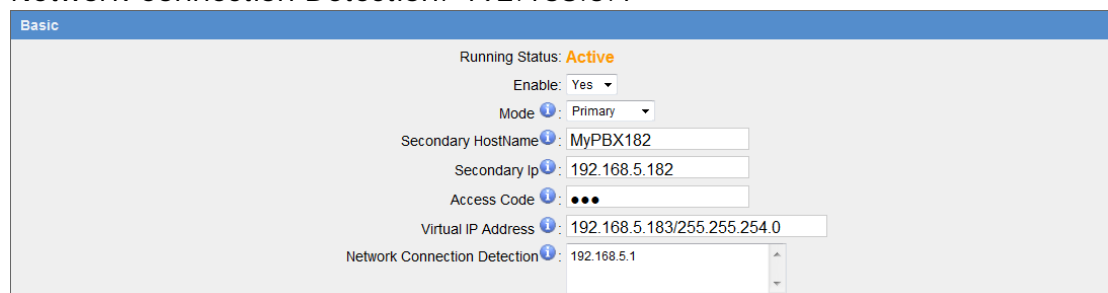


Figure I-1

MyPBX182 Basic(Figure I-2):

Enable: Yes

Mode: Secondary

Primary Hostname: MyPBX181

Primary IP: 192.168.5.181

Access Code: 123

Virtual IP Address: 192.168.5.183/255.255.254.0

Network Connection Detection: 192.168.5.1

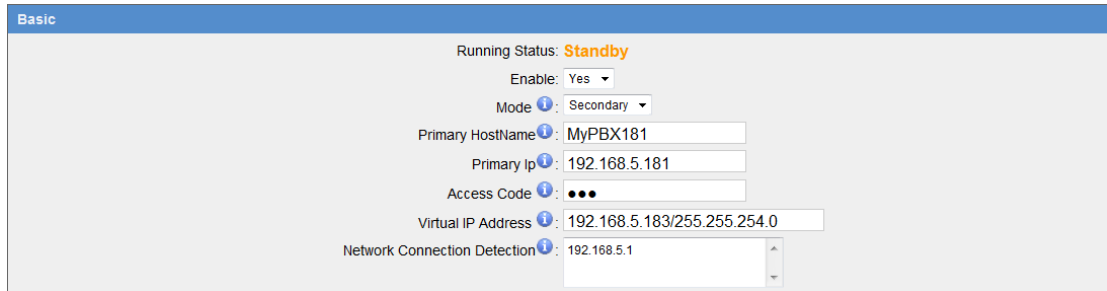


Figure I-2

MyPBX181 Down Notification & Advanced(Figure I-3):

After you configure “Down Notification” and “Advanced” on MyPBX181, the configuration on MyPBX182 will be synchronized with MyPBX181. So, we only should configure “Down Notification” and “Advanced” on MyPBX181.

Notification Method: we choose “Both”; then enter the email in “Email List”and mobile number in “Number List”.

Advanced: Keep default.

“Save” and “Apply Changes”, MyPBX182 will synchronize the configuration on MyPBX181.

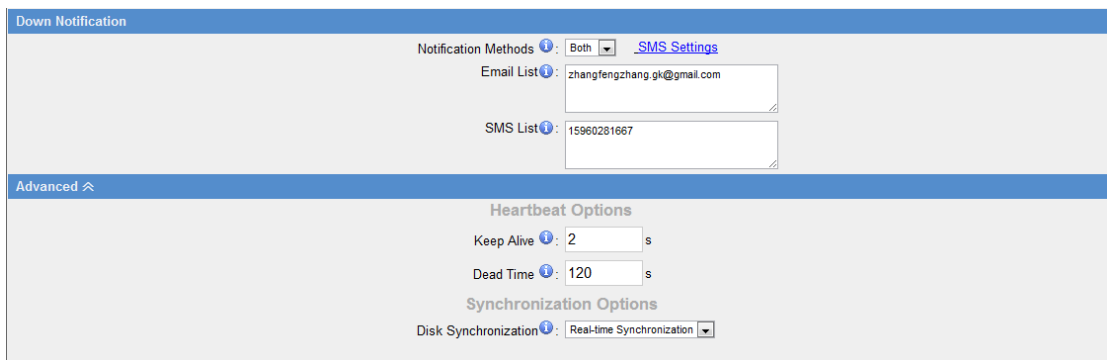


Figure I-3

APPENDIX J How to Enable Auto Recording

MyPBX Enterprise allows you to record the calls automatically. Here is the guide for you to use it.

J.1 Login

From your web browser, input the IP address of the MyPBX server.
Login the system with the monitor account:

User Name: monitor

Password: password



Figure J-1

J.2 Recording Settings

1) General Preferences

Enable this function here. You can tick:

- a. Record Inbound calls
- b. Record Outbound calls
- c. Record Internal calls
- d. Record Callback calls.

2) Apply To

•Trunks Recording

When ticked, all calls through the selected trunks will be recorded.

•Extensions Recording

When ticked, all calls made by the selected extensions will be recorded.

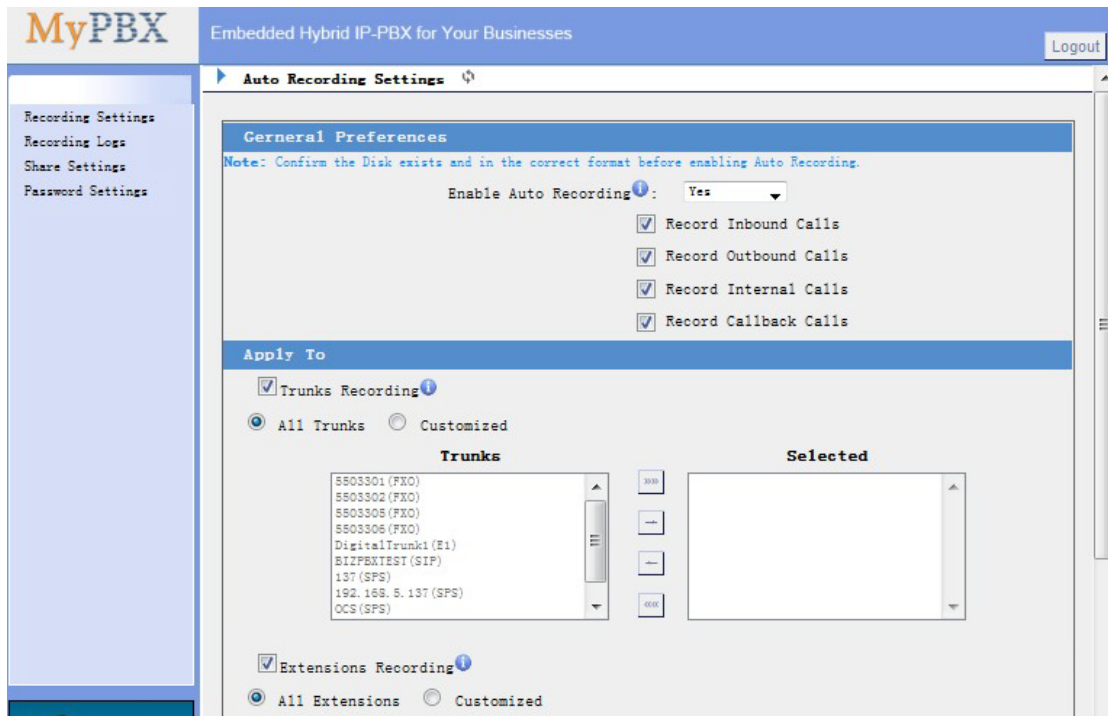


Figure J-2

J.3 Recording Logs

·Start Search


You are able to search the record by Start Date to End Date, Extension, Trunk, Duration and Communication Type.

·The Record List

You can choose the record to download or delete.

You can check the ID, Time, Callee, Caller , Trunk, Duration(second), Communication Type of each record

You can play, download or delete the recording files.

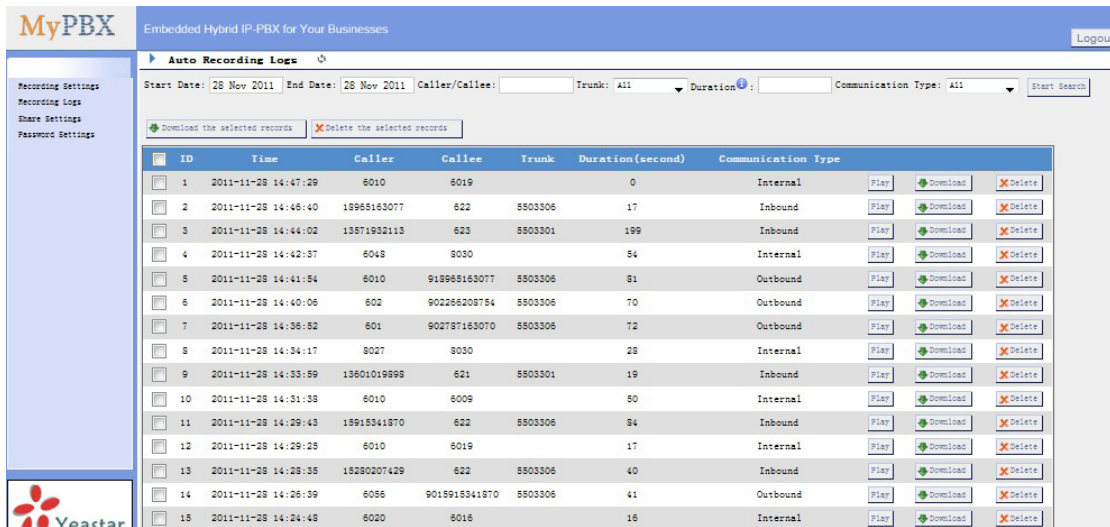

The screenshot shows the 'Auto Recording Logs' page in the MyPBX interface. It includes a search bar with fields for Start Date (28 Nov 2011), End Date (28 Nov 2011), Caller/Callee, Trunk (All), Duration, and Communication Type (All). Below the search bar are buttons for 'Download the selected records' and 'Delete the selected records'. The main content is a table with 15 rows of recording logs, each with columns for ID, Time, Caller, Callee, Trunk, Duration(second), and Communication Type. Each row also has 'Play', 'Download', and 'Delete' buttons.

ID	Time	Caller	Callee	Trunk	Duration(second)	Communication Type
1	2011-11-28 14:47:29	6010	6019		0	Internal
2	2011-11-28 14:46:40	18965163077	622	5503306	17	Inbound
3	2011-11-28 14:44:02	13871932115	623	5503301	199	Inbound
4	2011-11-28 14:42:37	6045	6030		54	Internal
5	2011-11-28 14:41:54	6010	918965163077	5503306	81	Outbound
6	2011-11-28 14:40:06	602	902266209754	5503306	70	Outbound
7	2011-11-28 14:38:52	601	902787163070	5503306	72	Outbound
8	2011-11-28 14:34:17	9027	6030		28	Internal
9	2011-11-28 14:33:59	13601019898	621	5503301	19	Inbound
10	2011-11-28 14:31:38	6010	6009		50	Internal
11	2011-11-28 14:29:43	15918341870	622	5503306	84	Inbound
12	2011-11-28 14:29:25	6010	6019		17	Internal
13	2011-11-28 14:28:35	15280207429	622	5503306	40	Inbound
14	2011-11-28 14:26:39	6056	9015915341870	5503306	41	Outbound
15	2011-11-28 14:24:48	6020	6016		16	Internal

Figure J-3

J.4 Share setting

Use this setting to share the recording file on the network.

•User Name


The user name to check the file

•Password

The password to the user name

•Share Name

The name of the folder showed on the network.

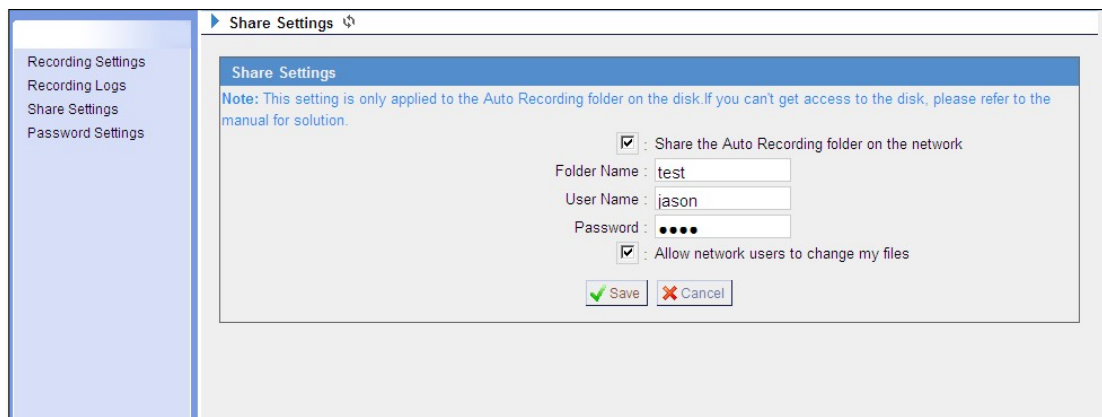

The screenshot shows the 'Share Settings' configuration page. It includes a note: 'Note: This setting is only applied to the Auto Recording folder on the disk. If you can't get access to the disk, please refer to the manual for solution.' The configuration options are:

- Share the Auto Recording folder on the network
- Folder Name:
- User Name:
- Password:
- Allow network users to change my files

At the bottom, there are 'Save' and 'Cancel' buttons.

Figure J-4

For WIN 7/Vista user. please modify the registry before checking the shared file :

Step1: Start->Run->regedit

Step2: Modify the value of

"HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Control\Lsa\
LmCompatibilityLevel "

to "1".

If " LmCompatibilityLevel" doesn't exit, create a Dword value

"LmCompatibilityLevel " = 1

You can check the recording file on the network by Explorer/Resource Manager

Run: \\ IP of MyPBX

In the picture below , the IP is 192.168.5.101

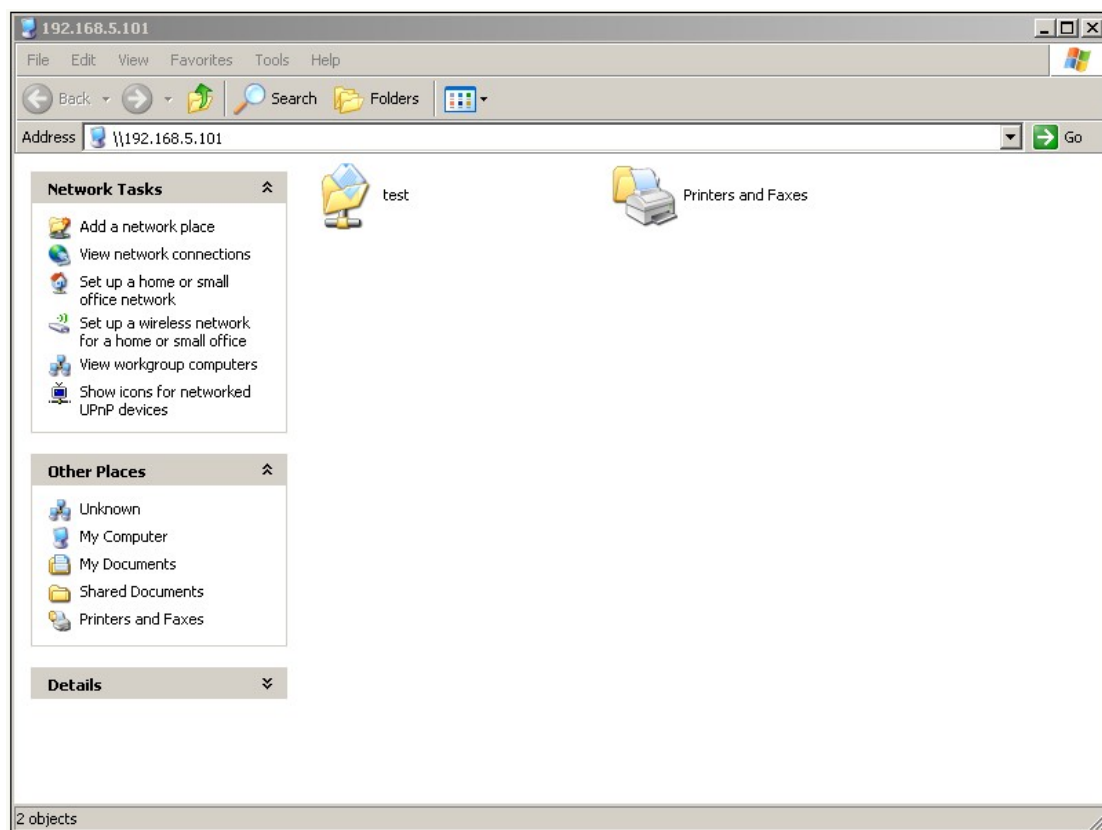


Figure J-5

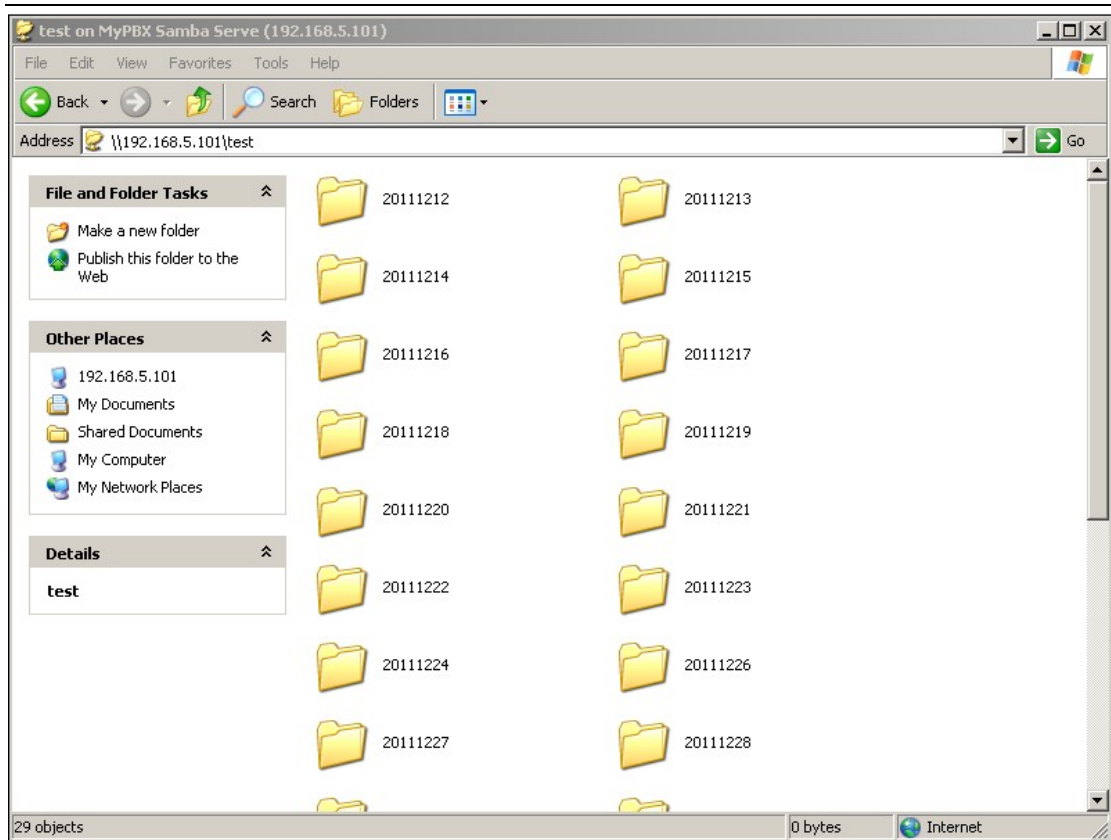


Figure J-6

If you change the password of the share folder, the network users may not be able to check the shared files then.

Please ask the network user to try:

- step1: Start-> Run -> cmd
- step2: net use * /del (the is a space behind *)
- step3: Visit the device again with new password

J.5 Password Setting

You can change the password of the account "monitor" here.

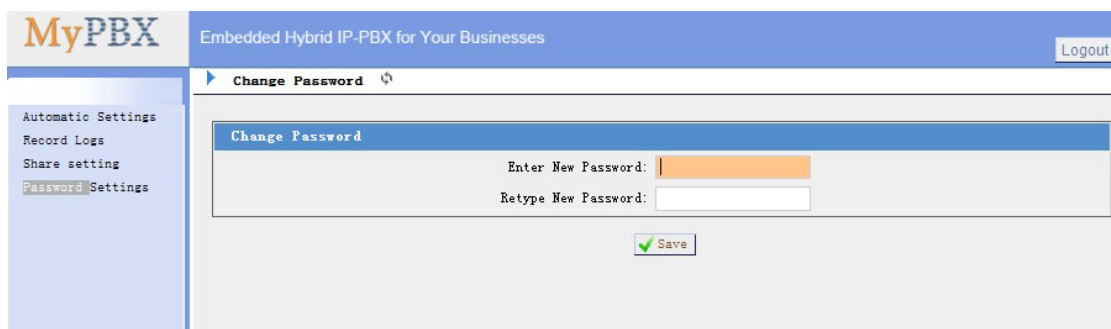


Figure J-7

APPENDIX K How To Install Hard Disk

In the event that users need to install hard disk by themselves which might happen when they buy the hard disk separately (Note: Hard Disk tested model: Seagate ST9500325AS, ST9500420AS, ST9320325AS), please do as the following steps:

1. Power off and unplug MyPBX Enterprise
2. Unscrew the upper case and open it by pulling in the direction of front panel.
3. Screw the hard disk to the bracket with 4 screws (see Figure J-2). Please kindly note that MyPBX Enterprise is packed with 8 screws and 2 brackets by factory default (see Figure J-1).



Figure K-1



Figure K-2

4. Locate the place for the hard disk on the mainboard and screw the brackets with another 4 screws. Then connect the power cord and data cable (see Figure J-3)

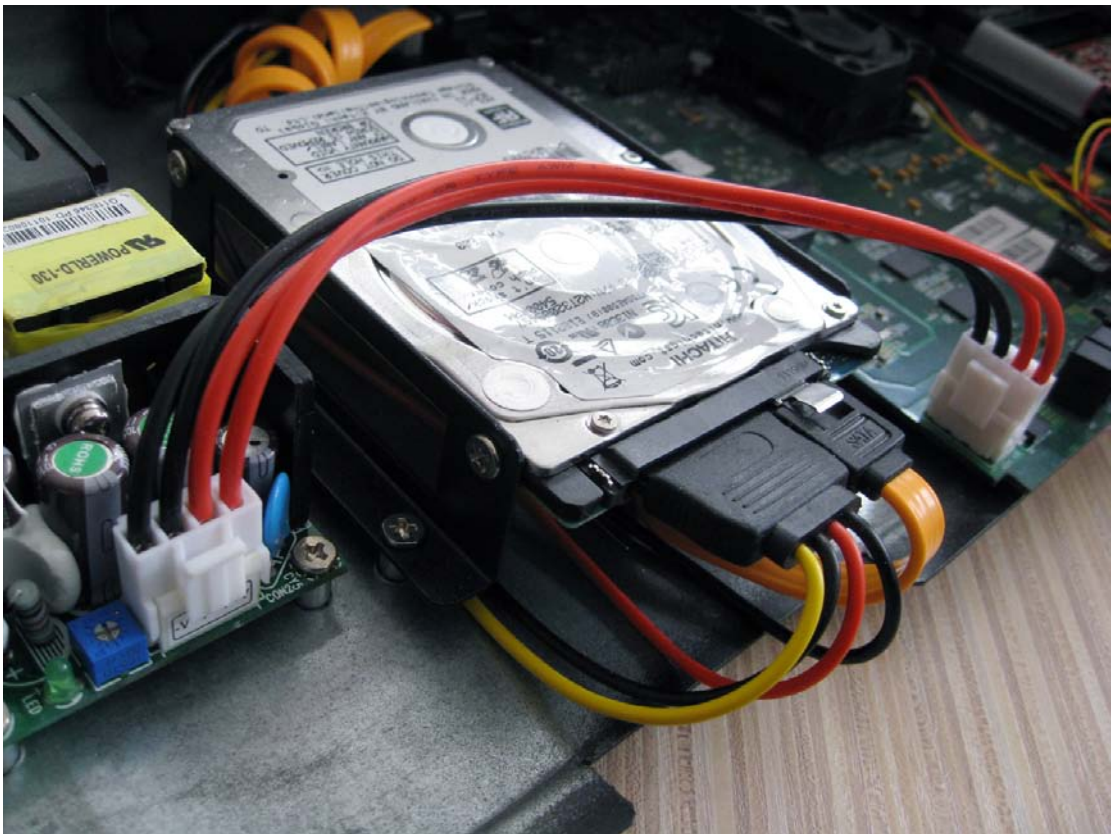


Figure K-3

5. Check if hard disk is successfully installed as Figure J-4



Figure K-4

6. Close the upper case and screw it.
7. Turn on the power.
8. Log on MyPBX Administrator webpage, go to 'System Settings->Storage Management'. The hard disk is installed successfully if you can see the hard disk info there. If not, please follow steps 1-7 to try again.

<Finish>